



**NEC**

NWA-039786-001

ISSUE 1.0

# ***UNIVERGE Terminal DT750***

---

## **USER'S GUIDE**

**NEC Infrontia Corporation  
2008 March**



## **LIABILITY DISCLAIMER**

NEC Infrontia Corporation reserves the right to change the specifications, functions, or features, at any time, without notice.

NEC Infrontia Corporation has prepared this document for use by its employees and customers. The information contained herein is the property of NEC Infrontia Corporation and shall not be reproduced without prior written approval from NEC Infrontia Corporation. All brand names and product names on this document are trademarks or registered trademarks of their respective companies.

Copyright 2008

**NEC Infrontia Corporation**





# TABLE OF CONTENTS

---

## 1.INTRODUCTION

.....	1
FACE LAYOUT.....	1
TECHINICAL SPECIFICATIONS .....	2
KEYS AND PARTS.....	3
MENU .....	6
DESSI-LESS DISPLAY .....	7
SOFT KEYS.....	10
ICON DISPLAY.....	14
SHORTCUT MENU .....	15

## 2.TERMINAL SETUP

SETUP WITH UP/DOWN KEY .....	16
SETUP WITH MENU KEY .....	17

## 3.BASIC OPERATION

TO LOGIN.....	72
TO LOGOUT.....	72
TO MAKE AN EXTERNAL CALL.....	73
TO MAKE AN INTERNAL CALL.....	74
TO ANSWER AN EXTERNAL CALL .....	75
TO ANSWER AN INTERNAL CALL .....	76
MULTILINE APPEARANCE .....	77
TO HOLD A CALL .....	78
TO PLACE A CALL ON EXCLUSIVE HOLD .....	79
TO TRANSFER A CALL .....	80
TO MAKE A CALL USING ONE-TOUCH SPEED CALLING KEYS.....	81
TO REGISTER NAME ON ONE-TOUCH SPEED CALLING KEY .....	83

## TABLE OF CONTENTS

---

TO MAKE A CALL USING SPEED CALLING (-STATION/GROUP)....	87
TO MAKE A CALL USING SPEED CALLING - SYSTEM .....	87
LAST NUMBER REDIAL .....	88
THREE-PARTY CONFERENCE .....	88
HOW TO INPUT CHARACTERS .....	90
SECURITY MODE.....	105
EMERGENCY CALL.....	107
PHONEBOOK.....	108
CALL HISTORY .....	120

### 4.DIRECTORY OPERATION

TO ADD NEW DATA .....	125
TO CHANGE GROUP NAME.....	132
TO FIND A REGISTERED DATA.....	134
TO MAKE A CALL FROM DIRECTORY .....	148
TO ADD PREFIX TO NUMBER.....	150
TO EDIT DIRECTORY DATA.....	153
TO DELETE ALL DATA.....	154
TO DELETE A SPECIFIC DATA .....	155

### 5.CALL HISTORY OPERATION

TO VIEW CALL HISTORY.....	158
TO MAKE A CALL FROM CALL HISTORY.....	159
TO ADD CALL HISTORY DATA TO DIRECTORY .....	161
TO EDIT DIRECTORY DATA FROM CALL HISTORY .....	164
TO DELETE ALL DATA.....	167
TO DELETE A SPECIFIC DATA .....	168

## TABLE OF CONTENTS

---

### **6.MENU LIST**


MENU LIST FOR DT750 .....	170
---------------------------	-----

### **7.ONLINE MONITORING**

# 1. INTRODUCTION

---

## FACE LAYOUT

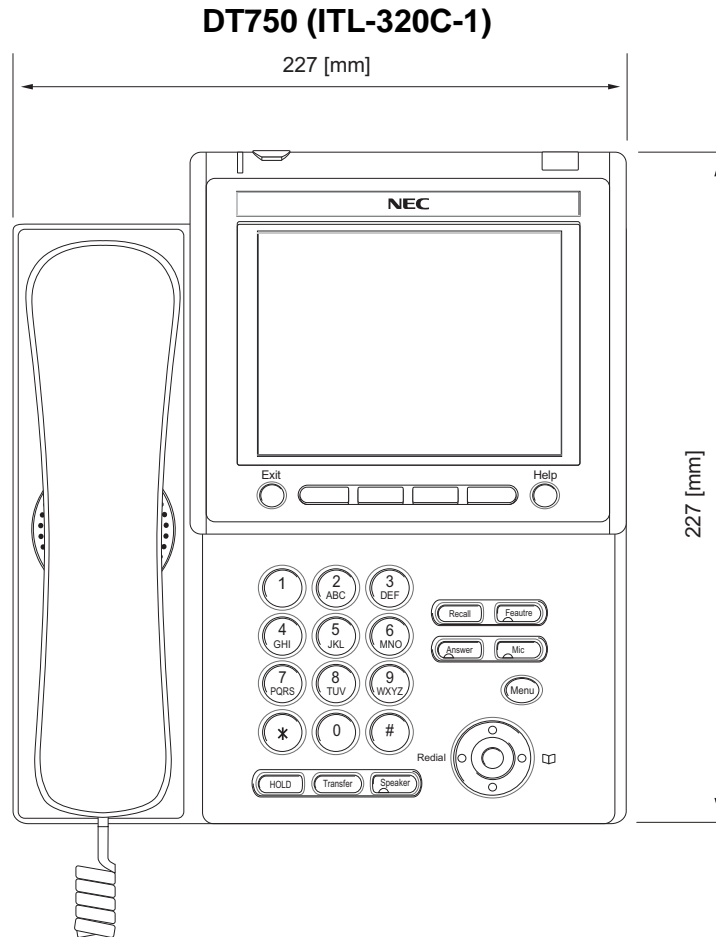


## TECHNICAL SPECIFICATIONS

ITEM	DT750 (ITL-320C-1)
Display (LCD)	5.7 inch TFT, QVGA, Touch Panel, with Backlight
Display Color	Color
Programmable Key	32 (8 X 4) Keys (displayed on LCD)
Fixed Feature Key	9 keys (with Menu/Cursor button)
backlight	Display and Digit Key (lit for 10 seconds when operating)
Soft Key	4 Keys
Directory	500 records
Call History	Outgoing Call: 50 record, Incoming Call: 50 records
XML Browser	Available
Hands-free	Standard equipment (Full-duplex), Wide-band
Headset	Available
LAN Interface	2-port, 10BASE-T/100BASE-TX, Full-duplex/Half-duplex, Auto Negotiation /Fixed
Voice CODEC	G.711, G.729a, G.722
IP Address Setting	Sets via DHCP server/Sets Directly
QoS	ToS (IP Precedence, Diffserv)
VLAN	Tag VLAN (IEEE802.1Q/p)
Security	IEEE802.1x authentication (EAP-MD5/EAP-TLS, EAPOL Forwarding), RTP Encryption, Auto Config Encryption
Power Supply	Center Power Supply = IEEE802.3af, Local Power Supply = AC adapter (AC-2R UNIT: optional)
Power Consumption	PoE=7.68 [W]/Local=6.96 [W]
Download	Program/Configuration data/Ringing Tone/Music on Hold/Directory data
Adapter (Optional)	Recording Unit/Wall-mounting kit/Digit-key Set Unit/Side panel
Color	Black/White
Dimension (W×D×H)	227(W) × 250(D) × 112(H) [mm]
Weight	1.6 kg

# KEYS AND PARTS

## • KEYS AND PARTS ON DT750

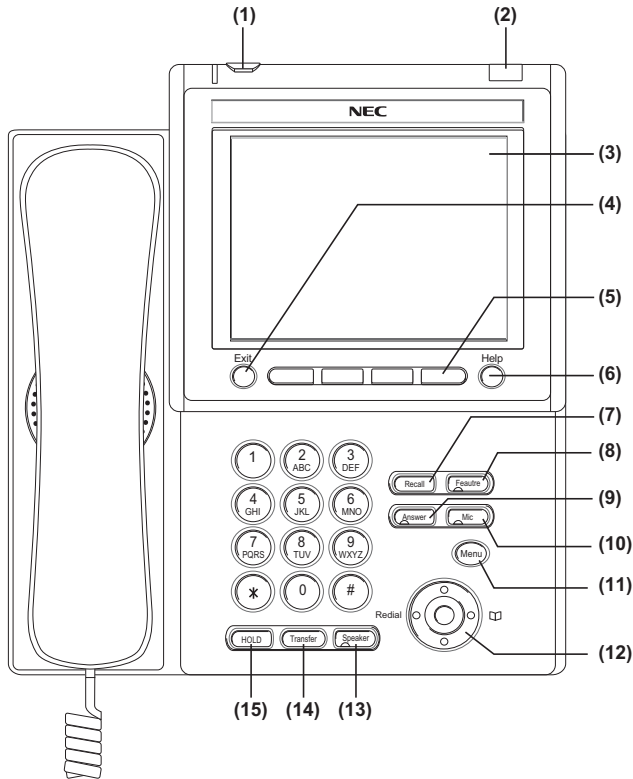

### (1) Security Button


The user can prevent information leakage from terminal by simple operation.

### (2) Call Indicator Lamp

Lamp at top corner of DT750 Display flashes when a call terminates to the terminal. Also, when using Voice Mail service, the Lamp lights steadily when a message has been left.

### (3) LCD

Color touch panel LCD (Liquid Crystal Display) provides DT750 activity information. Basically, the screen on the LCD consists of the following three information areas.

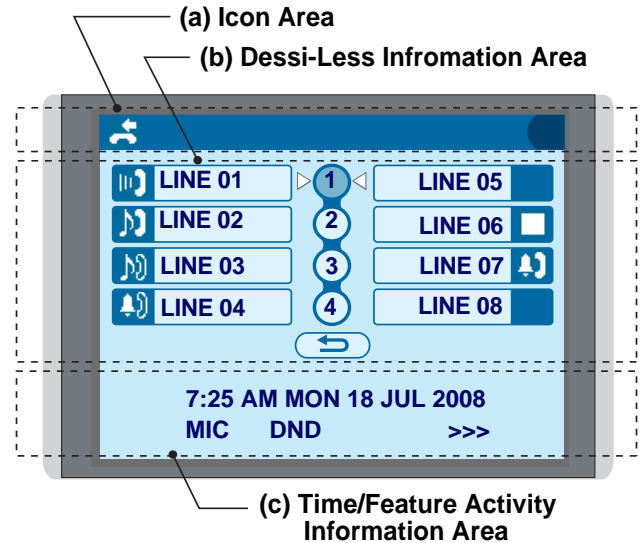

### (1) Icon Area

This area displays Desktop Icons which provide

notification when events (such as missed call and voice mail) occur.

#### **(b) Dessi-Less Information Area**

This area provides the information on 32 (8 keys x 4 pages) Programmable Line/Feature keys. For more details see [DESSI-LESS DISPLAY](#).

#### **(b) Time/Feature Activity Information Area (including Soft Key information)**

This area provides the current time display and information on various feature activities. Also, soft key information is displayed on the bottom line of this area.

#### **(4) Exit**

To exit from the Menu or Help mode and go back to the time display.

#### **(5) Soft Keys**

Any feature shown at the bottom of the LCD is available. The appropriate feature key is displayed on the screen according to the call handling process.

#### **(6) Help**

Explanations of the Soft Keys can be called up on the LCD by pressing this key.

#### **(7) Recall**

Press key to finish the call and hear the dial tone.

#### **(8) Feature**

Used to activate any features as terminal setup functions, etc. and to program One-Touch Speed Dial Keys.

#### **(9) Answer**

When LED on this key is lit, press key to answer a waiting call.

#### **(10) Mic**

Press key to respond hands free. LED on this key lights during speakerphone operation.


#### **(11) Menu**

To access the local menu of DT750, such as Call History, Directory or Terminal Setting.

#### **(12) Cursor**

By using this key, DT750 user can access to various features with simple operation.

#### **Details on Cursor key**

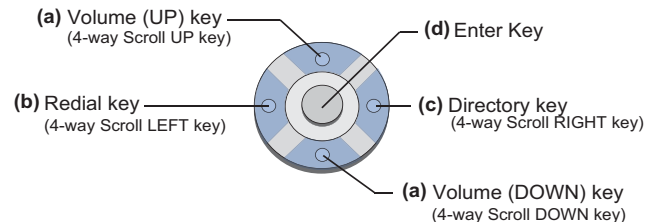

(∨ DOWN ^ UP)

Used to adjust LCD contrast, speaker/receiver volume, and ringer volume.

- LCD Contrast:  
Press (∨) or (^) key while idle.
- Speaker/Receiver Volume:  
Press (∨) or (^) key during conversation.
- Ringer Volume:  
Press (∨) or (^) key during ringing.

## (b) Redial

(Last Number Call, Speed Calling-Station/Group)

Press key to activate redial feature. Press redial and scroll back through numbers that have been dialed. When the desired number is displayed, press the ✕ or # key to activate dialing.

**Note:** *A-law Countries [Australia, Russia, Latin America, UK, Middle near East, other Asian nations]: #  
μ-law Countries [North America, Japan, Hong Kong, Taiwan]: ✕*



## (c) Directory




Pressing this key opens Directory menu. For details on Directory service, see [4.DIRECTORY OPERATION](#).

## (d) Enter

DT750 has shortcut menu for frequently-used features. Use this key to display the shortcut menu (see [SHORTCUT MENU](#)) and determine the selected item in the menu.

Also, this key is used as cursor-movement key on the local menu of the telephone.

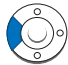	<b>UP</b>	Move the highlighted area one line up the screen.
	<b>DOWN</b>	Move the highlighted area one line down the screen.

	<b>LEFT</b>	Go back to the previous screen.
	<b>RIGHT</b>	Go to the screen corresponds to the highlighted menu item.
	<b>Enter</b>	Go to the screen corresponds to the highlighted menu item.

## (13)Speaker

Controls the built-in speaker which can be used for Hands Free dialing/monitoring.

LED on key lights when key is active.

\* All standard IP versions include support for full duplex hands-free mode. All TDM and IP enabled versions are half duplex hands-free mode.

## (14)Transfer

Allows the station user to transfer established calls to another station, without attendant assistance.

## (15)Hold

Press this key to place an internal or external call on hold.



# MENU

From the **Menu** Key, the user can use various application features such as Directory and Call History.

## To Display Menu List

- Press **Menu** key while indicating the current time on LCD. The Menu List is displayed in LCD. Use Cursor Key to select desired Menu Item.

**Note:** *The user can also navigate through the menu with touch panel operation.*

**Main Menu**



MENU ITEM	DESCRIPTION
<b>1</b> History	To view Call History. There are two types of Call History features. On the one hand, the history data is stored in the server (system) memory (see <a href="#">CALL HISTORY</a> ). On the other hand, the history data is stored in the memory of the telephone (see <a href="#">5.CALL HISTORY OPERATION</a> ).


MENU ITEM	DESCRIPTION
<b>2</b> Directory	To use Directory features. There are the following three types of directory features. <ul style="list-style-type: none"> <li>• Personal Directory: Controlled by telephone set. For details, see <a href="#">4.DIRECTORY OPERATION</a>.</li> <li>• Phonebook: Controlled by the system. For details, see <a href="#">PHONEBOOK</a>.</li> <li>• Corporate Directory: Controlled by the external XML server. <u>For details, please contact the system administrator.</u></li> </ul>
<b>3</b> Tool	- Uses when accessing external XML server. <u>For details, please contact the system administrator.</u> - Uses when sending/receiving Instant Message (Not used).
<b>4</b> Call Function	Currently Not Used (grayed out).
<b>5</b> Setting	To make the setting of DT750 (such as ringing volume control, LCD display setting and download of Music on Hold). For details, see <a href="#">SETUP WITH MENU KEY</a> .
<b>6</b> Presence	Currently Not Used (grayed out).
<b>#</b> Favorite	Currently Not Used (grayed out).
<b>0</b> Config	This item is used for Configuration setting of DT750. <u>For details, please contact the system administrator.</u>

## DESSI-LESS DISPLAY

Dessi-less display service provides 32 (8 keys x 4 pages) Programmable Line/Feature keys. Information set to each Programmable Line/Feature key can be displayed on the LCD. Also, the current status of the line/feature set to each programmable key is displayed as icon. For the setting of the programmable key, contact Telephony Server Administrator.

When Telephony Server Administrator sets “One-Touch Speed Dial key” on the programmable key, users can assign a telephone number or station number to a key so that you can make a call to that number with one-touch operation.

The following shows an example of Dessi-less display.

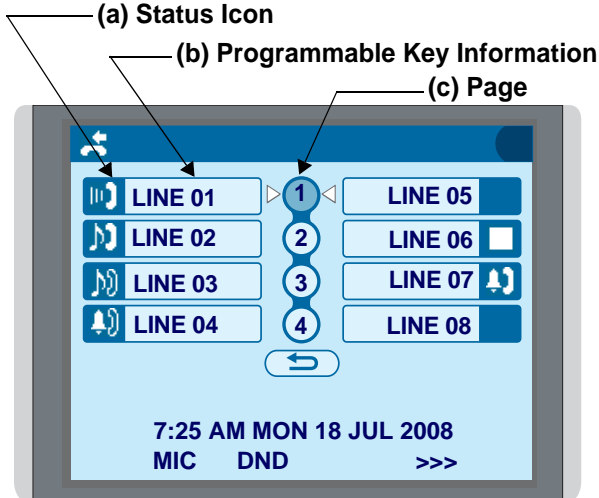

## (a) Status Icon

Status information on the Line key such as call termination, Call Hold or Busy can be indicated as following Icons.

USER'S STATUS	ICON	FLASHIN PATTERN
• Idle	No Icon	
• Call Hold (Individual Hold/Individual Hold on Call Park Group)		Blink (The icon will blink per one second cycle.)
• Call Hold (Other Party Hold/Other Party Hold on Call Park Group)		
• Recall (Individual Hold/Exclusive Call Hold/Call Transfer/Individual Hold on Call Park Group)		
• Recall (Other Party Hold/Other Party Hold on Call Park Group)		
• Incoming Call		
• During Conversation (Individual Use)		Steady Lit
• Call Transfer		
• Conference		
• During Conversation (Other Party Use)		
• Active Feature (Under a setting of feature key like a "Call Forwarding")		

### (b) Programmable Key Information

Programmable Key Information is displayed as follows:

KEY	DESCRIPTION	NUMBER OF DIGITS
Line Key	- Name and Number information	8 digits.
One-Touch Speed Dial Key	- Speed Dial Name Information - Number Information	8 digits.
Feature Key	- Feature Name	6 difits.

The following shows an example of LCD display when a line is assigned to a Programmable Key. Appropriate status icons are displayed. These displays cannot be changed by the user.



OR



The following shows an example of LCD display when a feature is assigned to a Programmable Key.



The following shows an example of LCD display when One -Touch Speed Dial Key is assigned to a Programmable Key. For One -Touch Speed Dial Key, No status icon is displayed.

\* Users can register name on each One-Touch Speed Dial key.



OR




**(c) Page Icon**


Dessi-less display has four pages (8 programmable keys per page). Page key indicates currently displayed page. The user can switch the programmable key display from page 1 to 4 by touch panel operation.

STATUS OF PAGE ICON	DESCRIPTION
Steady Lit	Indicates currently displayed page.
Blink	Indicates page with event happening.

**Example of Page Switching Form Page 1 to 3**

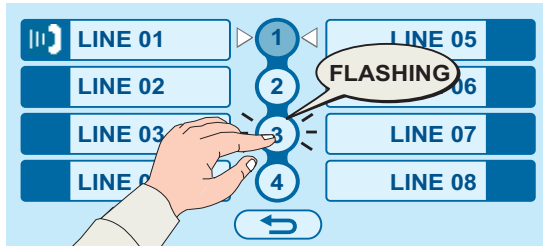


Touch flashing button to go to Page 3. Switch from PAGE 1 to PAGE 3

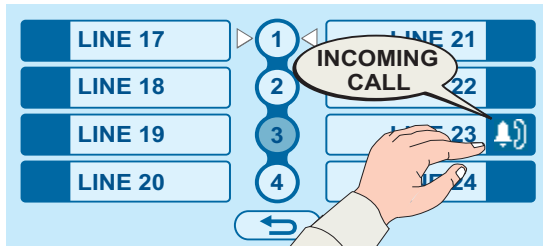

Touch this Line Key to answer Incoming Call.

## SOFT KEYS

The Soft Keys on DT750 provide a set of functions on the LCD that adapts to the changing state of the telephone. While default Soft Key settings are provided, desired functions can be assigned to individual stations as required. The Soft Keys, at the bottom of the LCD, can display the names of available functions, names of user-assigned functions and names of functions assigned by a specific Soft Key pattern. Displayed Soft Keys can vary, depending on the state of the phone and/or when the Next/Previous button is pressed.

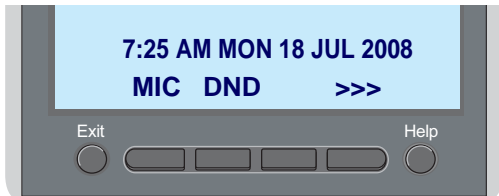

### Exit Key

Press to exit from the Menu or Help mode and go back to the time display.

### Help Key

Press the Help Key, then desired Soft Key for helpful information about that key.

### MIC (Microphone)

Press the Soft Key below "MIC" to activate or deactivate the Microphone. LED on Mic key will illuminate when Mic is on.

### DND (Do Not Disturb)

Press the Soft Key to reject call termination to the preassigned station.

## Default Displays for Each Status

Default Soft Key settings are provided corresponding to particular functions. Different Soft Key settings are displayed at the bottom of the LCD depending on the status, as shown below.

Different patterns of Soft Key settings can be registered for individual call status and assigned to individual terminals as required.

### IDLE



 
### DIAL TONE/DIALING

- (1) 4:26 PM TUE 13 APR 2004  
MIC PICK FDA >>>

Push >>>

- (2) 4:26 PM TUE 13 APR 2004  
FDN FDB >>>

### RINGING



BUSY

(1) **BUSY** 2000  
4:26 PM TUE 13 APR 2004  
MIC CB CW >>>

Push >>>

(2) **BUSY** 2000  
4:26 PM TUE 13 APR 2004  
S&R >>>

CONNECTION

2000  
4:26 PM TUE 13 APR 2004  
MIC DND >>>

CONSULTATION HOLD

**TRANSFER** 2000  
4:26 PM TUE 13 APR 2004  
MIC CONF >>>

## Soft Key Features

When the Soft Key corresponding to a desired feature name is operated, the selected feature name starts to blink on the LCD. The blinking display of available features takes precedence over the display of features specified by the Soft Key pattern.

**Note:** *The Soft Keys can be programmed in System Data to blink, remain steady, have no indication, or display a character when either in use or idle.*

The following shows the default display patterns of main features.

### FDB (Call Forwarding - Busy Line)

Permits a call to a busy station to be immediately forwarded to a predesignated station.

### FDA (Call Forwarding - All Calls)

Permits all calls designated for a particular station to be routed to another station regardless of the busy or idle status of the called station.

### FDL (Logged Out IP Station - Call Destination)

Enables a system to transfer the call to appropriate station when Dterm whose LOGGED OUT IP STATION - CALL DESTINATION has already been registered is in logout status.

### E-OVR (Executive Override)

Enables selected station users, upon encountering a busy condition at an internal station, to bridge into the busy connection.

### CW (Call Waiting)

Enables a busy station to receive a second incoming call. A camp-on indication tone is sent to the busy station, and the user can use a switchhook flash to answer the second call.

### CB (Call Back)

Provides the ability for a calling station to set a CALL BACK. The calling station will be rung as soon as the busy station becomes available.

### S&R (Save and Repeat)

Allows a station to save a specific dialed number and then redial that number later.

**MWSET (Message Waiting - Set)**

Allows a station to set a Message Waiting indication or lamp.

**HOLD (Call Hold)**

Permits a station user to hold a call in progress and to return to the previously held call.

**MWOFF (Message Waiting - Cancel)**

Allows a station to cancel a Message Waiting indication or lamp.

**PICK (Call Pickup - Group)**

Permits a station user to answer any calls directed to other lines in the user's preset Call Pickup Group.

**CONF (Three-way Calling)**

Enables a station user to establish a three-way conference by connecting an additional party to an already existing conversation.

**VOICE (Voice Call)**

Enables the user to make a call to the called party's built-in speaker. If the called party's MIC is on, the called party can converse on hands-free.

**S-SPD (Speed Calling - System)**

Allows a station user to call certain frequently dialed numbers using fewer digits (abbreviated call codes) than would normally be required.

**CAS (CAS-Switch Hook Flash)**

Allows the user to send a switchhook flash while on an outside trunk.

**UCDBO (UCD Busy Out)**

Allows a station user to block UCD calls and to cancel

Busy Out.

**FLASH (Flash)**

Provides the station with a switchhook flash.

**FDN (Call Forward - No Answer)**

Permits a call to an unanswered station to be forwarded to a predesignated station if the called station does not answer within a predetermined period of time.

**C-RPT (ISDN Malicious Call Trace)**

Allows the user to initiate a Call Trace on ISDN calls only.

**G-SPD (Speed Calling - Group)**

Allows a station user to share a set of common Speed Calling numbers with other station users in the group.

**P-RLS (Privacy Release)**

Allows another station to depress a busy line button and enter the conversation of a station already engaged in communication.

**DND (Do Not Disturb)**

Allows a station user to deny access to the station line for incoming calls.

**MIC (Microphone On/Off)**

Allows the user to turn the microphone on and off for use with the speakerphone.

**PAGE (Button Page)**

Allows the user to toggle between pages when two numbers are registered on One-Touch Speed Calling key.

**HSET (Headset)**

Allows the user to go off- and on-hook when using the

headset.

**RLS (Release Key)**

Allows the user to release the current call when using the headset, without waiting for the party to hang up.

**SIG (Manual Signaling)**

Permits station users to send a one-second ring to a predetermined station. If the signaled station is ringing from another call, the manual intercom signal will interrupt that ringing.

**CKEEP (Eight-Party Conference Retrain)**

Allows all outside parties to stay on a conference when all internal parties hang up.

**SCALL (Serial Call)**

Allows the user to set Serial Call for the caller before extending the call, allowing the caller to receive an announcement at the end of the call guiding the caller to dial the next number and subsequent numbers.

**IZP (Internal Zone Paging)**

Allows a user to make a voice call through the speakers of the designated group.

**IDCHG (Call ID Change Display)**

Allows the user to toggle between standard display and an alternate display.

**GPICK (Call Pickup - Group Enhancement)**

Allows the user to answer any ringing station within the user's expanded call pickup group.

**CHCNF (Call Hold - Conference)**

Allows a station user to establish a conference connection by adding a third party, who is held on

another line, to the existing two-party connection.

**VISIT (Survivable Remote MGC)**

Allows a station to indicate a status: when a user is in remote office, VISIT will be blinking. After recovering the main office, VISIT will return to light.

**RMUTE (Ringer Mute)**

Allows a station user to mute or recover station ringing.

**>>> (Display Function Next Page)**

Allows the user to scroll to the next screen.

**<<< (Display Function Previous Page)**

Allows the user to scroll to the previous screen.




## ICON DISPLAY

The LCD of DT750 displays Desktop Icons which provide notification when events (such as missed call and voice mail) occur.

### In Case Of Icon Screen


Icon Display Area

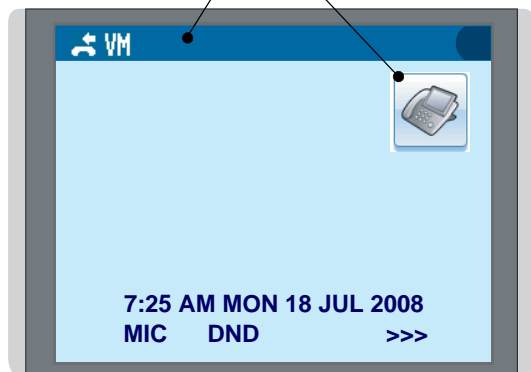


Click this icon to go to Dessi-Less Screen



### In Case Of Dessi-Less Screen

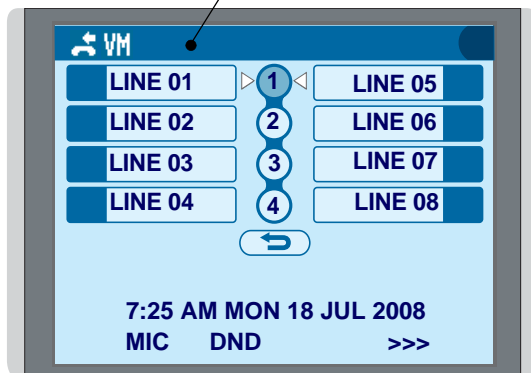
Icon Display Area




FEATURE	ICON	DESCRIPTION
Missed Call		This icon appears when there is a missed call. Once the user has checked the missed call, this icon will disappear.
Voice Mail		This icon provides notification of incoming Voice Mail. Once the user has checked the mail, this icon will disappear.
Cursor		This icon indicates the currently available direction of the Cursor key. This icon is displayed in the Menu.

**Note:** At the default setting, Dessi-Less screen is displayed when the telephone is in idle status.

## SHORTCUT MENU

As shown in the figure below, DT750 has Shortcut Menu for frequently-used features. The user can access to Shortcut Menu by pressing  (Enter) key.

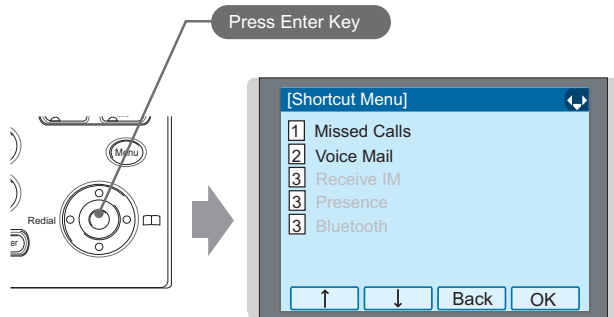

Shortcut Menu includes the following features.

**Note:** *Unavailable Menu items are grayed out.*

### Shortcut Menu

FEATURE	DESCRIPTION
<b>1</b> Missed Calls	Access to history of Missed Call.
<b>2</b> Voice Mail	Access to history of incoming Voice Mail.
<b>3</b> IM	Currently Not Used (grayed out).
<b>4</b> Presence	Currently Not Used (grayed out).
<b>5</b> Bluetooth	Currently Not Used (grayed out).


# 2. TERMINAL SETUP

This chapter describes operating procedures for terminal settings. Various terminal settings such as display, sounds, password, and language are available.

## SETUP WITH UP/DOWN KEY


- **TO ADJUST HANDSET RECEIVER VOLUME**

Press **Up/Down Cursor** key in the off-hook status or during the call.

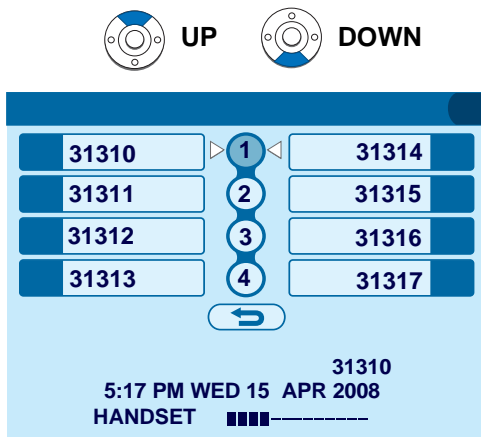


- **TO ADJUST SPEAKER VOLUME**

Press **Up/Down Cursor** key during speakerphone operation or during the call.

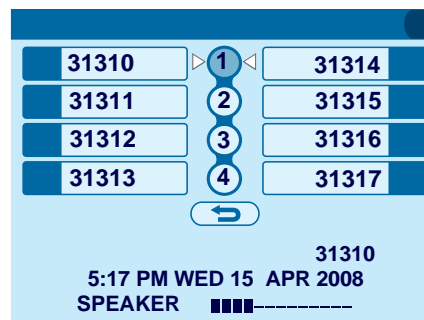

- **TO ADJUST RINGER TONE**


Press **Up/Down Cursor** key during ringing.

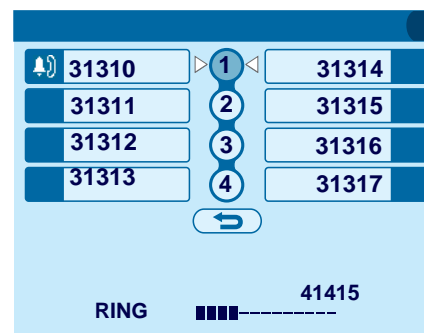

## SETUP WITH MENU KEY


**Note:** On the Menu, use  or  $\uparrow/\downarrow$  soft key to move the cursor up/down a line.

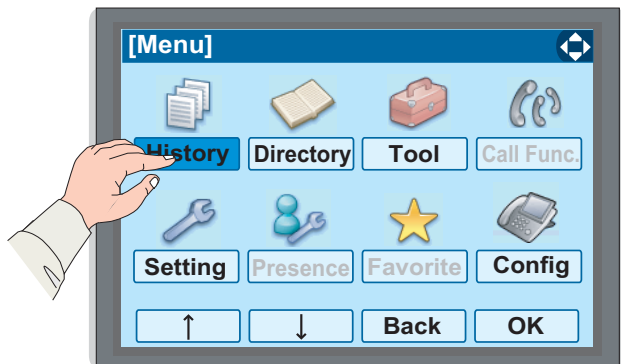

**Note:** The user can also navigate through the menu with touch panel operation.








### • TO ENABLE/DISABLE OFF-HOOK RINGING


The procedure below shows how to enable/disable Off-hook ringing.

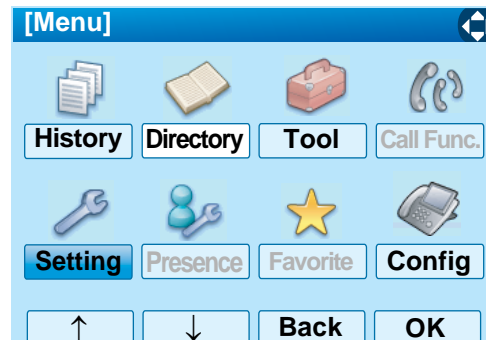



- While indicating the current time on LCD, press  key to open the **Menu** screen.


Select **Setting** and then press  (Enter) or **OK** soft key. (or press  key.)

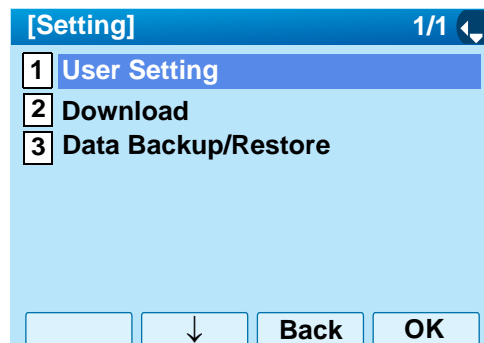


- Select  **User Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press  key.)

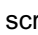

- Select  **Incoming Call** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press  key.)

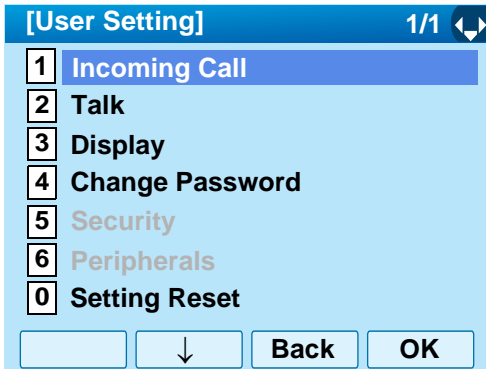


- Select **2 Offhook Ring** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **2** key.)

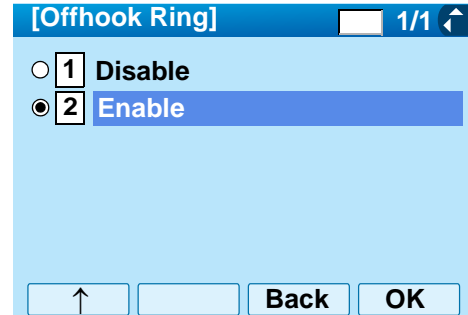

**Note:** Default setting is **2 Enable**.

**Note:** The currently enabled item is highlighted.

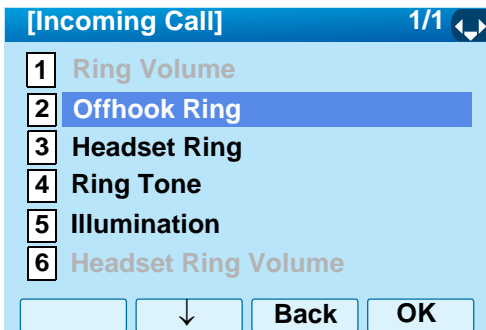


- To disable/enable the off-hook ringing, select **1 Disable** or **2 Enable**. Then, press (Enter) or **OK** soft key.

- **TO SET RINGING OF HEADSET**


The procedure below shows how to enable/disable the ringing of headset.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

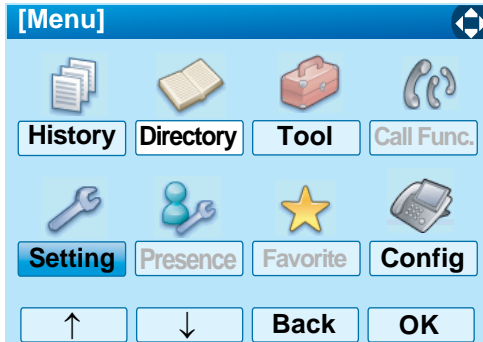


- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

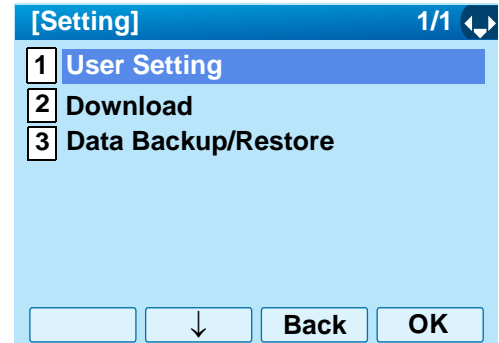


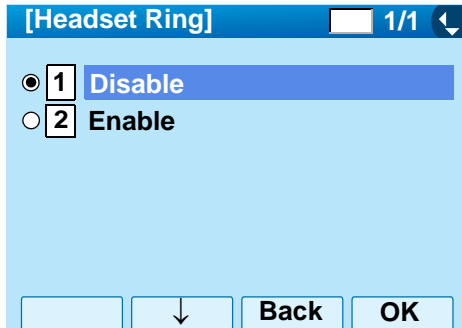
- Select **1 Incoming Call** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

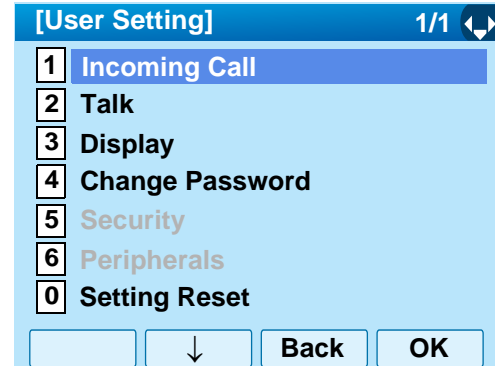

- Select **3 Headset Ring** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **3** key.)

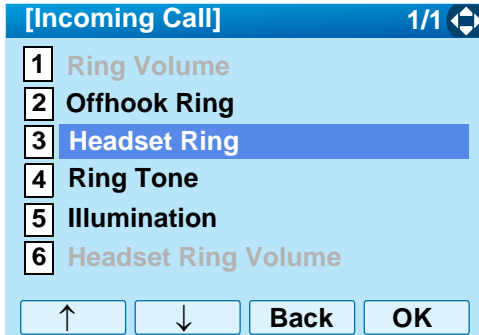

- To disable/enable the ringing of headset, select **1 Disable** or **2 Enable**. Then, press  (Enter) or **OK** soft key.



**Note:** *Default setting is 1 Disable.*


**Note:** *The currently enabled item is highlighted.*

## • TO SET RINGER TONE


The procedure below shows how to change the ringer tone for internal call and external call.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

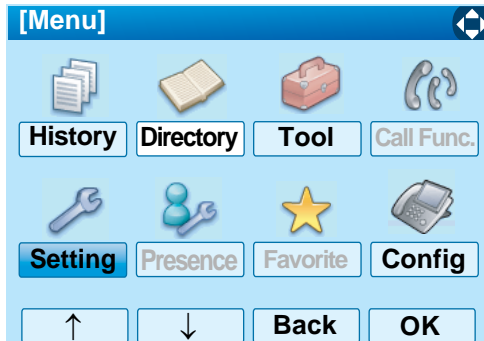

- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

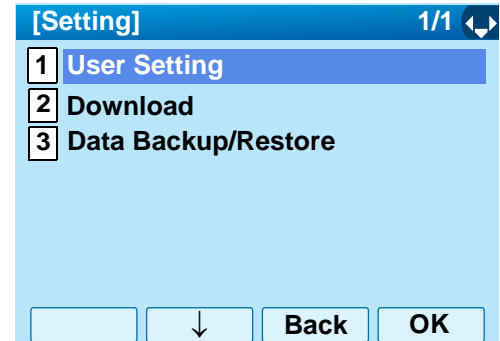


- Select **1 Incoming Call** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

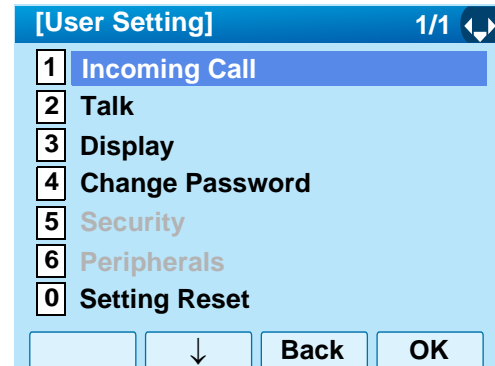


- Select **4 Ring Tone** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **4** key.)



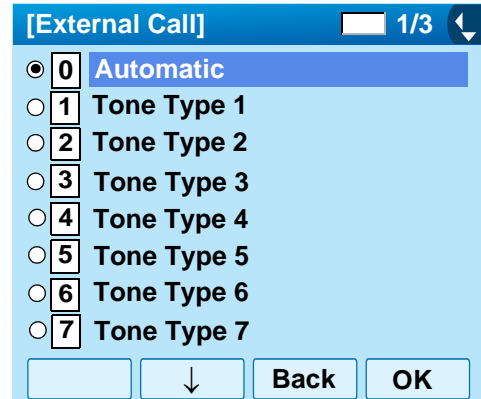

- Select **1 External Call** when setting the ringer tone for external calls. Select **2 Internal Call** when setting the ringer tone for internal call. Then, press (Enter) or **OK** soft key.

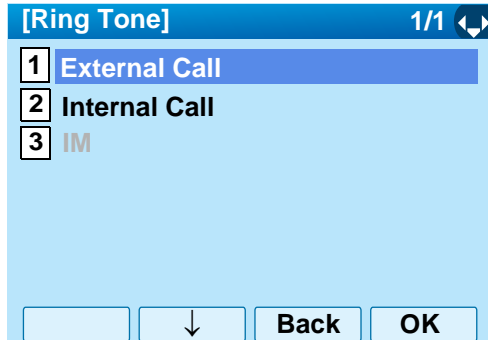

- Select a desired tone type and then press (Enter) or **OK** soft key.

**Note:** *The currently enabled item is highlighted.*

No.	Menu Item	Frequency (Hz)		Remarks
		1st	2nd	
0	Automatic	520	660	16Hz modulation
1	Tone Type1	520	660	16Hz modulation
2	Tone Type2	520	660	8Hz modulation
3	Tone Type3	1400	1100	Door Phone
4	Tone Type4	1100		No modulation
5	Tone Type5	540		No modulation
6	Tone Type6	1100	1400	16Hz modulation
7	Tone Type7	660	760	16Hz modulation
8	Tone Type8	1100		Envelope
9	Tone Type9	-		Door Phone Melody
10	Tone Type10	-		Melody 1
11	Tone Type11	-		Melody 2
12	Tone Type12	-		Melody 3
13	Tone Type13	-		Melody 4

No.	Menu Item	Frequency (Hz)		Remarks
		1st	2nd	
14	Tone Type14	-	-	Melody 5
15	Download1	-	-	
16	Download2	-	-	
17	Download3	-	-	

**Note:** *The user can set ringer tone for the telephone set here. Ringer Tone type can be set for "Name", "Group" and "Telephone set". The ringer Tone type set for "Name" has higher priority than the types set for "Group" and "Terminal set".*


**Note:** *When **0 Automatic** is selected or the ringer tone setting is not performed, **1 Tone Type1** is applied.*

- **TO SET ILLUMINATION PATTERN FOR CALL INDICATION LAMP**


The procedure below shows how to set the illumination pattern for the Call Indicator Lamp.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

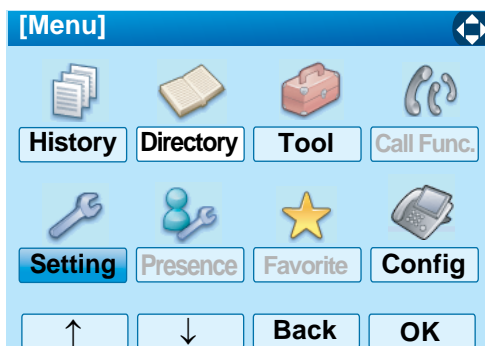

- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

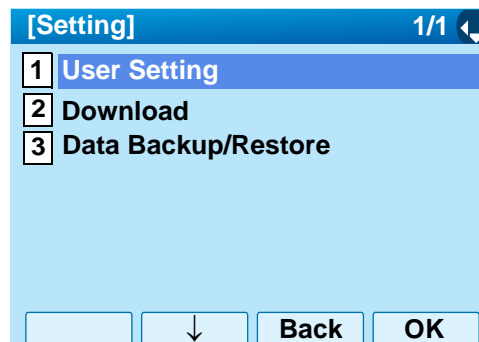


- Select **1 Incoming Call** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

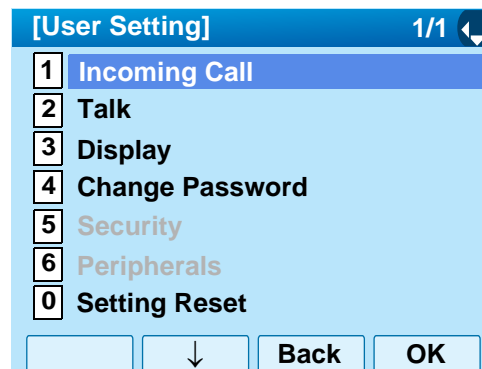


- Select **5 Illumination** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **5** key.)




- Select **1 External Call** when setting the illumination pattern for external calls. Select **2 Internal Call** when setting the illumination pattern for internal call. Then, press  (Enter) or **OK** soft key.

**Note:** *The default setting is 0 Automatic.*

**Note:** *The currently enabled item is highlighted.*

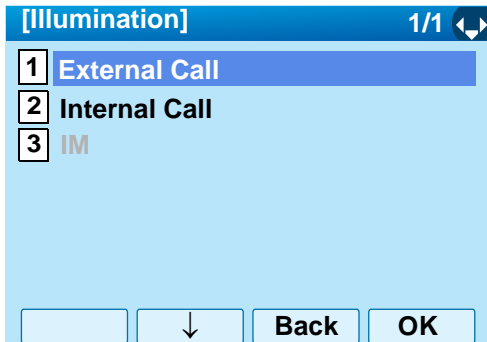


- Select a desired illumination pattern and then press  (Enter) or **OK** soft key.

## • TO ENABLE/DISABLE RTP ALARM


The procedure below shows how to enable/disable RTP alarm.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

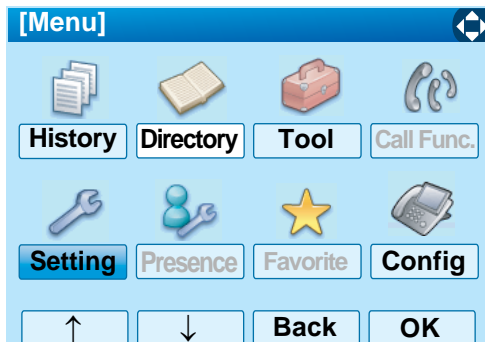

- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

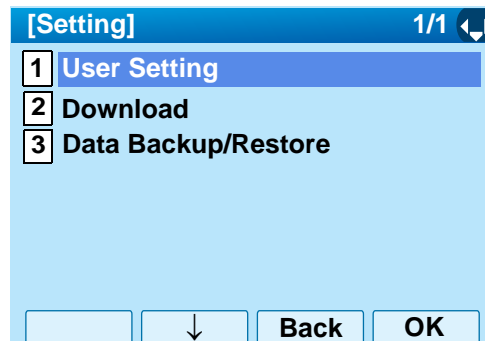

- Select **2 Talk** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

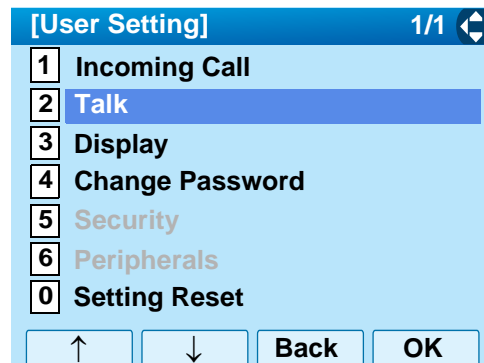


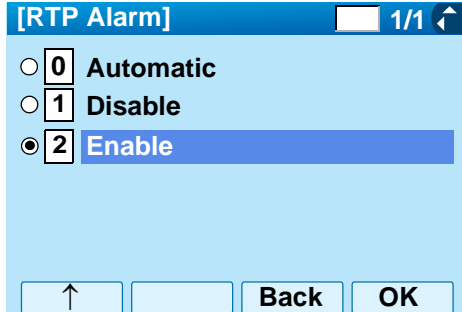
- Select **1 RTP Alarm** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)



**Note:** For the setting on the System, contact to the System Administrator.

**Note:** The currently enabled item is highlighted.

- Select **0 Automatic**, **1 Disable** or **2 Enable** (see the following table). Then, press  (Enter) or **OK** soft key.




Menu Items	Descriptions
0 Automatic	Follow the setting on the System. If no setting is made in the System, the default setting (Alarm=ON) is applied.
1 Disable	Follow the setting on the terminal (OFF).
2 Enable	Follow the setting on the terminal (ON).

- **TO ENABLE/DISABLE DTMF TONE**


The procedure below shows how to enable/disable RTP alarm.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

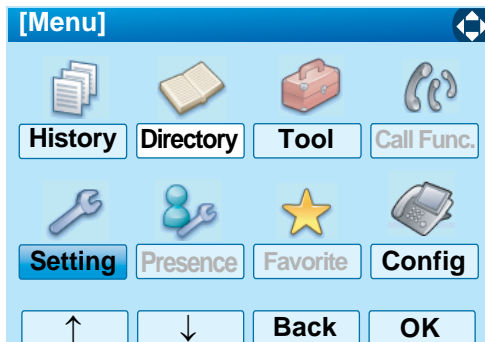

- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

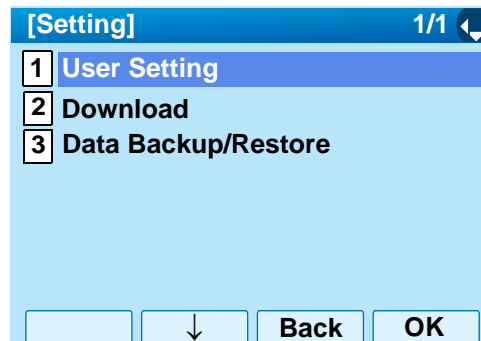

- Select **2 Talk** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

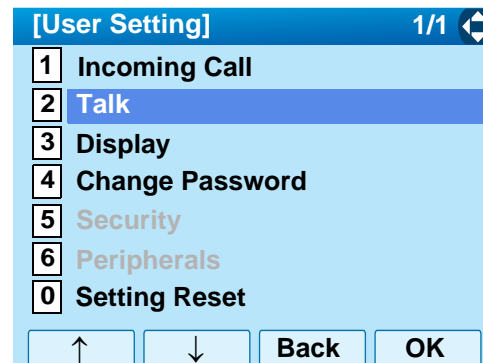


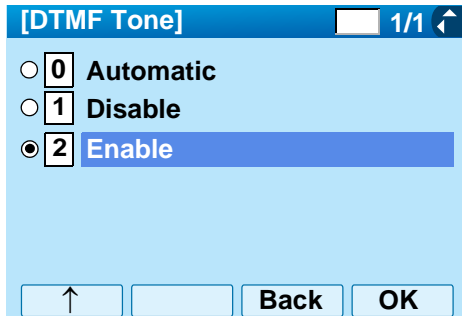
- Select **2 DTMF Tone** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)



**Note:** For the setting on the System, contact to the System Administrator.

**Note:** The currently enabled item is highlighted.

Select **0 Automatic**, **1 Disable** or **2 Enable** (see the following table). Then, press  (Enter) or **OK** soft key.




Menu Items	Descriptions
0 Automatic	Follow the setting on the System. If no setting is made in the System, the default setting (DTMF=ON) is applied.
1 Disable	Follow the setting on the terminal (OFF).
2 Enable	Follow the setting on the terminal (ON).






## • TO SET KEY TOUCH


The procedure below shows how to set Key Touch Tone. Key Touch Tone is a tone generated when the digit keys are pressed while DT750 is off-hook.

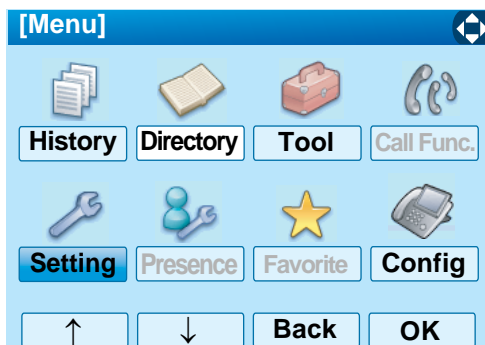

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press  (Enter) or **OK** soft key. (or press **5** key.)

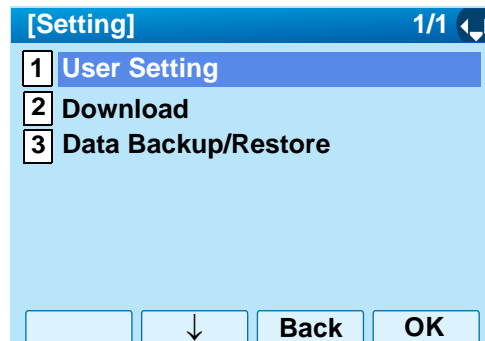

- Select **1 User Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



- Select **2 Talk** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **2** key.)

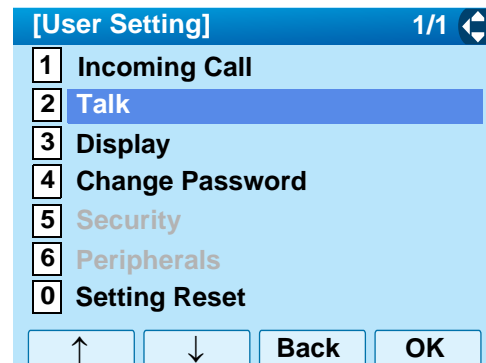

- Select **3 Key Touch Tone** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)



- Select **0 Automatic**, **1 No Tone**, **2 Tone** or **3 Voice**. Then, press  (Enter) or **OK** soft key.



**Note:** When **0 Automatic** is set, the default setting (Tone) is applied.


**Note:** The currently enabled item is highlighted.

## • TO SET MUSIC ON HOLD


The procedure below shows how to set Music on Hold to be heard by DT750 user.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

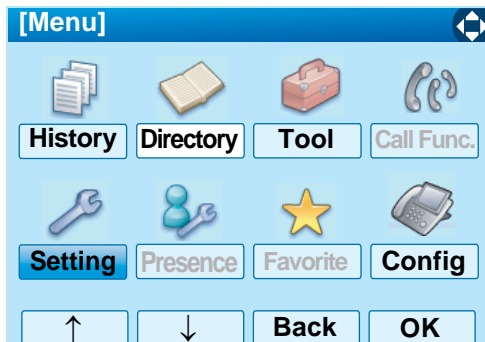

- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

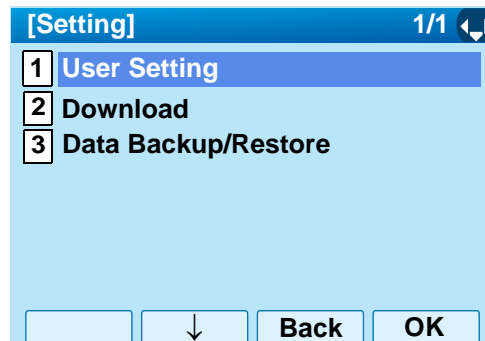


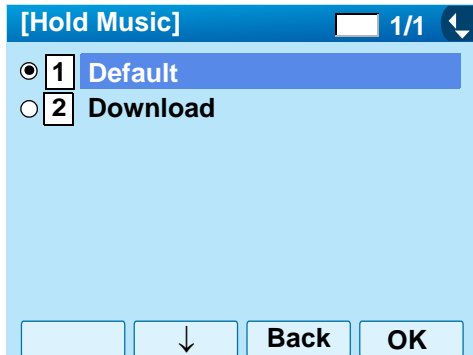
- Select **2 Talk** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

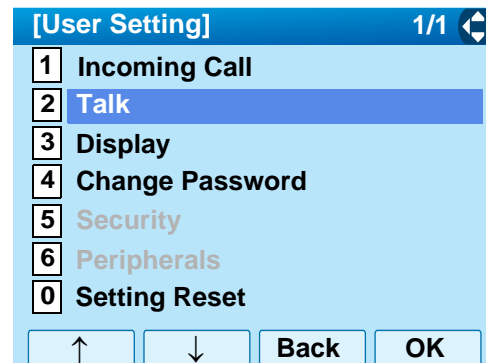

- Select **4 Hold Music** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **4** key.)



- Select **1 Default** when the default data (Menuet) is used as Music on Hold. Select **2 Download** when a downloaded data is used as Music on Hold. Then, press  (Enter) or **OK** soft key.



**Note:** *The currently enabled item is highlighted.*


## • TO SET CLOCK FORMAT

Determines whether time is displayed with a 12-hour or 24-hour clock format.


**Note:** *This setting is available for Time Display only. Call Log feature displays the time in 24-hour format regardless of this setting.*

- While indicating the current time on LCD, press **(Menu)** key to open the **Menu** screen.


Select **Setting** and then press **(Enter)** or **OK** soft key. (or press **(5)** key.)

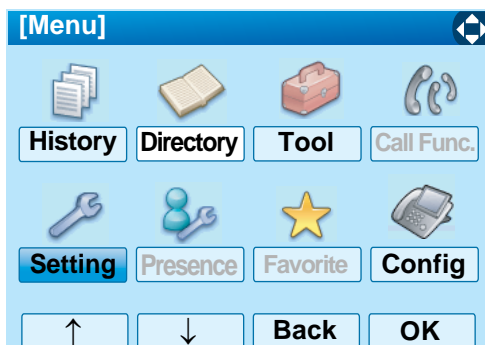



- Select **(1)** **User Setting** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(1)** key.)

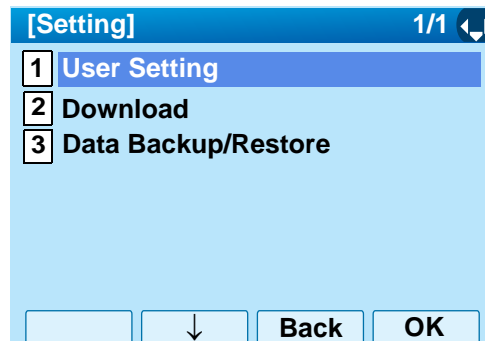

- Select **(3)** **Display** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(3)** key.)

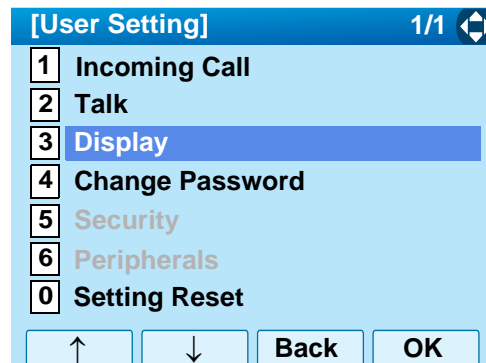

- Select **(1)** **Time Format** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(1)** key.)

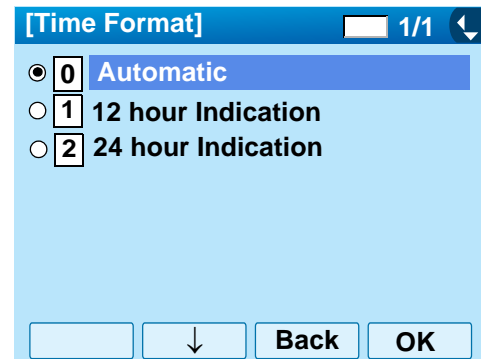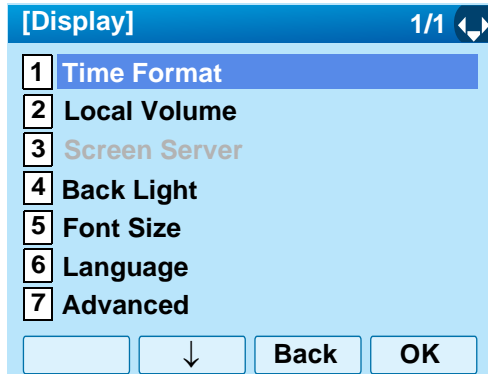


Make a selection from the following list.

Menu Item	Meaning
0 Automatic	Follow the setting on the system. (default)
1 12 hour Indication	12-hour clock
2 24 hour Indication	24-hour clock

**Note:** For the setting on the System, contact to the System Administrator.

**Note:** The currently enabled item is highlighted.


After Making a selection, press  (Enter) or **OK** soft key.

- **TO ENABLE/DISABLE VOLUME LEVEL DISPLAY**


Determines whether or not to display the following volume levels: handset receiver volume, speaker volume, ringer tone volume and LCD contrast.

- While indicating the current time on LCD, press **(Menu)** key to open the **Menu** screen.


Select **Setting** and then press **(Enter)** or **OK** soft key. (or press **(5)** key.)

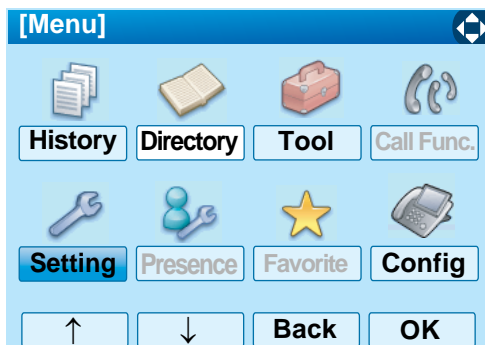



- Select **(1)** **User Setting** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(1)** key.)

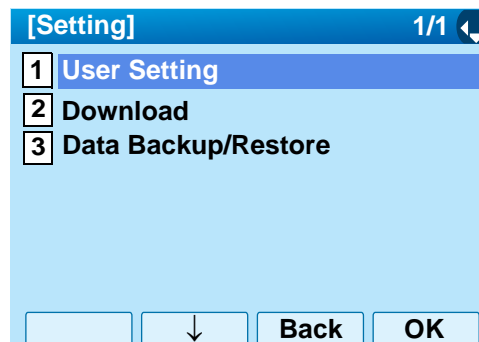

- Select **(3)** **Display** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(3)** key.)

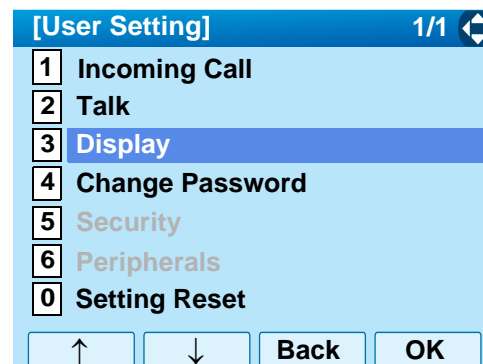


- Select **(2)** **Local Volume** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(2)** key.)

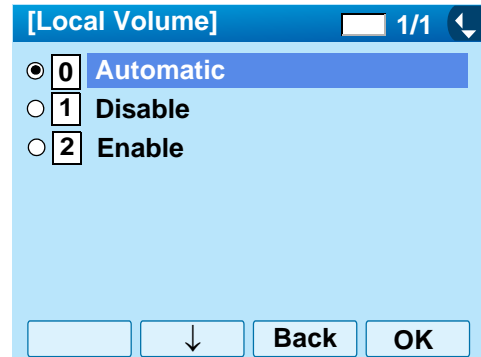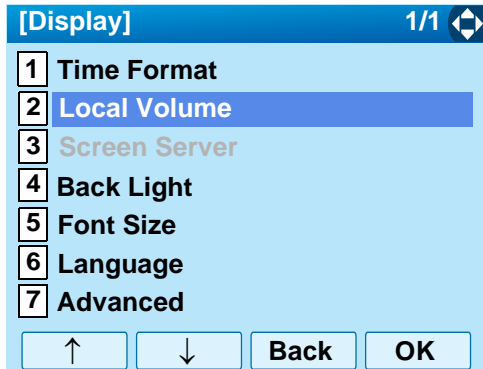

Make a selection from the following list.

Menu Item	Meaning
0 Automatic	Each volume level is displayed on LCD (default).
1 Disable	Each volume level is not displayed on LCD.
2 Enable	Each volume level is displayed on LCD.

**Note:** *The currently enabled item is highlighted.*


After Making a selection, press  (Enter) or **OK** soft key.






## • TO SET BRIGHTNESS OF BACKLIGHT


The following explains how to set the brightness level of the LCD backlight.

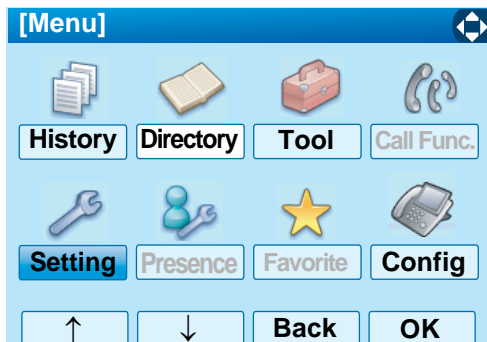

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press  (Enter) or **OK** soft key. (or press **5** key.)



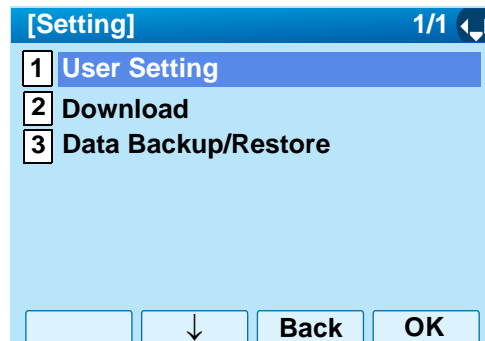


- Select **1 User Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

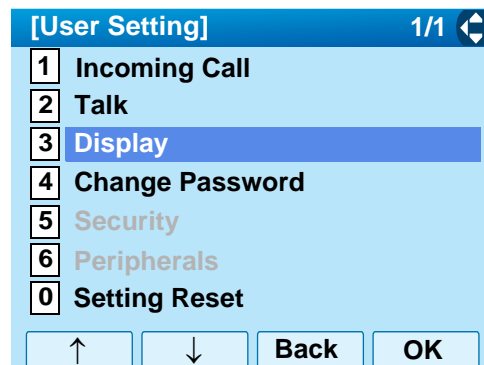

- Select **3 Display** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)




- Select **4 Back Light** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **4** key.)

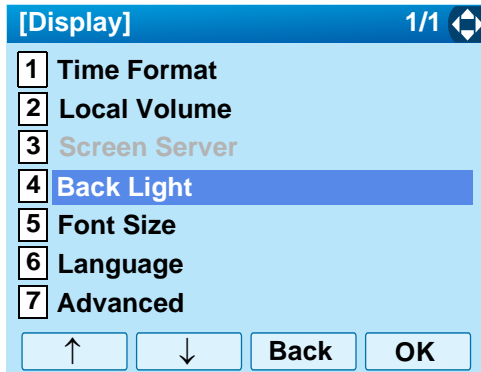

Select a desired brightness level (default: Level 2).

**Note:** *The currently enabled item is highlighted.*




After Making a selection, press  (Enter) or **OK** soft key.

## • TO CHANGE CHARACTER SIZE


The following explains how to change the displayed character size on the LCD.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

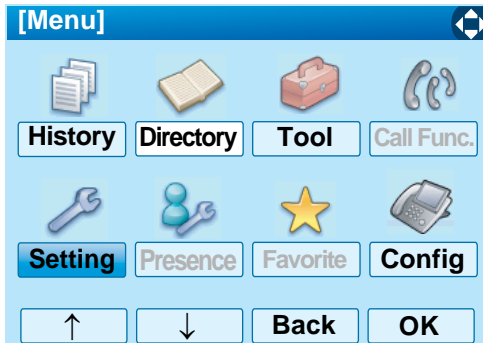


- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

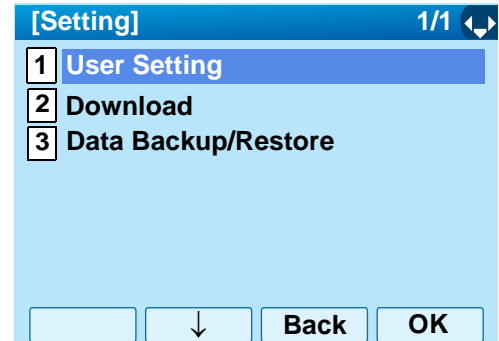


- Select **3 Display** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **3** key.)

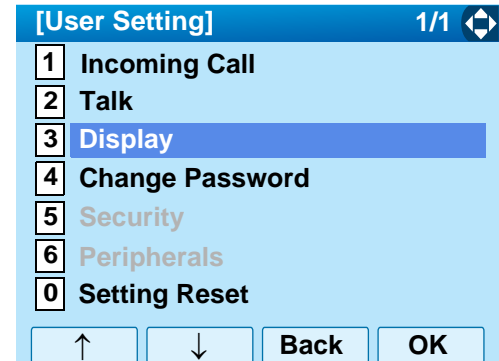


- Select **5 Font Size** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **5** key.)

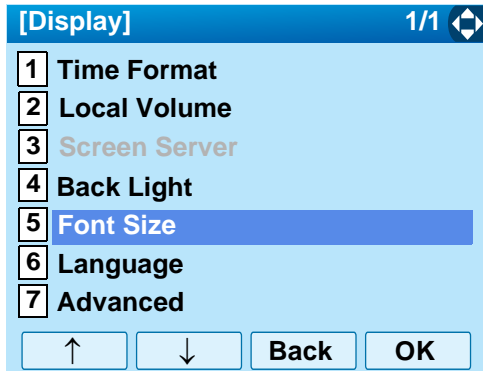

Select either "Standard(16dot)" of "Small(12dot)".

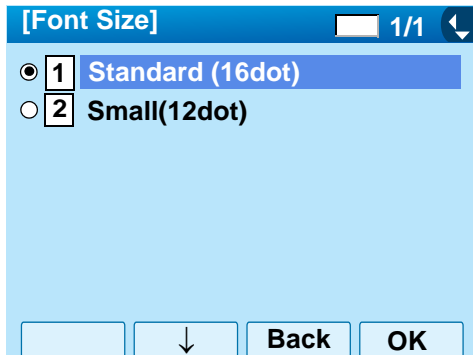



**Note:** *The currently enabled item is highlighted.*


After Making a selection, press  (Enter) or **OK** soft key.



## • TO SET A LANGUAGE


The following explains how to set a language to be displayed on LCD.

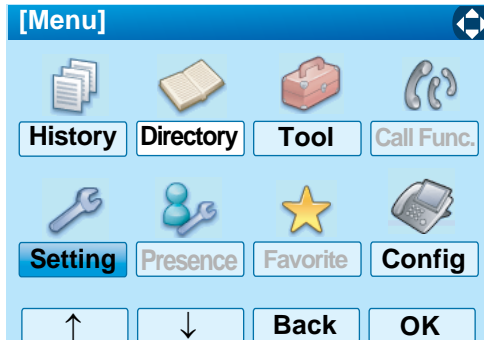

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **5** key.)



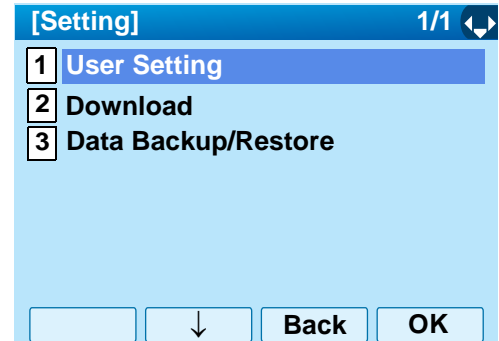


- Select **1 User Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

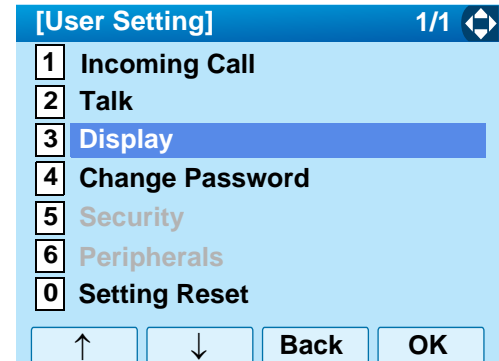


- Select **3 Display** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)




- Select **6 Language** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **6** key.)

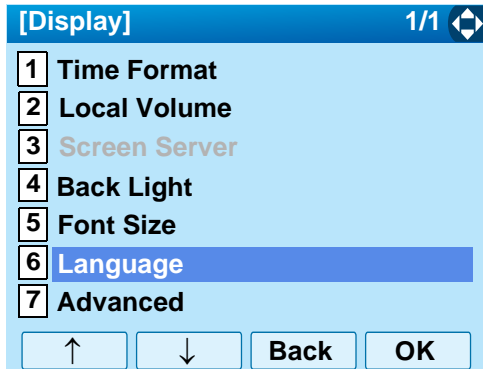

Select a desired language.

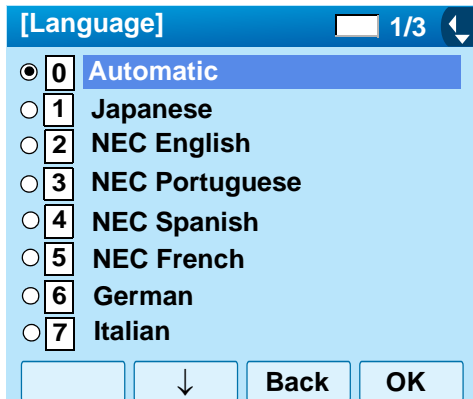



**Note:** *The currently enabled item is highlighted.*


After Making a selection, press  (Enter) or **OK** soft key.


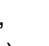
- **TO ENABLE/DISABLE TOUCH PANEL OPERATION**


The following explains how to enable/disable the touch panel operation.



- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.

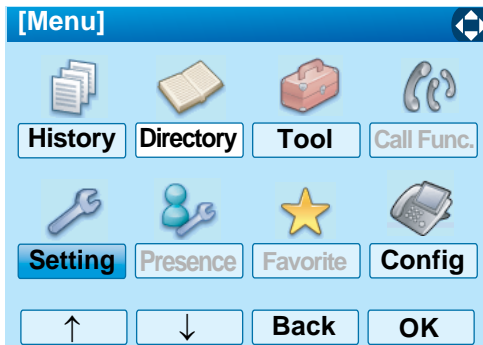
Select **Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **5** key.)



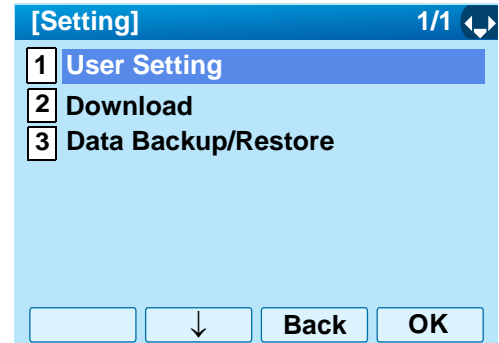



- Select **1 User Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



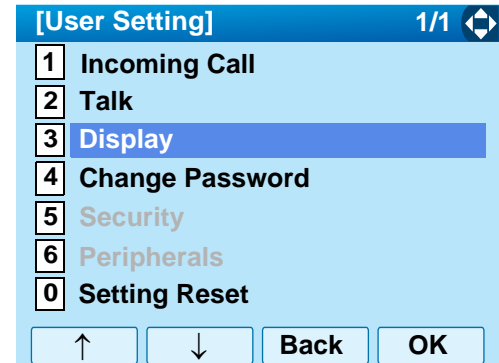

- Select **3 Display** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)

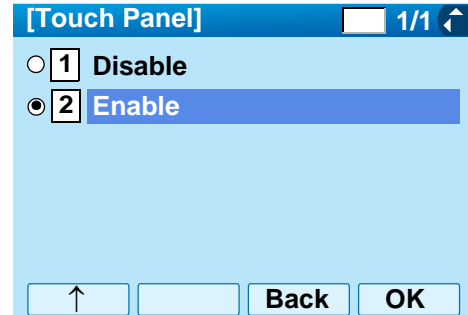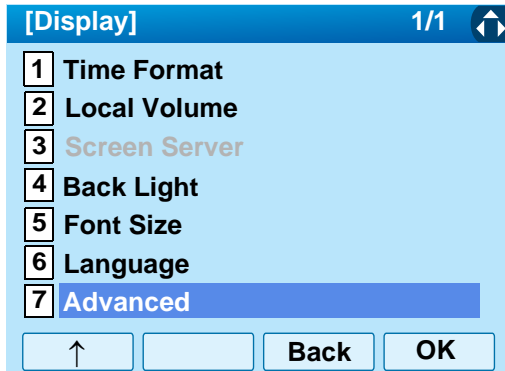



- Select **7 Advanced** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **7** key.)



**Note:** *The currently enabled item is highlighted.*

- Select **2 Touch Panel** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **2** key.)

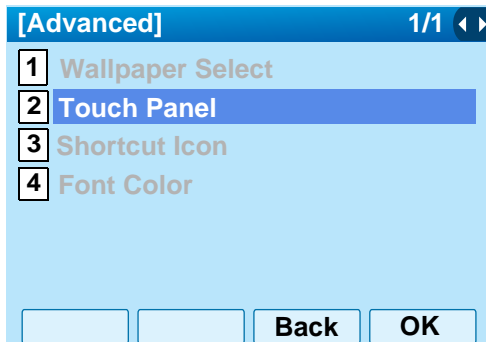

- Select either **1 Disable** or **2 Enable** and then  (Enter) or **OK** soft key.




## • TO CHANGE PASSWORD


To change an existing password, follow the procedure below. This password is used for the following occasions.

- To lock/unlock the telephone.
- To delete the directory data.
- To reset the telephone settings.


- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.
- Select **Setting** and then press **Enter** (or **OK** soft key. (or press **5** key.)

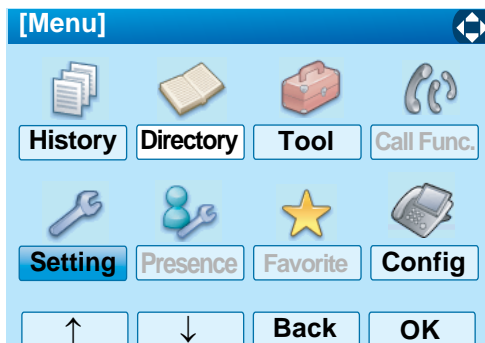

- Select **1 User Setting** and then press **Enter** (or **OK** soft key. (or press **1** key.)

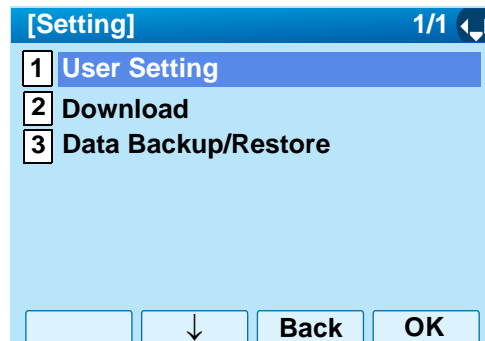

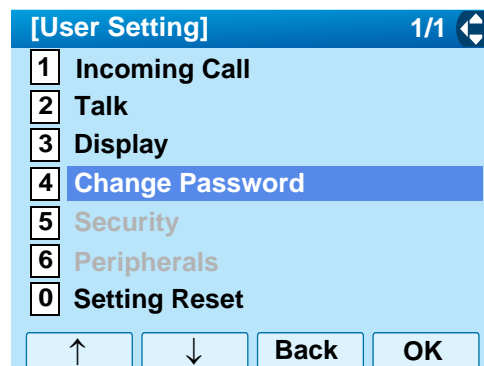

- Select **4 Change** and then press **Enter** (or **OK** soft key. (or press **4** key.)




- The **Change Password** screen is displayed. Enter the old password and then press **Down-cursor** (or **Set** soft key.

**Note:** The initial password is "0000". When changing the password for the first time, enter "0000" as the old password.


- Enter the new password and then press  (Down-cursor) or **Set** soft key.

- Enter the new password again and then press  (Enter) or **OK** soft key.

**Note:** A maximum of 32 digits (0-9, \* and #) can be set as a password.

- When the password entry completes successfully, the display changes as follows. Press  (Enter) or **OK** soft key.

**Note:** When the password entry ends in failure, the following error message is issued. In that case, press **OK** soft key and then make a retry.

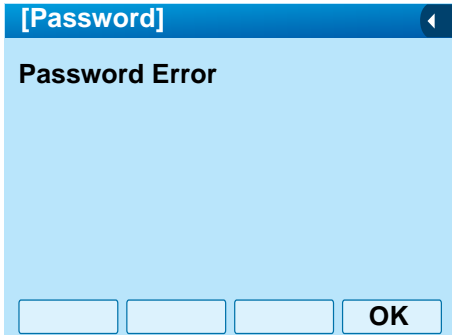


## • TO RESET TELEPHONE SETTINGS


The following explains how to clear the personal data of the telephone.

- While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.


Select **Setting** and then press **Enter** or **OK** soft key. (or press **5** key.)

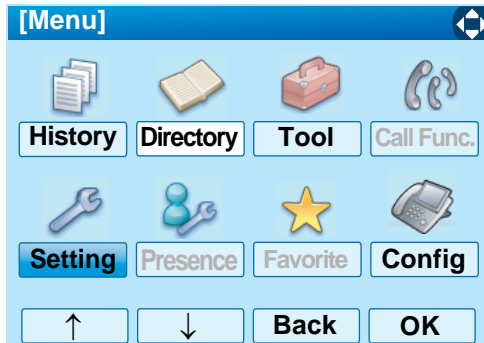


- Select **1 User Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

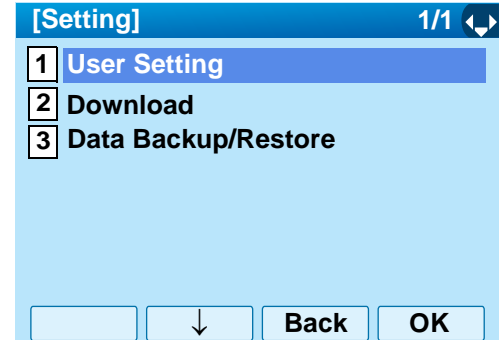


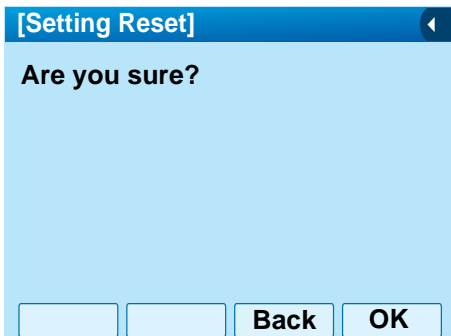
- Select **0 Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **0** key.)

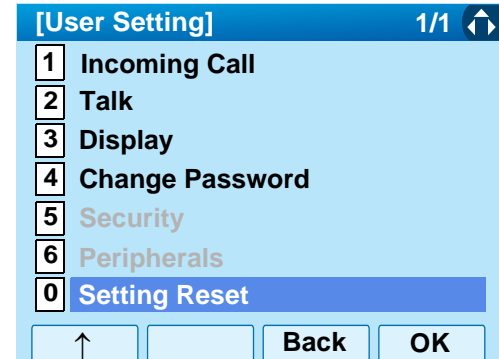

- Enter the password and then press **Enter** or **OK** soft key.

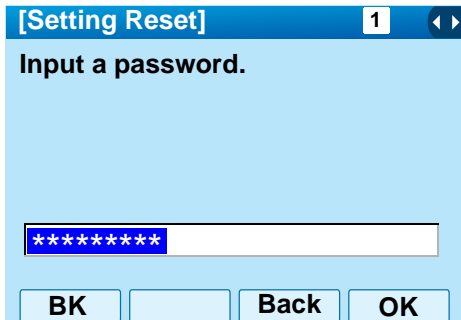

- Press  (Enter) or **OK** soft key to clear the personal data of the telephone.



## • TO DOWNLOAD A FILE

DT750 user can download files for Music on Hold, Ringer Tone and Directory. When downloading these files, the DT750 needs to be connected to the network that has FTP (TFTP server).

**Note:** For details on the FTP/TFTP service, contact to the System Administrator.

Before starting the download, an IP Address of the FTP/TFTP Server must be entered from DT750.

STEP 1: Set up the FTP/TFTP server.

<FTP server>


Put the downloading file into the designated directory of the FTP server.

<TFTP server>


Put the downloading file into a desired directory of TFTP server and then specify it as the directory for downloading.

STEP 2: While indicating the current time on LCD, press **(Menu)** key to open the **Menu** screen.


Select **Setting** and then press **(Enter)** or **OK** soft key. (or press **(5)** key.)

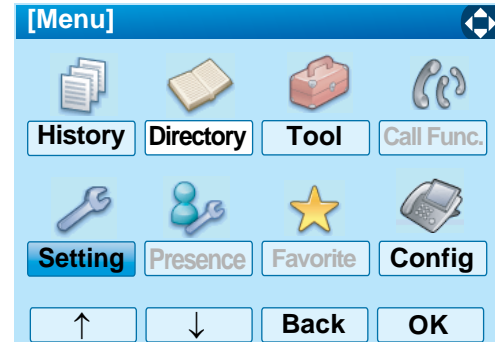

STEP 3: Select **(2)** **Download** and then press **(Enter)** (**(Right-cursor)** or **OK** soft key. (or press **(2)** key.)

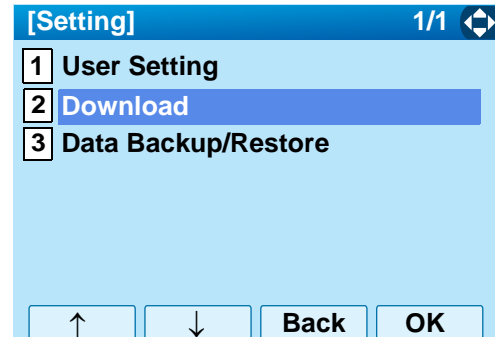

STEP 4: Select **(3)** **Protocol** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(3)** key.)


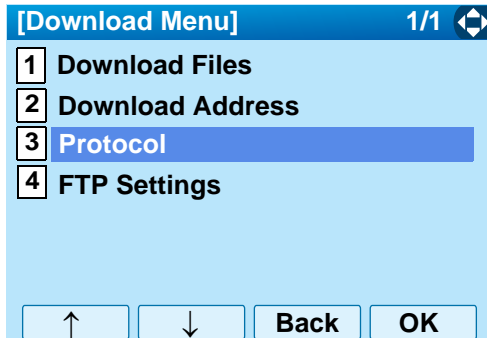


When **1** **FTP** is selected here, go to the next Step (STEP 7).

When **2** **TFTP** is selected here, go to the next STEP 15.


STEP 7: Select **4** **FTP Settings** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **4** key.)


STEP 5: Select a protocol used by the server which stores the download file. After making a selection, press (Enter) or **OK** soft key.

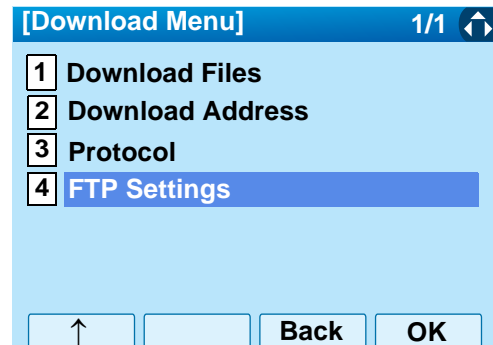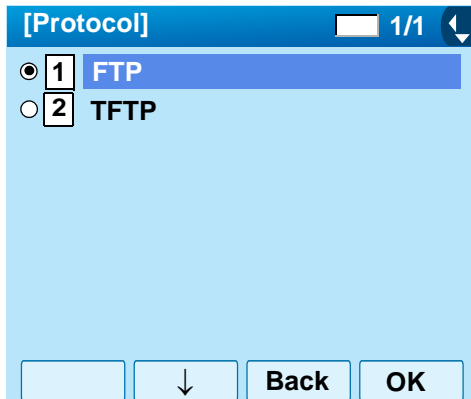


STEP 8: Select **1** **User ID** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

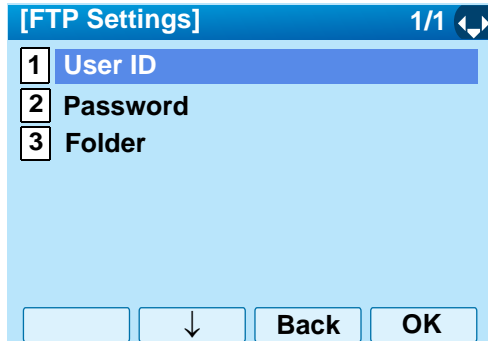

STEP 6: The display goes back to the **Download Menu** screen.

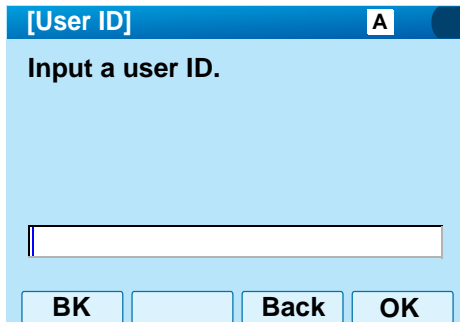


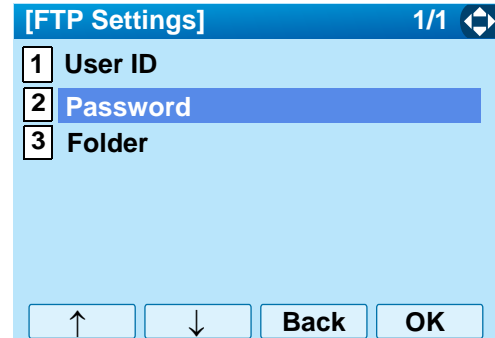
STEP 9: Enter a User ID by using digit keys, then press  (Enter) or **OK** soft key.




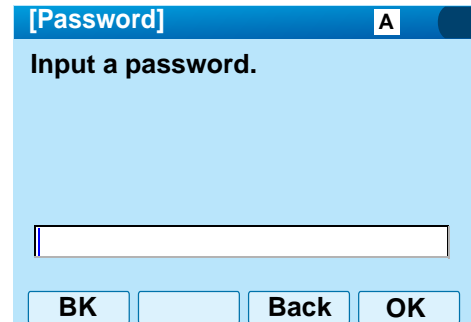
**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.

STEP 10: The display goes back to the **FTP Settings** screen. Select **2 Password** and then press  (Enter),  (Right-cursor) or **OK** soft key.

(or press  key.)





STEP 11: Enter a password by using digit keys, then press  (Enter) or **OK** soft key.





**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.


STEP 12: The display goes back to the **FTP Settings** screen. Select **3 Folder** and then press




 (Enter),  (Right-cursor) or **OK** soft key.  
(or press **3** key.)

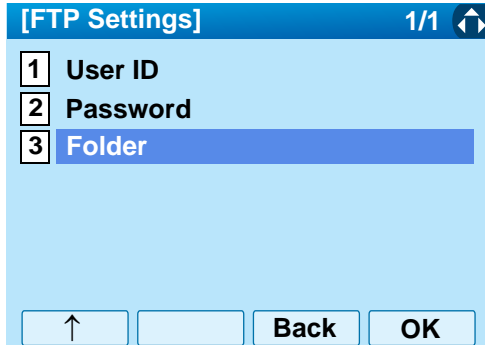



STEP 13: Enter the directory where the download file is stored and then press  (Enter) or **OK** soft key.

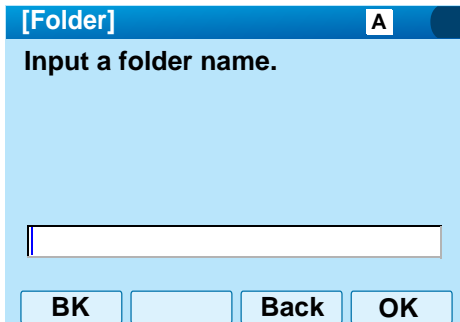


**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.

STEP 14: The display goes back to the **FTP Settings** screen. Press  (Left-cursor) or **Back** soft key to display the **Download Menu** screen.

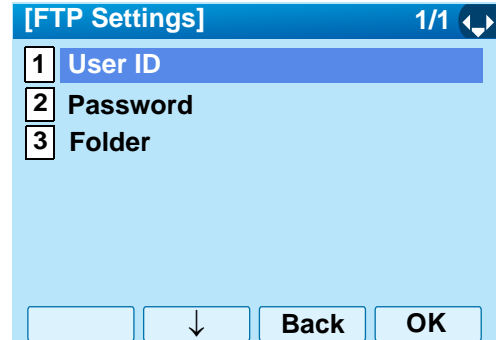



STEP 15: Select **2 Download Address** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **2** key.)

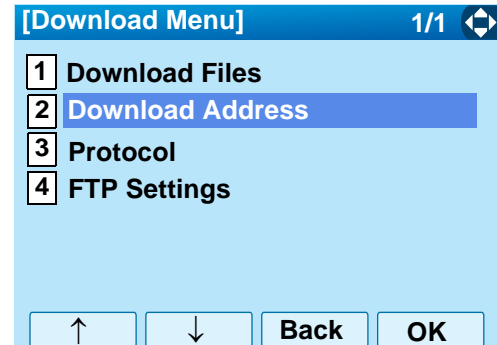




STEP 16: Enter an IP address of the FTP/TFTP server

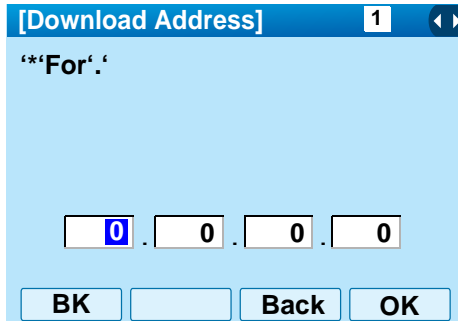which stores the download file. For example, to set the IP address of 10.41.208.205, enter 10\*41\*208\*205 [separate with an asterisk (\*)].



After entering an IP address, press  (Enter) or **OK** soft key.

STEP 17: The display goes back to the **Download Menu** screen. Select **1 Download Files** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

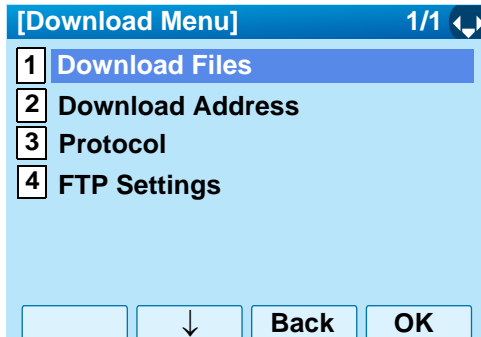

STEP 18: Select a file to be downloaded.


When downloading a file : Select **1 Hold Music** and go for Music on Hold to **STEP 18**.

When downloading a file : Select **2 Ring Tone** and go for ringer tone to **STEP 17**.

When downloading a file : Select **3 Directory** and go for directory to **STEP 18**.




STEP 19: When **2 Ring Tone** is selected at STEP 16, the following **Ring Tone** screen is displayed. Select either **1 Download1**, **2 Download2** or **3 Download3**.

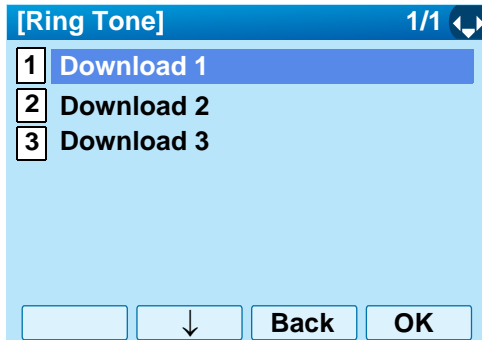


STEP 20: The default file name will be displayed.

- When downloading a file for Music on Hold, the default file name is "MOH.wav".

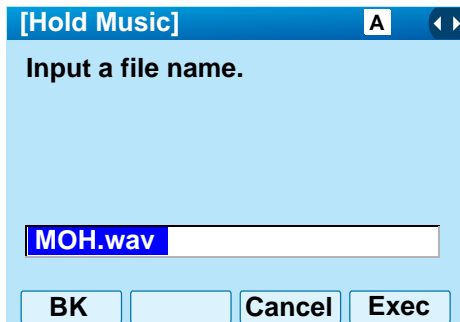


File Format	Maximum Size
PCM $\mu$ -low 16kHz/s wav.	under 15 seconds
PCM $\mu$ -low 8kHz/s wav.	under 30 seconds

- When downloading a file for ringer tone, the default file name is "Melody1/2/3/.wav".

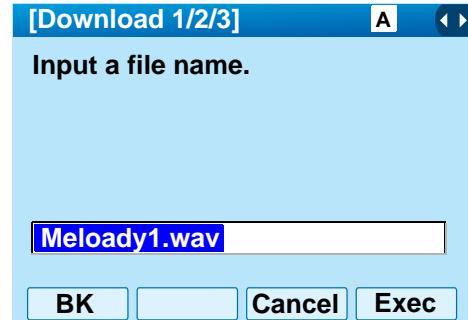

File Format	Maximum Size
PCM $\mu$ -low 16kHz/s wav.	under 15 seconds
PCM $\mu$ -low 8kHz/s wav.	under 30 seconds

- When downloading a file for Directory, the default file name is "Directory.csv".

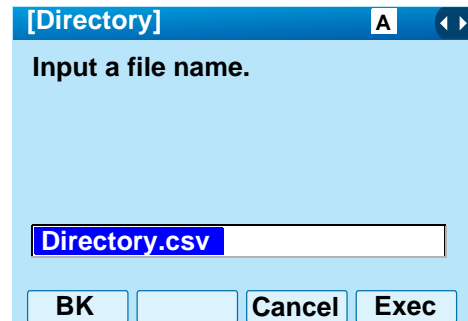

<b>File Name</b>	Directory.csv (Fixed)
<b>Code</b>	Unicode (UTF-8)

When changing the file name, go to the next step (**STEP 19**).


When not changing the file name, go to **STEP 20**.

**STEP 21:** Press **BK** soft key once to delete the default file name and then enter a new file name by using the digit keys.

**Note:** For details on character entry method, see *LAST NUMBER REDIAL* in chapter 4 Basic Operation.

**Note:** A maximum of 20 characters ("0-9", "A-Z", "a-z", "\*", "#", ".", "-", "\_") can be entered as a file name.


**Note:** To delete an entered character, press **BK** soft key.

**STEP 22:** Press  (**Enter**) or **Exec** soft key to start the downloading process. While downloading a file, the LCD displays "Downloading..." first and then "Saving...".

**Note:** Be sure not to turn OFF the DT750 while "Saving..." is displayed on the LCD.

**STEP 23:** After the downloading process is complete,

the display changes as follows:

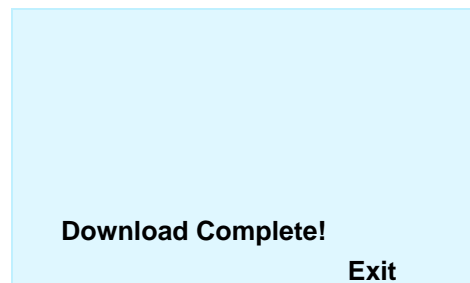

Reset the DT750 by pressing **Exit** soft key.

**Note:** When the downloading process ends in failure, "Downloading Failed!" is displayed on the LCD. Check to see the following and then make a retry.

Check Points	Actions
Download file is not placed in the specified directory.	Place the download file in the specified directory.
A different file name is specified between DT750 and FTP/TFTP server.	Set the same file name from both DT750 and FTP/TFTP server.
Incorrect IP address of FTP/TFTP server has been entered from the telephone.	Set the proper IP address of FTP/TFTP server.
The power to FTP/TFTP server or network equipment is OFF.	Turn on the power.
LAN cable is disconnected.	Reconnect the cable securely.

## • TO BACKUP PERSONAL SETTINGS

DT750 user can backup personal settings of DT750 to FTP/TFTP server. To back up the setting data, the DT750 needs to be connected to the network that has FTP (TFTP server).

**Note:** For details on the FTP/TFTP service, contact to the System Administrator.

Before starting the backup, an IP Address of the FTP/TFTP Server must be entered from DT750.

STEP 1: Set up the FTP/TFTP server.

<FTP server>


Confirm the designated directory for the backed up file.

<TFTP server>


Specify a desired destination directory for the backed up file.

STEP 2: While indicating the current time on LCD, press **(Menu)** key to open the **Menu** screen.


Select **5 Setting** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **5** key.)

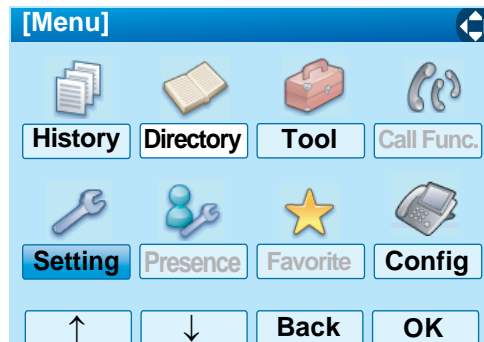

STEP 3: Select **3 Data Backup/Restore** and then press **(Enter)** **(Right-cursor)** or **OK** soft key. (or press **3** key.)

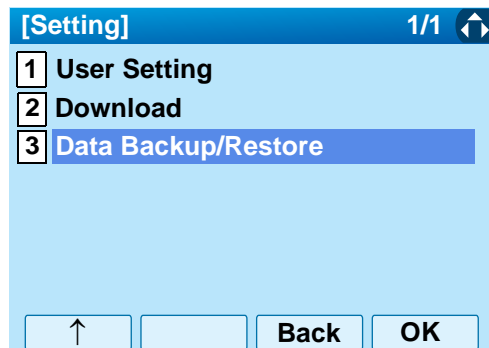

STEP 4: Select **4 Protocol** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **4** key.)


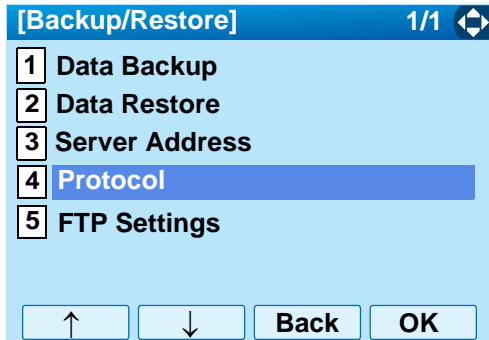


When **1** **FTP** is selected here, go to the next Step (STEP 7).

When **2** **TFTP** is selected here, go to the next STEP 15.


STEP 7: Select **5** **FTP Settings** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **5** key.)

STEP 5: Select a protocol used by the destination server. After making a selection, press (Enter) or **OK** soft key.

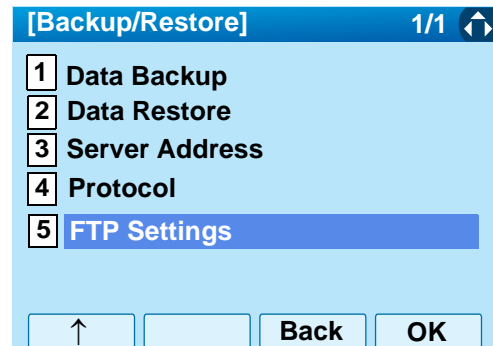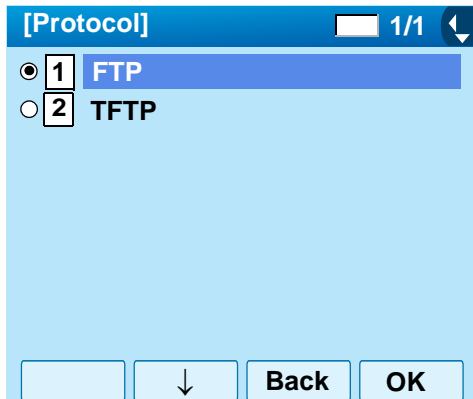


STEP 8: Select **1** **User ID** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

STEP 6: The display goes back to the **Backup/Restore** screen.


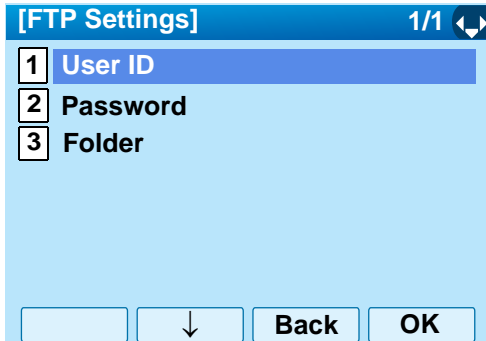


(or press **2** key.)

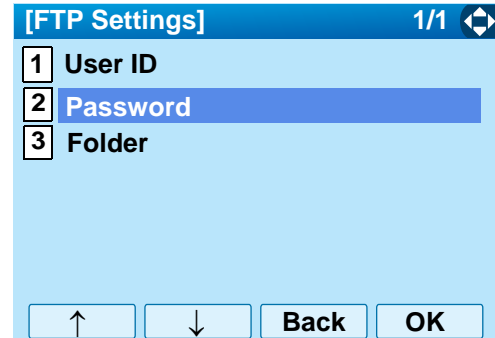

STEP 9: Enter a User ID by using digit keys, then press **Enter** or **OK** soft key.

STEP 11: Enter a password by using digit keys, then press **Enter** or **OK** soft key.

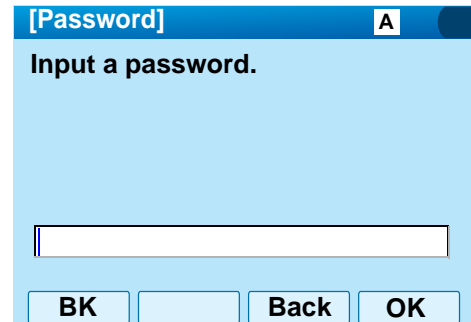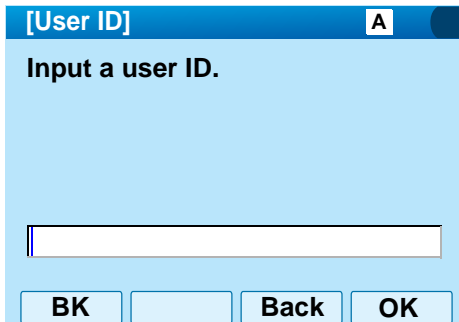




**Note:** For details on character entry method, see *LAST NUMBER REDIAL* in chapter 4 Basic Operation.


**Note:** For details on character entry method, see *LAST NUMBER REDIAL* in chapter 4 Basic Operation.


STEP 10: The display goes back to the **FTP Settings** screen. Select **2 Password** and then press **Enter**, **Right-cursor** or **OK** soft key.

STEP 12: The display goes back to the **FTP Settings** screen. Select **3 Folder** and then press


 (Enter),  (Right-cursor) or **OK** soft key.  
(or press **3** key.)

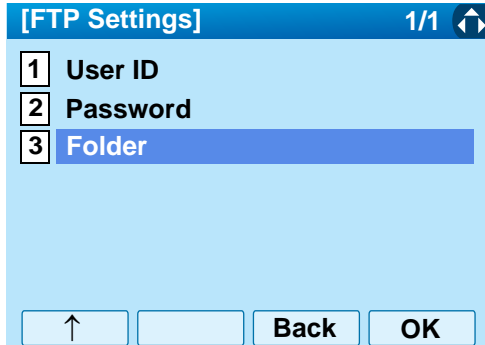


STEP 13: Enter the destination directory of the FTP/ TFTP server and then press  (Enter) or **OK** soft key.

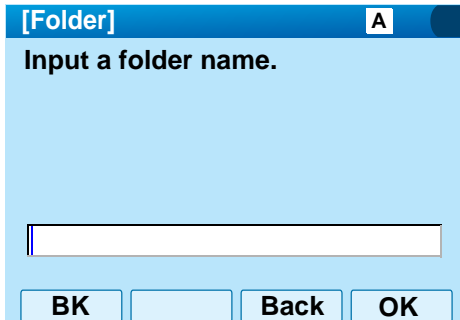


**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.

STEP 14: The display goes back to the **FTP Settings** screen. Press  (Left-cursor) or **Back** soft key to display the **Backup/Restore** screen.

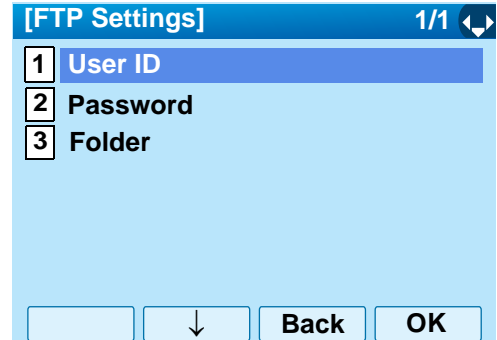


STEP 15: Select **3 Server Address** and then press  (Enter),  (Right-cursor) or **OK** soft key.  
(or press **3** key.)

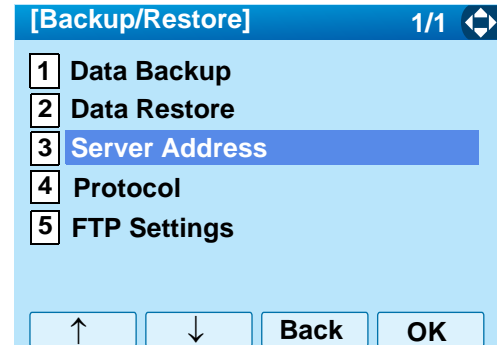




STEP 16: Enter an IP address of the destination FTP/

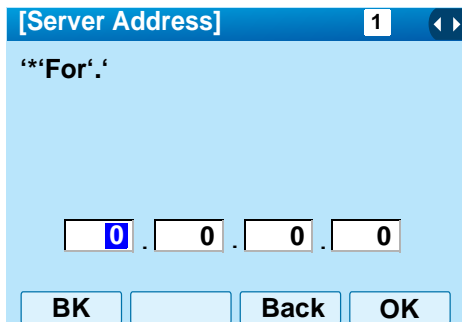


TFTP server. For example, to set the IP address of 10.41.208.205, enter 10\*41\*208\*205 [separate with an asterisk (\*)].



After entering an IP address, press  (Enter) or **OK** soft key.

STEP 17: The display goes back to the **Backup/Restore** screen. Select **1 Data Backup** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

The default file name will be displayed as follows:

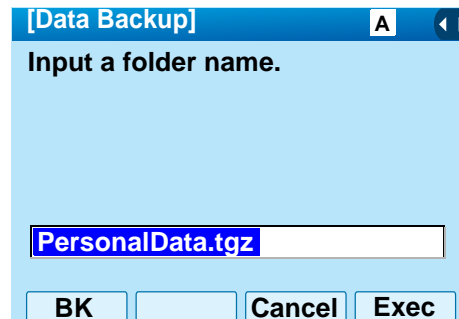


**Note:** Do not change the extension of the backup file. The setting data of the telephone can only be backed up as a .tgz file.

**Note:** When changing the default file name, press BK soft key once to delete the default file name and then enter a new file name by using the digits keys.

**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.


**Note:** A maximum of 20 characters ("0-9", "A-Z", "a-z", "\*", "#", ".", "-" or "\_") can be entered as a file name.

**Note:** To delete an entered character, press BK soft key.

STEP 18: Press  (Enter) or **Exec** soft key to start the data backup. While making a backup copy, the LCD displays "Uploading..." first and then "Saving...".

**Note:** *Be sure not to turn OFF the DT750 while "Saving..." is displayed on the LCD.*

STEP 19: After the data backup is complete, the display changes as follows:

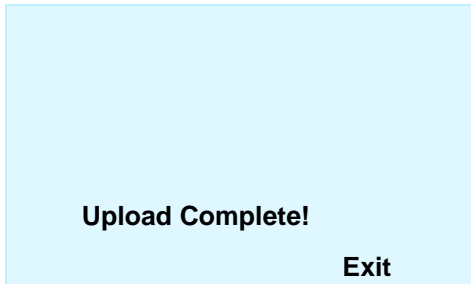

Reset the DT750 by pressing **Exit** soft key.

**Note:** *When the data backup ends in failure, "Upload Failed!" is displayed on the LCD. Check to see the following and then make a retry.*

The power to FTP/TFTP server or network equipment is OFF.	Turn on the power.
LAN cable is disconnected.	Reconnect the cable securely.

Check Points	Actions
A different file name is specified between DT750 and FTP/TFTP server.	Set the same file name from both DT750 and FTP/TFTP server.
Incorrect IP address of FTP/TFTP server has been entered from the telephone.	Set the proper IP address of FTP/TFTP server.

## • TO RESTORE PERSONAL SETTINGS

DT750 user can restore the personal settings of DT750. To download the backup file to the telephone, the DT750 needs to be connected to the network that has FTP (TFTP server).

**Note:** For details on the FTP/TFTP service, contact to the System Administrator.

Before starting the download, an IP Address of the FTP/TFTP Server must be entered from DT750.

STEP 1: Set up the FTP/TFTP server.

<FTP server>

Put the backup file you want to restore into the designated directory of the FTP server.


<TFTP server>

Put the backup file you want to restore into a desired directory of TFTP server and then specify it as the directory for downloading.


STEP 2: While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.

Select **5** **Setting** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **5**


key.)

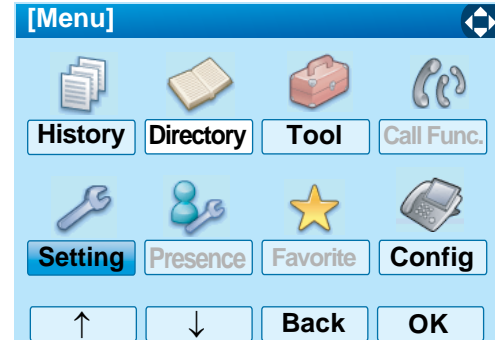

STEP 3: Select **3** **Data Backup/Restore** and then press **Enter** (**Right-cursor**) or **OK** soft key. (or press **3** key.)

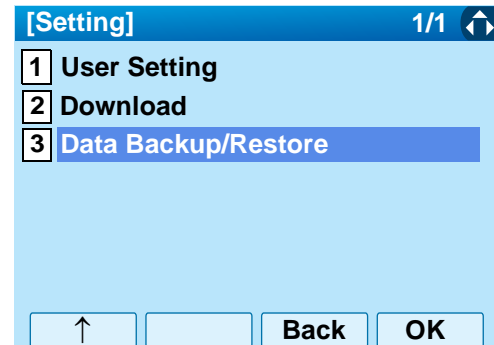

STEP 4: Select **4** **Protocol** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **4** key.)


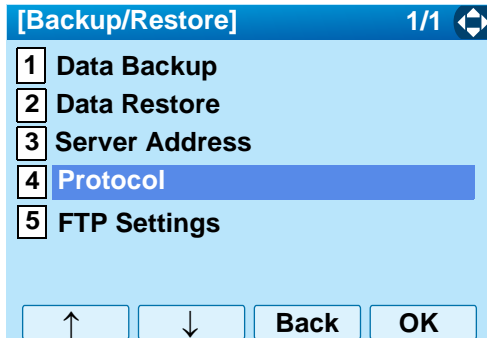


When **1** **FTP** is selected here, go to the next Step (STEP 7).

When **2** **TFTP** is selected here, go to the next STEP 15.


STEP 7: Select **5** **FTP Settings** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **5** key.)


STEP 5: Select a protocol used by the server which stores the backup file. After making a selection, press (Enter) or **OK** soft key.

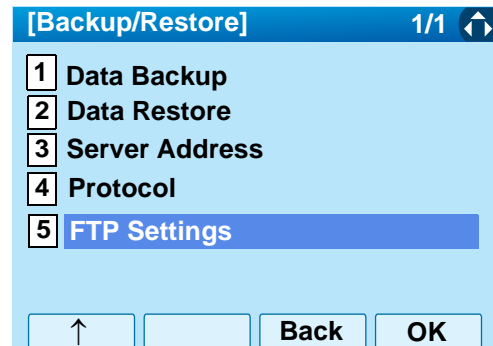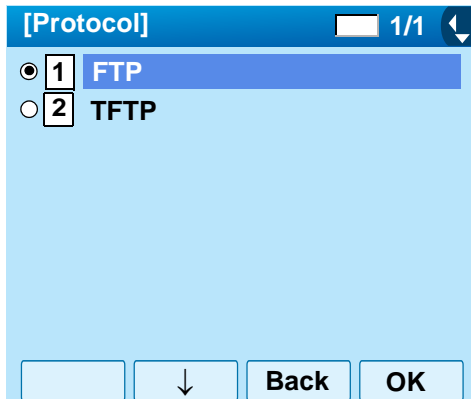


STEP 8: Select **1** **User ID** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

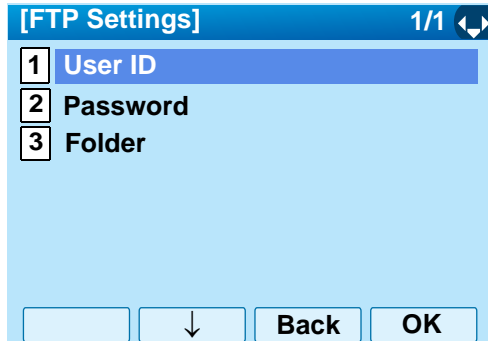

STEP 6: The display goes back to the **Backup/Restore** screen.

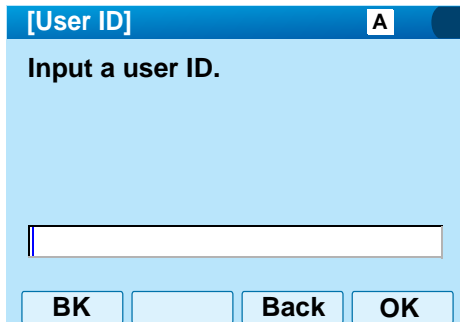


STEP 9: Enter a User ID by using digit keys, then press  (Enter) or **OK** soft key.




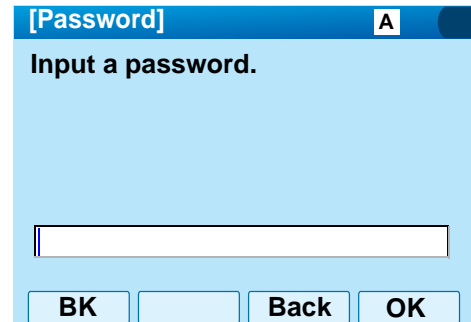
**Note:** For details on character entry method, see *LAST NUMBER REDIAL* in chapter 4 Basic Operation.

STEP 10: The display goes back to the **FTP Settings** screen. Select **2 Password** and then press ,  (Right-cursor) or **OK** soft key.

(or press **2** key.)

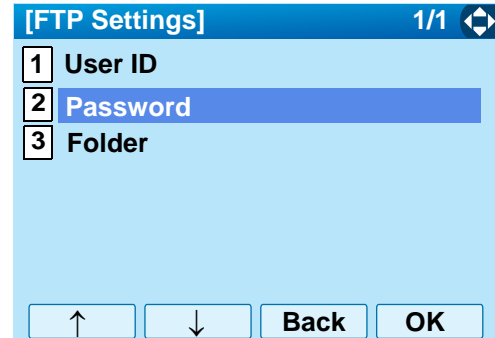




STEP 11: Enter a password by using digit keys, then press  (Enter) or **OK** soft key.




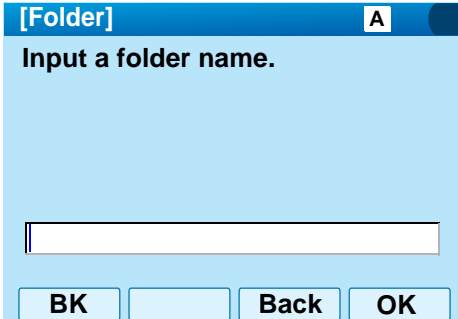
**Note:** For details on character entry method, see *LAST NUMBER REDIAL* in chapter 4 Basic Operation.

STEP 12: The display goes back to the **FTP Settings** screen. Select **3 Folder** and then press


 (Enter),  (Right-cursor) or **OK** soft key.  
(or press **3** key.)



STEP 13: Enter the directory where the backup file is stored and then press  (Enter) or **OK** soft key.




**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.

STEP 14: The display goes back to the **FTP Settings** screen. Press  (Left-cursor) or **Back** soft key to display the **Backup/Restore** screen.





STEP 15: Select **3 Server Address** and then press ,  (Right-cursor) or **OK** soft key.  
(or press **3** key.)

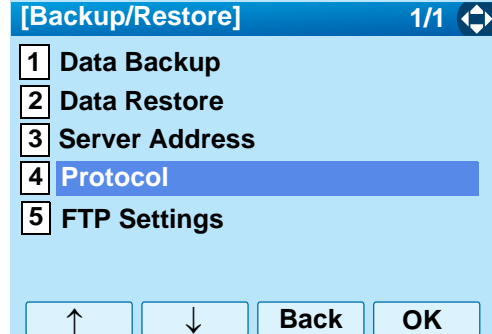




STEP 16: Enter an IP address of the FTP/TFTP server

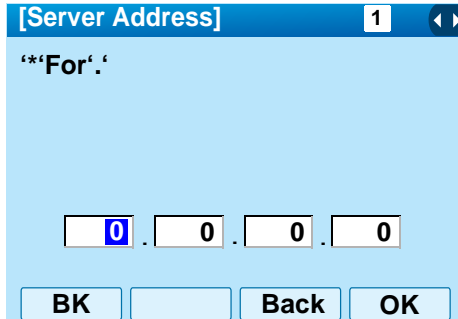which stores the backup file. For example, to set the IP address of 10.41.208.205, enter 10\*41\*208\*205 [separate with an asterisk (\*)].




After entering an IP address, press  (Enter) or **OK** soft key.

STEP 17: The display goes back to the **Backup/Restore** screen. Select **2 Data Restore** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)  
The default file name will be displayed as follows:

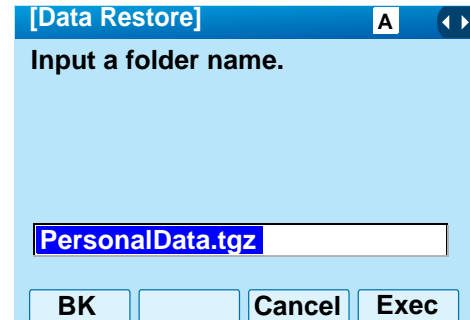


- Note:** Do not change the extension of the backup file. The setting data of the telephone can only be backed up as a .tgz file.
- Note:** When changing the default file name, press BK soft key once to delete the default file name and then enter a new file name by using the digits keys.
- Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4 Basic Operation.
- Note:** A maximum of 20 characters ("0-9", "A-Z", "a-z", "!", "#", ".", "-" or "\_") can be entered as a file name.
- Note:** To delete an entered character, press BK soft key.

STEP 18: Press  (Enter) or **Exec** soft key to start restoring the backup data to the telephone. While downloading the backup data, the LCD displays "Downloading..." first and then "Saving..."

**Note:** *Be sure not to turn OFF the DT750 while "Saving..." is displayed on the LCD.*

STEP 19: After the downloading process is complete, the display changes as follows:

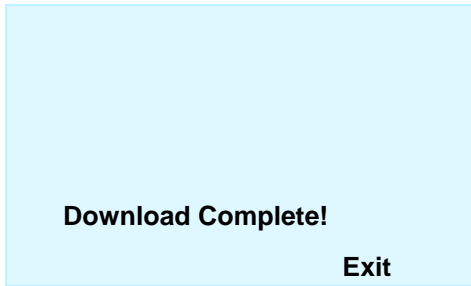

Reset the DT750 by pressing **Exit** soft key.

**Note:** *When the downloading process ends in failure, "Download Failed!" is displayed on the LCD. Check to see the following and then make a retry.*

Incorrect IP address of FTP/TFTP server has been entered from the telephone.	Set the proper IP address of FTP/TFTP server.
The power to FTP/TFTP server or network equipment is OFF.	Turn on the power.
LAN cable is disconnected.	Reconnect the cable securely.

Check Points	Actions
Download file is not placed in the specified directory.	Place the download file in the specified directory.
A different file name is specified between DT750 and FTP/TFTP server.	Set the same file name from both DT750 and FTP/TFTP server.



# 3. BASIC OPERATION


---

This chapter describes the following basic operation of DT750.

- TO LOGIN
- TO LOGOUT
- TO MAKE AN EXTERNAL CALL
- TO MAKE AN INTERNAL CALL
- TO ANSWER AN EXTERNAL CALL
- TO ANSWER AN INTERNAL CALL
- MULTILINE APPEARANCE
- TO HOLD A CALL
- TO PLACE A CALL ON EXCLUSIVE HOLD
- TO TRANSFER A CALL
- TO MAKE A CALL USING ONE-TOUCH SPEED CALLING KEYS
- TO REGISTER NAME ON ONE-TOUCH SPEED CALLING KEY
- TO MAKE A CALL USING SPEED CALLING (-STATION/GROUP)
- TO MAKE A CALL USING SPEED CALLING - SYSTEM
- LAST NUMBER REDIAL
- THREE-PARTY CONFERENCE
- HOW TO INPUT CHARACTERS
- SECURITY MODE
- EMERGENCY CALL
- PHONEBOOK
- CALL HISTORY

## TO LOGIN

- When login mode is activated, the telephone prompts for Login ID and Password.

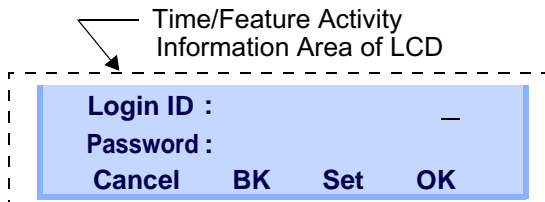

- Enter Login ID and press **Set** soft key.  
(Station number is usually used as the Login code.)



- Enter a password and press **OK** soft key.



- If the Login ID and password is accepted, display changes to normal idle status.



## TO LOGOUT

- Press the preassigned **Logout** soft key on the terminal.

**Note:** *The soft key location is an example.*

**Note:** *Logout soft key is assigned by data setting at the ECP (Enterprise Communication Platform).*



- “**LOGOUT?**” is displayed on the LCD of the terminal.



- Press the **Logout** soft key on the terminal again.

## TO MAKE AN EXTERNAL CALL

- Lift the handset or press **Speaker** key, receive dial tone.

Line Key which accommodates  
My Line of the telephone



Station Number  
of My Line



- Dial the Central Office access code, e.g. **9**.

Dialed Code



- Dial desired telephone number.

 
Dialed Code + Number



- Use handset or MIC to start a conversation.

Display indicates:

Elapsed Time



**Note:** *My Line is an actual line that is directly associated with station number of the telephone. The user can make/answer a call via this line. Usually, My line is seized automatically only by lifting the handset or pressing the Speaker key.*

## TO MAKE AN INTERNAL CALL

- Lift handset or press **Speaker** key, receive dial tone.

Line Key which accommodates  
My Line of the telephone



Blink → Station Number  
of My Line



- Dial a desired station number. Display indicates the dialed number.

Dialed Number




- Use the handset or MIC to start a conversation.

Dialed Number




**Note:** *My Line is an actual line that is directly associated with station number of the telephone. The user can make/answer a call via this line. Usually, My line is seized automatically only by lifting the handset or pressing the Speaker key.*

## TO ANSWER AN EXTERNAL CALL

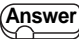
- You hear the ringing tone, and  key and Call Indicator Lamp flash red.

Line Key receiving an Incoming Call

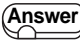

- Press  key or touch the appropriate Line Key.
- Lift the handset to answer the call.

 Status icon changes as follows:



When caller ID is received, LCD displays as follows:

Elapsed Time

15:39  
(Calling Party Number)


When caller ID is not received, the LCD displays as follows:

Elapsed Time	Trunk Type	Trunk Number
15:39	DDD	3
1:25 PM	TUE 18	MAR 2008

**Note:** *When an incoming call is terminated to My Line of the telephone, the user can usually answer the call only by lifting the handset or pressing the Speaker Key.*

## TO ANSWER AN INTERNAL CALL

The following procedure explains how to answer an internal call routed to My Line of the telephone.

- You hear the ringing tone, and  key and Call Indicator Lamp flash red.

Line Key which accommodates  
My Line of the telephone



Blink → (Calling Station  
Number)



- Lift the handset to answer the call.

Status icon changes as follows:



Calling Station  
Number



**Note:** *When an incoming call is terminated to My Line of the telephone, the user can usually answer the call only by lifting the handset or pressing the Speaker Key.*

## MULTILINE APPEARANCE

 
This feature allows users to accommodate the lines (other telephone's station number) other than My Line on the Programmable Line/Feature Keys. When accommodating other telephone's station number on the Programmable Line/Feature Key, the user can answer the call routed to the other telephone by pressing the key.

**Note:** *For the setting of Multiline Appearance, contact the System Maintenance Administrator.*

### • TO ANSWER A CALL


- A call is terminated to the telephone whose station number is accommodated to the **MULTILINE APPEARANCE** Feature key. (ringing and flashing Call Indicator lamp alert user to incoming call).

**MULTILINE APPEARANCE** Feature key



- Touch the **MULTILINE APPEARANCE** Feature key on the display. **Speaker** key lamp lights red.

 Status icon changes as follows:



- Lift handset to start a conversation. **Speaker** key lamp goes off.

## TO HOLD A CALL

 
- While engaged in a Two-party call:

Line Key which is being used



- Press **HOLD** key to hold the call in progress.

Status icon changes as follows:



Held Station Number




- The person on the other end hears the music on hold.
- Replace the handset.

### • TO RETRIEVE

 - Lift handset or press **Speaker** key.

- Lift the handset and then touch the held Line Key on the display.

Status icon changes as follows:



**Note:** Any station with this line appearance can retrieve the call.

### • IF UNANSWERED

- After preprogrammed time, Automatic Recall is initiated.
- Call Indicator lamp flashes and the user hears Automatic Recall Ringer.

Status icon changes as follows:





## TO PLACE A CALL ON EXCLUSIVE HOLD

This feature allows a user to place a call on hold and to exclude all other users from retrieving the Held Call.

 
- While engaged in a Two-party call:

Line Key which is being used



- Press **HOLD** key twice. The LCD displays as follows:

Status icon changes as follows:



Held Station Number




- Replace the handset.

### • TO RETRIEVE

 - Lift handset or press **Speaker** key.

- Touch the held Line Key on the display. The conversation is re-established.

Status icon changes as follows:



**Note:** *Only the telephone that set Exclusive Hold option can retrieve the call.*

### • IF UNANSWERED

- After preprogrammed time, Automatic Recall is initiated.
- Call Indicator lamp flashes and the user hears Automatic Recall Ringer.

Status icon changes as follows:



## TO TRANSFER A CALL

- During a conversation, press **Transfer** key. Receive Special Dial Tone. The first party is placed on hold and hears the music on hold.

**TRANSFER**  
**1:25 PM TUE 18 MAR 2008**

- Dial the destination party's number. Receive Ring-back Tone.

Destination station  
or trunk number

**TRANSFER** **XXXX**  
**1:25 PM TUE 18 MAR 2008**

- The destination party answers the call. Announce the call to the destination party.
- Replace the handset. The transfer is complete.

## TO MAKE A CALL USING ONE-TOUCH SPEED CALLING KEYS

- Touch the desired **One-Touch Speed Calling** key on the display.



- Speaker** key lamp lights red. A call is automatically made to a registered party.



- Lift the handset. **Speaker** key lamp goes off.

### • TO PROGRAM

- Press **Feature** key. **Feature** key lamp lights red.
- Touch a desired **One-Touch Speed Calling** key on the display.
- Enter a desired telephone number or feature access code (up to 32 digits) on the keypad. Display indicates the digits dialed.



- Press **Feature** key again to save the number. **Feature** key lamp goes off.



### • TO VERIFY

- Press **Feature** key. **Feature** key lamp lights red.
- Touch a desired **One-Touch Speed Calling** key on the display.



- Display indicates the assigned number.



□ Press **Feature** key again. **Feature** key lamp goes off.

**Note:** *To program a hook switch for transfer or feature activation, press **Recall** key as first digit. (! displays on LCD.)*

 
**Note:** *To program a pause, press the **Recall** key as any digit other than the first digit. (- displays on LCD.)*

**Note:** *To program a Voice Call, press **Transfer** key after dialing station number. (V displays on LCD.)*


**Note:** **One-Touch Speed Calling** key for feature access: **One-Touch Speed Calling** key may be used as a feature key by storing the UNIVERGE SV7000 feature access code. The features may be programmed on a system basis by the Telephony Server Administrator. Access codes may be stored in conjunction with telephone numbers. For example, one button can be programmed by the user to transfer to a certain extension.

## TO REGISTER NAME ON ONE-TOUCH SPEED CALLING KEY

- Press **NAME** soft key.



 - Press a desired **One-Touch Speed Calling** key.




**Note:** For the key to which no name information is registered, the character "SPD" will be displayed.

- Enter desired name on the keypad. Display indicates the name entered.



 - Press >>> soft key twice to display the following soft keys.



- Press **SET** soft key to save the entered name.



Name information displayed on the **One-Touch Speed Calling** key changes as follows:



**Note:** To delete the entry, press **DEL** or **BK** key and delete each one character.

**Note:** To delete the whole setting, press **CLEAR** key and back to idle status.

## Character Code For Name Information of One-Touch Speed Calling Key

### Uppercase Alphabetic Characters

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	1	A	D	G	J	M	P	T	W	0	*	#
		B	E	H	K	N	Q	U	X		@	&
		C	F	I	L	O	R	V	Y		.	(
		a	d	g	j	m	S	t	Z		,	)
		b	e	h	k	n	p	u	w		'	[
		c	f	i	l	o	q	v	x		:	]
		2	3	4	5	6	r	8	y		;	!
							s		z		-	?
							7		9		/	

### Uppercase European Characters

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	.	A	D	G	J	M	P	T	W	0	*	#
	,	B	E	H	K	N	Q	U	X			
	:	C	F	I	L	O	R	V	Y			
	!	À	È	Ì	5	Ñ	S	Û	Z			
	?	Á	É	Í		Ò	β	Ú	9			
	-	Â	Ê	Î		Ó	7	Û				
	+	Ã	Ë	Ï		Ô		Ü				
	%	Ä	3	4		Ö		8				
	&	Å				Ö						
	/	Æ				Œ						
	(	Ç				Ø						
	)	2				6						
	=											
	¿											
	¡											
1												

**Note:** The shaded area indicates the characters which cannot be entered.



### Lowercase European Characters

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	.	a	d	g	j	m	p	t	w	0	*	#
	,	b	e	h	k	n	q	u	x			
	:	c	f	i	l	o	r	v	y			
	!	à	è	ì	5	ñ	s	ù	z			
	?	á	é	í		ò	β	ú	9			
	-	â	ê	î		ó	7	û				
	+	ã	ë	ï		ô		ü				
	%	ä	3	4		õ		8				
	&	å				ö						
	/	æ				œ						
	(	ç				ø						
	)	2				6						
	=											
	¿											
	¡											
1												

**Note:** The shaded area indicates the characters which cannot be entered.



 
## TO MAKE A CALL USING SPEED CALLING (-STATION/GROUP)

- Press  (Redial) key. Receive Dial Tone.  key lamp lights red.

Line Key which accommodates  
My Line of the telephone







- Press the desired speed calling number.



- Lift the handset.  key lamp goes off.

## TO MAKE A CALL USING SPEED CALLING - SYSTEM

- **TO PROGRAM SPEED CALLING -SYSTEM KEY (ONE-TOUCH SPEED CALLING KEY)**

- Press  key.  key lamp lights red.
- Press a desired **One-Touch Speed Calling** key. The LCD displays previously stored digits.
- Dial the “Speed Calling – System” access code and the abbreviated call code.
- Press  key again.  key lamp goes off.



- **TO OPERATE FROM SPEED CALLING-SYSTEM KEY**



- Press the “Speed Calling – System” key.




 
- If the DT750 does not have the “Speed Calling – System” key, dial the “Speed Calling – System” access code, then the abbreviated call code.

## LAST NUMBER REDIAL


### To Recall Last Number Dialed

- Press  (Redial) key. The user hears Dial tone and the last number dialed is displayed.  key lamp lights red.

Line Key which accommodates  
My Line of the telephone

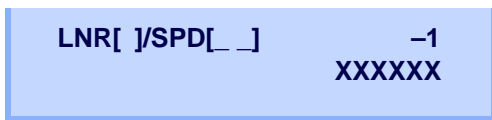

**Number to  
be Redialed**

- Press  (Redial) key until a desired number is displayed. Up to 5 previously dialed numbers are available.
- Press # or ✖. The number on the display is automatically redialed.
- When party has answered, lift handset or speak hands-free.

**Note:** A-law Countries [Australia, Russia, Latin America, UK, Middle near East, other Asian nations]: #  
μ-law Countries [North America, Japan, Hong Kong, Taiwan]: ✖

## THREE-PARTY CONFERENCE

- While Station A and Station B are engaged in a Two-party connection, Station A presses **Transfer** key.

Station A hears Special Dial Tone.

Station B hears the music on hold.

**TRANSFER**  
1:25 PM TUE 18 MAR 2008

- Station A dials a desired Station Number (Station C).

**TRANSFER** XXXX  
1:25 PM TUE 18 MAR 2008

- After Station C answers the transferred call, Station A presses **CONF** soft key.
- Three-Party call is now established.


**CONF**  
1:25 PM TUE 18 MAR 2008

# HOW TO INPUT CHARACTERS

This section explains how to enter characters on the text input screen such as Name or User ID, etc.


- Character Entry Mode**

When entering characters from the telephone set, the following three modes are available: uppercase alphabetic character, lowercase alphabetic character and numeric character. The character entry mode can be changed by pressing **\*** key or from the Sub Menu screen.

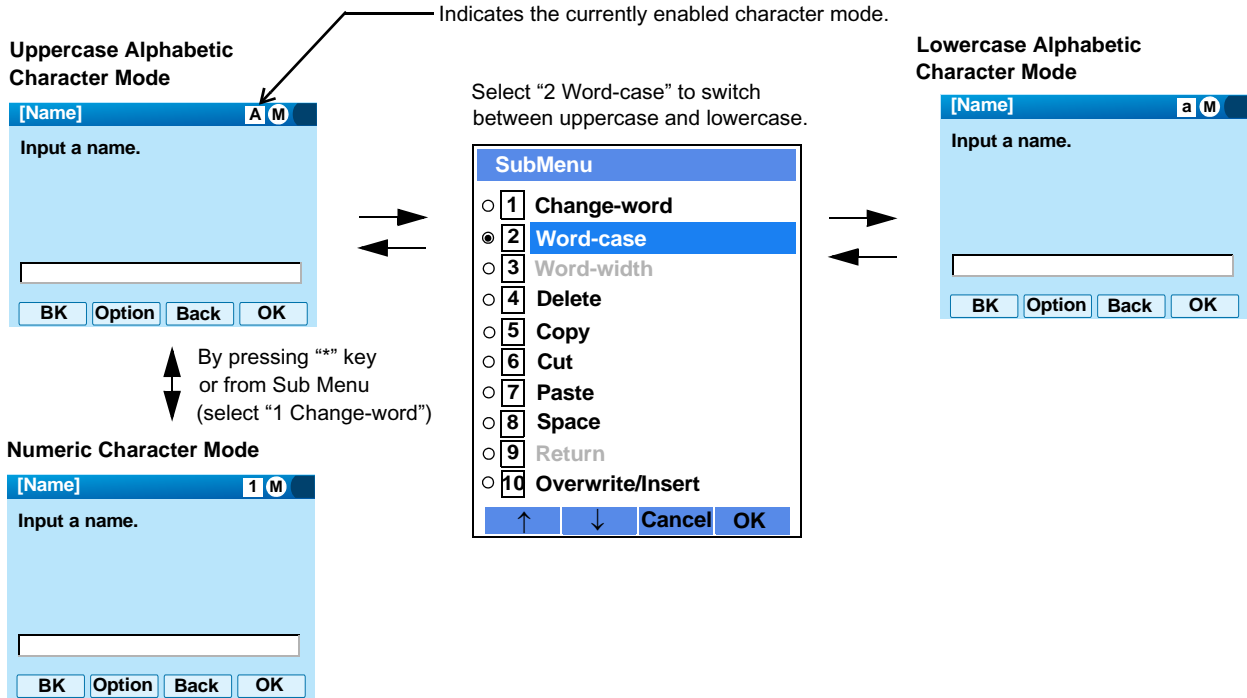

The currently enabled entry mode is indicated in the top portion of the LCD screen.

To display the Sub Menu screen, press **(Menu)** key or **Option** Soft Key while the text input screen is displayed. Also, the following operations are available from the Sub Menu screen.

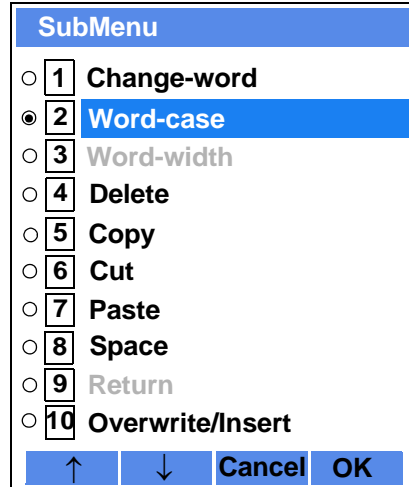

Sub Menu Items	Descriptions
Change-word	Change character entry mode between uppercase alphabetic, lowercase alphabetic and numeric character.
Word-case	Switch between uppercase and lowercase.
Word-width	Not used.
Delete	Delete a single character.
Copy	Copy the specified characters.
Cut	Cut the specified characters.
Paste	Paste the specified characters.
Space	Enter a space.
Return	Start a new line.
Overwrite/Insert	Write over existing characters.

- **Character Code List**

<Character Code For English (1/2)>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th
①	A	.	,	\	1	?	!	¥	@	:	;			
	a													
②	A	A	B	C										
	a	a	b	c										
③	A	D	E	F										
	a	d	e	f										
④	A	G	H	I										
	a	g	h	i										
⑤	A	J	K	L										
	a	j	k	l										
⑥	A	M	N	O										
	a	m	n	o										
⑦	A	P	Q	R	S									
	a	p	q	r	s									
⑧	A	T	U	V										
	a	t	u	v										
⑨	A	W	X	Y	Z									
	a	w	x	y	z									
⑩	A	[SP]												
	a													

<Character Code For English (2/2)>

		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th
#	[A]	*	#	.	/	:	~	!	@	\$	%
	[a]										
		11st	12st	13st	14st	15st	16st	17st	18st	19st	20st
	[A]	^	&	(	)	'	?	"	_	+	-
	[a]										
		21st	22st	23st	24st	25st	26st	27st	28st	29st	30st
	[A]	=	[	]	{	}	<	>	,	;	\
	[a]										
*	Used as a case shift key. Shifts the characters between uppercase, lowercase and numeric.										

<Character Code For Russian>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th
①	A	.	,	:	!	?	+	-	%	&	/	(	)	=	¿	i
	a															
②	A	А	Б	В	Г											
	a	а	б	в	г											
③	A	Д	Е	Ё	Ж	З										
	a	д	е	ё	ж	з										
④	A	И	Й	К	Л											
	a	и	й	к	л											
⑤	A	М	Н	О	П											
	a	м	н	о	п											
⑥	A	Р	С	Т	У											
	a	р	с	т	у											
⑦	A	Ф	Х	Ц	Ч											
	a	ф	х	ц	ч											
⑧	A	Ш	Щ	Ъ	Ы	Ь										
	a	ш	щ	ъ	ы	ь										
⑨	A	Э	Ю	Я												
	a	э	ю	я												
⑩	A	SP														
	a															
#	A	#														
	a															
*	A	*														
	a															



<Character Code For Turkish>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th
①	A	.	,	:	!	?	+	-	%	&	/	(	)	=	ı	i
	a															
②	A	A	B	C	Ç											
	a	a	b	c	ç											
③	A	D	E	F												
	a	d	e	f												
④	A	G	Ğ	H	ı	İ										
	a	g	ğ	h	ı	i										
⑤	A	J	K	L												
	a	j	k	l												
⑥	A	M	N	O	Ö											
	a	m	n	o	ö											
⑦	A	P	R	S	Ş											
	a	p	r	s	ş											
⑧	A	T	U	Ü	V											
	a	t	u	ü	v											
⑨	A	Y	Z													
	a	y	z													
⑩	A	[SP]														
	a															
#	A	#														
	a															
*	A	*														
	a															

<Character Code For Other Languages>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th
①	A	.	,	:	!	?	+	-	%	&	/	(	)	=	¿	i
	a															
②	A	A	B	C	À	Á	Â	Ã	Ä	Å	Æ	Ç				
	a	a	b	c	à	á	â	ã	ä	å	æ	ç				
③	A	D	E	F	È	É	Ê	Ë								
	a	d	e	f	è	é	ê	ë								
④	A	G	H	I	Ì	Í	Î	Ï								
	a	g	h	i	ì	í	î	ï								
⑤	A	J	K	L												
	a	j	k	l												
⑥	A	M	N	O	Ñ	Ò	Ó	Ô	Õ	Ö	Ø					
	a	m	n	o	ñ	ò	ó	ô	õ	ö	ø					
⑦	A	P	Q	R	S	ß										
	a	p	q	r	s	ß										
⑧	A	T	U	V	Ü	Ú	Û	Ü								
	a	t	u	v	ü	ú	û	ü								
⑨	A	W	X	Y	Z											
	a	w	x	y	z											
⑩	A	SP														
	a															
#	A	#														
	a															
*	A	*														
	a															

<Number Code>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th
①	①	1														
②	①	2														
③	①	3														
④	①	4														
⑤	①	5														
⑥	①	6														
⑦	①	7														
⑧	①	8														
⑨	①	9														
⑩	①	0														
#	①	*	#	.	@	/	( )	,	-	_	:	¥	~	&	\	
*	①	Used as a case shift key. Shifts the characters between uppercase, lowercase and numeric.														

**Note:** When entering password, "0-9", "\*" and "#" are available.

"#" is entered by pressing # key.

"\*" is entered by pressing \* key.


<Number Code>

DIGIT KEY	CASE SHIFT	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th
①	1	1														
②	1	2														
③	1	3														
④	1	4														
⑤	1	5														
⑥	1	6														
⑦	1	7														
⑧	1	8														
⑨	1	9														
⑩	1	0														
#	1	*	#	.	@	/	( )	,	-	_	:	¥	~	&	¥¥	
*	1	Used as a case shift key. Shifts characters between uppercase, lowercase and numeric.														


## • Character Entry Method

As an example of character entry method, the following shows how to enter “**Ken Kobus**” .


- Press **5** key twice to enter “**K**”.

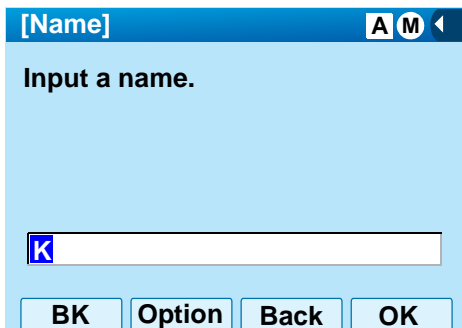

- Press **Menu** key or **Option** soft key to display Sub Menu screen, and then select **2 Word-case** to switch the text input mode from uppercase to lowercase.

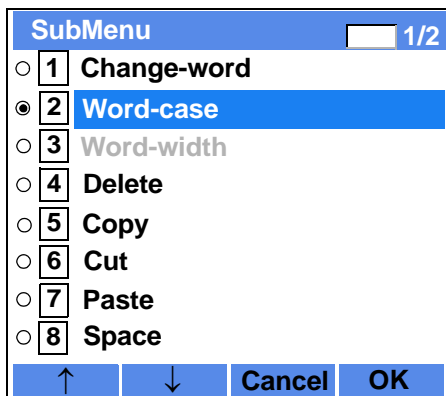


- Press **Enter** or **OK** soft key on the Sub Menu to go back to text input screen.

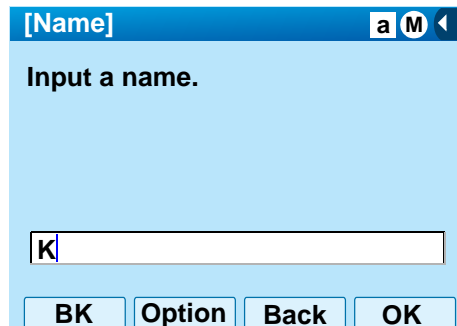



- Enter “en” by using digit keys.

Press **3** key twice to enter “e”.

Press **6** key twice to enter “n”.


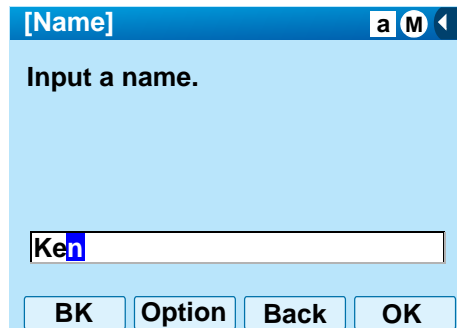


- Press **0** key once to enter a space.

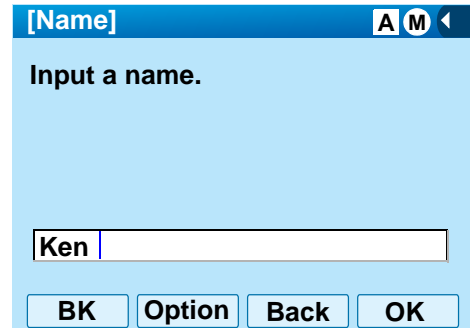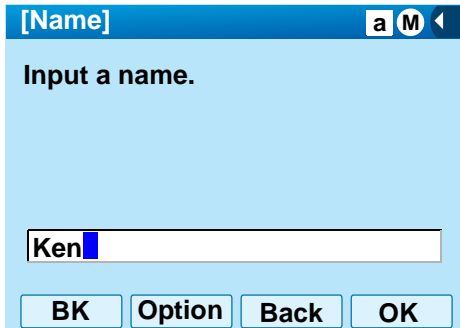



- Press **(Menu)** key or **Option** soft key to display Sub-Menu screen, and then select **[2] Word-case** to switch the text input mode from lowercase to uppercase.

- Press **(5)** key twice to enter "K".

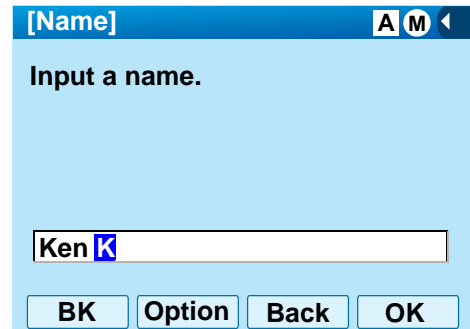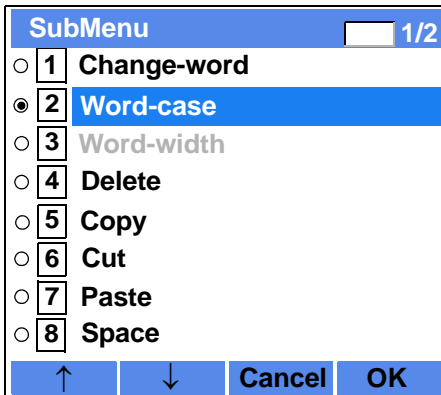


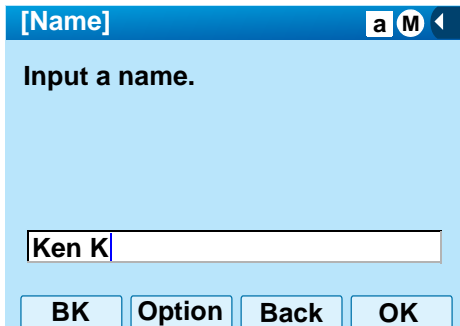
- Press **(Enter)** or **OK** soft key on the Sub Menu to go back to text input screen.

- Press **(Menu)** key or **Option** soft key to display Sub-Menu screen, and then select **[2] Word-case** to switch the text input mode from lowercase to uppercase .

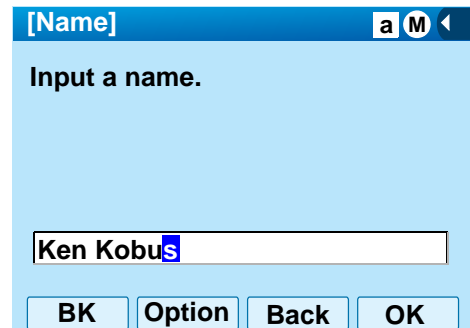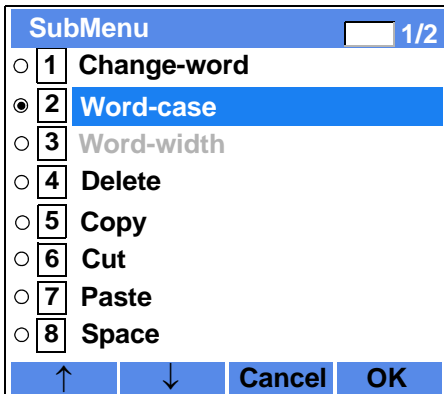



Press  (Enter) or **OK** soft key.


Press  (Enter) or **OK** soft key on the Sub Menu to go back to text input screen.




Enter “obus” by using digit keys.

Press  key three times to enter “o”.


Press  key twice to enter “b”.

Press  key twice to enter “u”.


Press  key four times to enter “s”.

- **To Overwrite Characters**


- Place the cursor at the left of the characters to be overwritten.

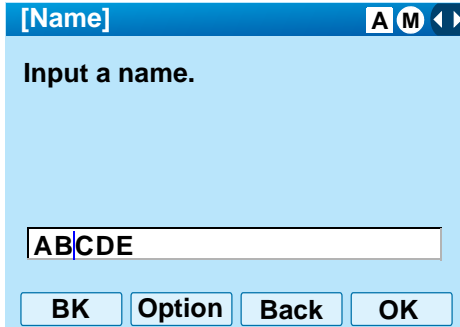

- Enter new words over existing characters. In this example, "F" is entered.

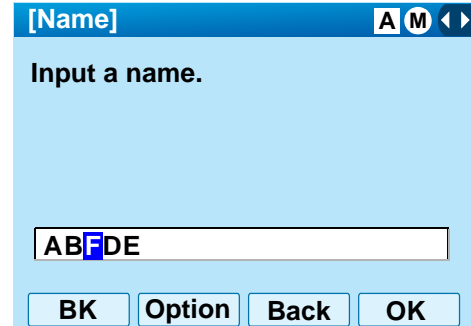


- Press **(Menu)** key or **Option** soft key.
- On the following Sub Menu screen, select **10 Overwrite/Insert** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key.

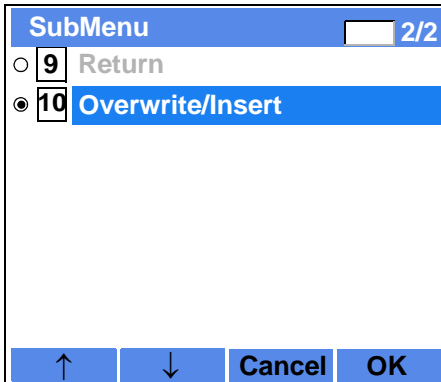




- **To Copy and Paste Characters**

- While characters which you want to copy are displayed, press **Menu** key or **Option** soft key.

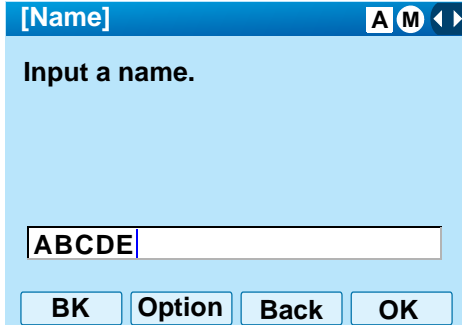


- On the Sub Menu screen, press **Enter** or **OK** soft key while **5 Copy** is highlighted, or press **5** key.

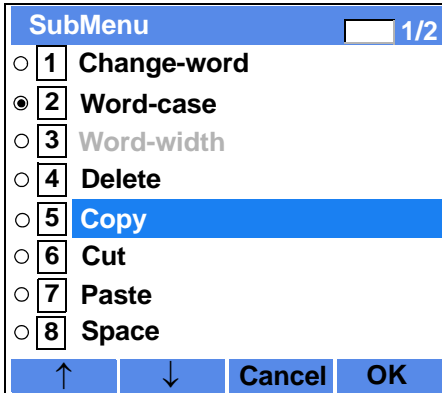


- Place the cursor at the starting point of the target



characters by using **Left-cursor** and then press **Start** soft key.

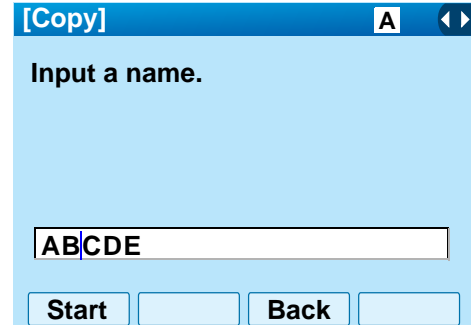

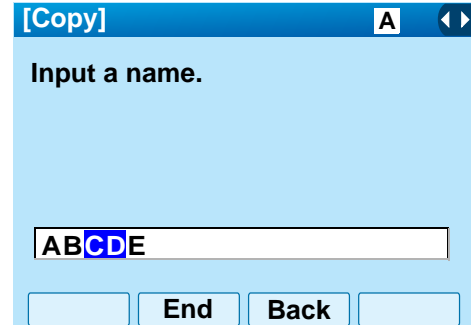


- Place the cursor at the end point of the target characters **Right-cursor** and then press **End** soft key.

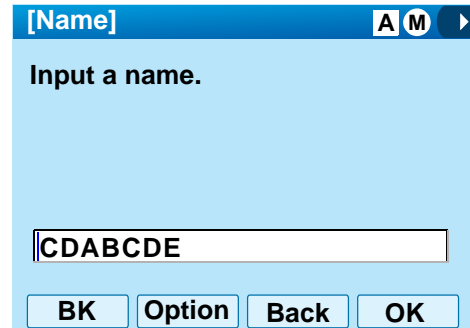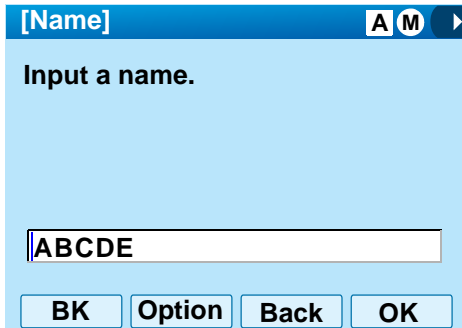

- Place the cursor at position where you want to paste the copied characters and then press **Menu** key or **Option** soft key.




- On the Sub Menu screen, select **7 Paste** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **7** key.)

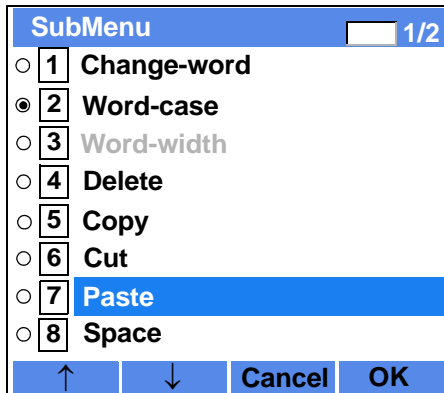

- The copied characters “CD” are inserted as follows:

## SECURITY MODE


DT750 has the **Security** key which prevents information leakage from terminal. While the telephone is locked, Security Lamp lights up.

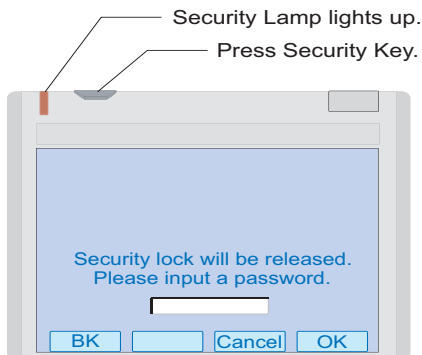


### • TO LOCK THE TELEPHONE

Before placing the telephone in Security mode, you can set a password. For details on the password setting, see [TO CHANGE PASSWORD](#) in chapter 3 Terminal Setup.


Press **Security** key on the telephone. The following message is displayed on LCD.

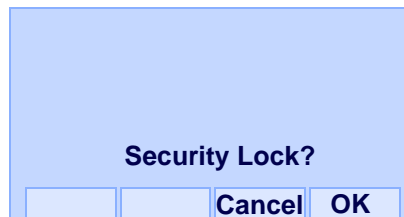



- Press  (Enter) or **OK** soft key to place DT750 in Security mode.
- When the telephone is placed in Security mode, Security Lamp lights red and the screen saver will be activated.


### • TO UNLOCK THE TELEPHONE

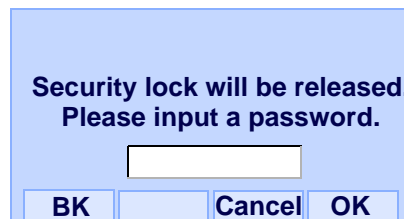
- Display the Password Entry screen by either of the following operations.
  - Press any key while the screen saver is activated.
  - Press **Security** key while the screen server is activated.




- Enter the password and then press  (Enter) or **OK** soft key. Security Lamp is extinguished and Security Mode is canceled.

**Note:** *When the password entry ends in failure, the following error message is issued. In that case, press  or **OK** soft key and then make a retry.*

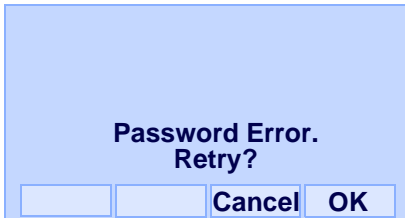


**Note:** *After a third attempt (if incorrect password entered three times), the following error message is issued. Press  or **OK** soft key. The telephone locks up, and any key operation will be disabled for 10 minutes. After 10 minutes, make a retry.*

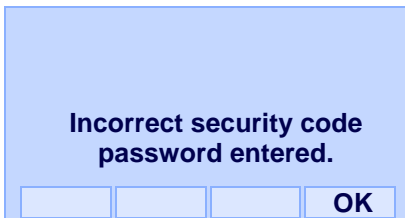

## EMERGENCY CALL

The user can make a call to a predetermined emergency telephone number while the telephone is locked (in Security mode).

 - Lift the handset while the telephone is locked (the screen server is activated).




**Note:** *Emergency call cannot be made with **Speaker** key.*

**Note:** *When pressing **Unlock** soft key, the telephone prompts for the Security mode cancellation password.*

- Dial an emergency telephone number by pressing digit keys(0-9, \*, #).

**Note:** *Emergency telephone number needs to be set in advance. For the setting of the emergency telephone numbers, contact the system administrator.*

 **Note:** *The user can make a call to only the predetermined number. When When telephone numbers other than the predetermined emergency number are dialed, the following message appears (after a few seconds, the display goes back to "Emergency Call? screen ).*



- After a conversation, replace the handset. The display goes back to the screen server.

## PHONEBOOK

There are two types of Phonebook features: Local Phonebook and System Phonebook.

### System Phonebook

System Phonebook is used on a system basis. The data entry is made by the Telephony Server Administrator.

### Local Phonebook

Local Phonebook is used on a station basis. Up to 100 entries are available per station. The user can make entries with key operation from the telephone. Up to 32 digits can be registered for each dial number. Up to 24 characters can be registered for each name.

#### • SYSTEM PHONEBOOK

### To Search And Make A Call

Example: To Search For “NEC BNET”.

STEP 1: Press **Pbook** soft key while Station is in Idle state.


4:26 PM TUE 13 APR 2007  
Pbook MIC DND

If Local Phonebook is enabled by the setting on the system side, go to STEP2.

If Local Phonebook is disabled by the setting on the system side, go to STEP 3.

- OR -

Press **Menu** key to display the Menu screen. On the Menu screen, select **Directory**.

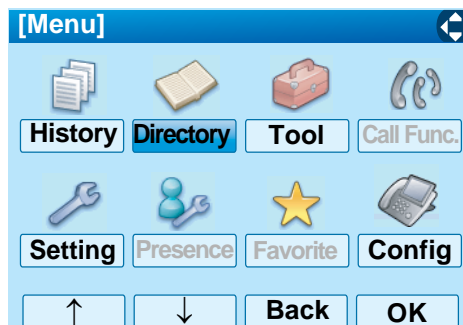


**Note:** Select an item on the menu screen in either of the following three ways.

- Touch a desired item on the display.
- Press an appropriate digit key.
- Highlight a desired item and then press


 ,  or **OK** soft key.


If Local Phonebook is enabled by the setting on the system side, go to STEP 2.

 If Local Phone is disabled, the display changes as follows. In that case, select **2** **System** and go to STEP 3.

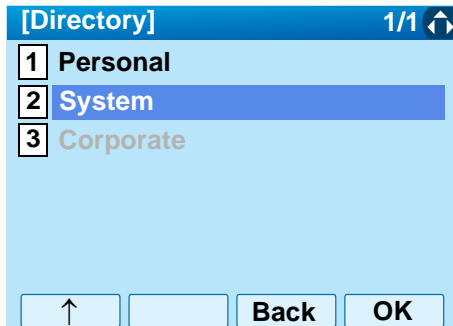



STEP 2: Press **Sys** soft key.




STEP 3: Enter a name and then press  (Enter) or **OK** soft key to perform a search.


Ex. To enter "NEC":

Press  key twice to enter "N".

Press  key four times to enter "E".

Press  key twice to enter "C".



**Note:** If ">>>" soft Key is pressed on the above screen, the following soft keys appear. Pressing  or **Eu-s/Eu-l** soft key shifts characters between uppercase and lowercase.


(Lower-case character)




(Upper-case character)





**Note:** To delete an entered character, press  or **Clr** soft key.

**Note:** To move the cursor one space to the right, press  key or "→" soft key once

STEP 4: A result of the search is displayed. Press  or **UP/DOWN** soft key to scroll the result.




STEP 5: When "NEC BNET" appears, press  (Enter),  (Right-cursor) or **OK** soft key.



STEP 6: The registered Phonebook data for “NEC BNET” appears. From this screen, you can make a call by going off-hook or pressing

 key.

**Name: NEC BNET**  
**Number: XXXXXXXX**  
**More Cnl >>>**

**Note** *More* soft key appears in Phonebook data screen when the number of characters (name) or digits (telephone number) are exceeding displayable limit (Up to 17 characters or digits can be displayed at a time). If the name or telephone number exceeds the displayable limit, press  or **More** soft key to display the last 17 characters/digits of the name/telephone number.

Example:

Name Suzuki Taro(JapanSumida) ← 24 characters

Number: 01234567890123456789 ← 20 digits

**Name : Suzuki Taro(Japan**  
**Number : 01234567890123456**  
**More Cnl >>>**

(Display area)

Name: Suzuki Taro(JapanSumida)

Number: 01234567890123456789

**Name :Taro(JapanSumida)**  
**Number :34567890123456789**  
**More Cnl >>>**

(Display area)

Name: Suzuki Taro(JapanSumida)

Number: 01234567890123456789




## • LOCAL PHONEBOOK

### To Add New Data


Example:


DT750 Station A registers "NEC" as new name and its Telephone Number.

STEP 1: Press **Pbook** soft key or  (Directory) key while Station is in Idle state.

4:26 PM TUE 13 APR 2007  
Pbook MIC DND

- OR -

Press  key to display the Menu screen.  
On the Menu screen, select **Directory**.

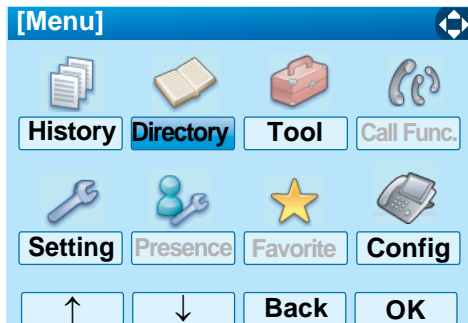

**Note:** Select an item on the menu screen in either of the following three ways.

- Touch a desired item on the display.
- Press an appropriate digit key.
- Highlight a desired item and then press


,  or **OK** soft key.

STEP 2: Press **Local** soft key.

Phonebook  
Local Sys Cnl

STEP 3: Local Phonebook screen appears. Press **Add** soft key.

Local Phonebook  
Srch Add Cnl

 
STEP 4: Enter a name and then press  (Enter) or **OK** soft key.


Ex. To enter "NEC":

Press **6** key twice to enter "N".

Press **3** key four times to enter "E".

Press **2** key twice to enter "C".




**Note:** If “>>>” soft Key is pressed on the above screen, the following soft keys appear. Pressing  or **Eu-s/Eu-l** soft key shifts characters between uppercase and lowercase.


*(Lower-case character)*



*(Upper-case character)*



**Note:** To delete an entered character, press  or **Clr** soft key.

**Note:** To move the cursor one space to the right, press  key or “→” soft key once

STEP 5: Enter the telephone number by using digit keys and press  (Enter) or **OK** soft key.



**Note:** To delete an entered digit, press  or **Clr** soft key.

STEP 6: “NEC” and its telephone number has been added into Local Phonebook. Two seconds later, the display returns to Local Phonebook screen.




### To Search For Name

  
The procedure shown below is available in Local Phonebook.


Example: To Find “NEC BNET”

STEP 1: While Local Phonebook screen is displayed, press **Srch** soft key. (If no data is registered in Local Phonebook, the message “Local phone book empty” appears.)




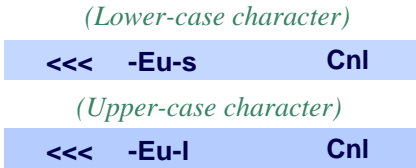
STEP 2: Name Entry screen appears.




STEP 3: Enter a name (in this example, “NEC” is entered) and then press  (Enter) or **OK** soft key. (If no appropriate data exists, the message “Entry not found!” appears.)




**Note:** If “>>>” soft Key is pressed on the above screen, the following soft keys appear. Pressing  or **Eu-s/Eu-l** soft key shifts characters between uppercase and lowercase.





**Note:** To delete an entered character, press  or **Clr** soft key.


**Note:** To move the cursor one space to the right, press  key or “→” soft key once

STEP 4: A result of the search is displayed. Press  or **UP/DOWN** soft key to scroll the result.




STEP 5: When “NEC BNET” appears, press  (Enter),  (Right-cursor) or **OK** soft key.



STEP 6: The registered data for “NEC BNET” appears. From this screen, you can make a call by going off-hook or pressing  key.




**Note** *More* soft key appears in Phonebook data screen when the number of characters (name) or digits (telephone number) are exceeding displayable limit (Up to 17 characters or digits can be displayed at a time). If the name or telephone number exceeds the displayable limit, press  or **More** soft key to display the last 17 characters/digits of the name/telephone number.

## To Edit An Entry

Example:


To Modify Name “Home” to “House” and Telephone Number “0123456789” to “0123456712”.

STEP 1: Press >>> soft key while the target Phonebook data is displayed.

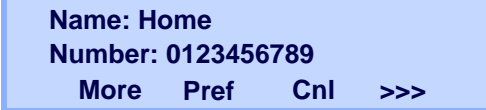

Name: Home  
Number: 0123456789  
More Pref Cnl >>>

STEP 2: Press **EDIT** soft key.

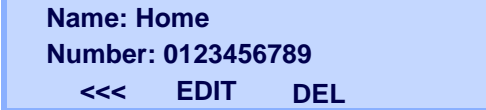


 
Name: Home  
Number: 0123456789  
<<< EDIT DEL

STEP 3: The following name edit screen appears.



Edit Name:  
Home█  
→ Clr OK >>>

STEP 4: Press  (Left-cursor) or **Clr** soft key two times to erase “me”.



STEP 5: Enter “use” by using digit keys. After the modification has completed, press (Enter) or **OK** soft key.

- Press **8** key twice to enter “u”.
- Press **7** key four times to enter “s”.
- Press **3** key twice to enter “e”.



**Note:** If “>>>” soft Key is pressed on the above screen, the following soft keys appear. Pressing or **Eu-s/Eu-l** soft key shifts characters between uppercase and lowercase.

*(Lower-case character)*



 
*(Upper-case character)*




**Note:** To delete an entered character, press or **Clr** soft key.

**Note:** To move the cursor one space to the right, press key or “→” soft key once


STEP 6: The following number edit screen appears.



 STEP 7: Press or **Clr** soft key twice to erase “89”.



 STEP 8: Enter “12” by pressing digit keys and then press (Enter) or **OK** soft key.



STEP 9: The data modification has completed. Two seconds later, the display returns to Local Phonebook screen.


Entry edited!

Entry deleted!

## To Delete A Record

- Press >>> soft key while the target Phonebook data is displayed.
- Press **DEL** soft key.

Name: NEC ABIKO  
Number: 0123456789  
More Prfi Cnl >>>

- Press  (Enter) or **OK** soft key to delete the currently displaying data.

Name: NEC ABIKO  
Delete this entry?  
OK Cnl

- The data deletion has completed. Two seconds later, the display returns to Name Entry screen.

## To Add A Prefix To Telephone Number


The procedure shown below is available in Local Phonebook.

Example:

To add a prefix “0184” in front of telephone number “0123456789”

- Press **Prfi** Soft Key while the target Phonebook data is displayed.

Name: Takahashi  
Number: 0123456789  
More Prfi Cnl >>>


- Enter a prefix (In this example, “0184” is entered) by using digit keys and press  (Enter) or **OK** Soft Key.

Prefix Number Input  
Number: 0184█  
Clr OK Cnl

**Note:** To delete an entered digit , press  or **Clr** soft key.

- The prefix is added in front of the telephone number. Once the prefix is added, **Prfe** Soft Key will disappear.

**Name: Takahashi**  
**Number: 01840123456789**  
**More                  Cnl**

**Note:** *More* soft key appears in Phonebook data screen when the number of characters (name) or digits (telephone number) are exceeding displayable limit (Up to 17 characters or digits can be displayed at a time). If the name or telephone number exceeds the displayable limit, press  or **More** soft key to display the last 17 characters/digits of the name/telephone number.

## Available Characters In Local Phonebook

The following tables show available characters in Local Phonebook.

### UPPERCASE CHARACTER

Digit Code	1	2	3	4	5	6	7	8	9	0	*	#
Character	.	A	D	G	J	M	P	T	W	SP	*	#
	,	B	E	H	K	N	Q	U	X	0		
	:	C	F	I	L	O	R	V	Y			
	!	À	È	Ì	5	Ñ	S	Ù	Z			
	?	Á	É	Í		Ö	ß	Ú	9			
	-	Â	Ê	Î		Ó	7	Û				
	+	Ã	Ë	Ï		Ô		Ü				
	%	Ä	3	4		Õ		8				
	&	Å				Ö						
	/	Æ				Œ						
	(	Ç				Ø						
	)	2				6						
	=											
	¿											
	¡											
1												

SP: Blank Space



## LOWERCASE CHARACTER

Digit Code	1	2	3	4	5	6	7	8	9	0	*	#
Character	.	a	d	g	j	m	p	t	w	SP	*	#
	,	b	e	h	k	n	q	u	x	0		
	:	c	f	i	l	o	r	v	y			
	!	à	è	ì	5	ñ	s	ù	z			
	?	á	é	í		ò	β	ú	9			
	:	â	ê	î		ó	7	û				
	\	ä	ë	ï		ô		ü				
	"	å	3	4		õ		8				
	@	æ				ö						
	1	ç				6						
	2											

SP: Blank Space

## CALL HISTORY

There are two types of Call History features. On the one hand, the history data is stored in the system memory. On the other hand, the history data is stored in the memory of the telephone (see [5.CALL HISTORY OPERATION](#)).

The following describes the operating procedures for the Call History feature which controlled by the system. This Call History feature can store up to 20 records. If exceeding 20 records, a record will be deleted in order of occurrence. Also, this Call History feature can store up to 32 digits of dial number and 16 characters of name information per record.

### To View Call History


- Press **iCall** soft key or **Call History** Feature key while the current time is displayed on LCD.




5:25 PM TUE 26 FEB 2008  
iCall MIC DND

- OR -

- Press **Menu** key to display the Menu screen. On the Menu screen, select **History** and then press **Enter** (Enter) or **OK** soft key. (or press **1** key.)

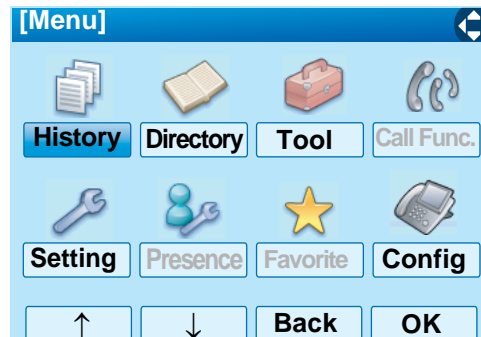


- The history data of the last received call is displayed.

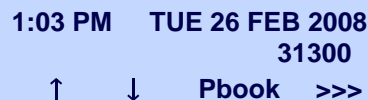

1:03 PM TUE 26 FEB 2008  
31300  
↑ ↓ Pbook >>>

**Note:** If no history data is saved, "NO LIST" will be displayed on LCD.

- Press **Enter** (Enter) or **↑/↓** soft key to display a desired history data.

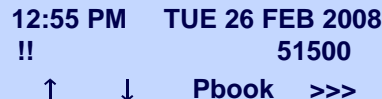


12:55 PM TUE 26 FEB 2008  
!! 51500  
↑ ↓ Pbook >>>

**Note:** Call History will display “!!” for an unanswered incoming call.

## To Make A Call From Call History

- Display the history data of the target party.

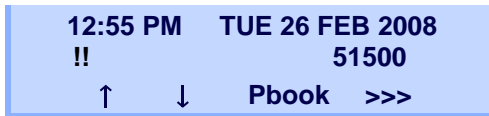


12:55 PM TUE 26 FEB 2008  
!! 51500  
↑ ↓ Pbook >>>

- Go off-hook or press  key to make a call to the displayed party.

**Note:** While the history data is displayed, the user cannot make a call by dialing a telephone number.

## To Make A Call With Prefix

- Press >>> soft key while the history data to which you want to add a prefix.

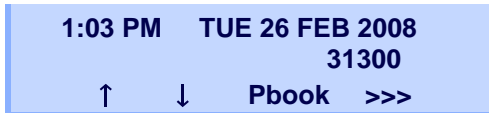


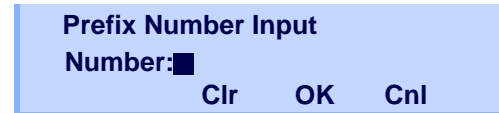
1:03 PM TUE 26 FEB 2008  
31300  
↑ ↓ Pbook >>>

- Press **Pref** soft key.



1:03 PM TUE 26 FEB 2008  
31300  
<<< Pref DEL END

- Enter a prefix by using the digit keys. In this example, “012345” is entered. After entering the prefix, press  (Enter) or **OK** soft key.




Prefix Number Input  
Number: [ ]  
Clr OK Cnl

**Note:** A maximum of 10 digits (0-9, \* and #) can be set as a prefix.


**Note:** When prefix is added, up to 32 digits including the prefix can be sent as dial number.


**Note:** To delete an entered character, press  or **Clr** soft key.

- If the call history data has name information, the name is displayed as follows:

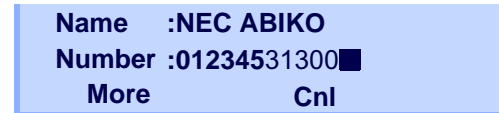


Name :NEC ABIKO  
Number :01234531300 [ ]  
More Cnl

**Note** *More* soft key appears in Phonebook data screen : when the number of characters (name) or digits (telephone number) are exceeding displayable limit (Up to 17 characters or digits can be displayed at a time). If the name or telephone number exceeds the displayable limit, press  or **More** soft key to display the last 17 characters/digits of the name/telephone number.

- Go off-hook or press  key to make a call to the displayed telephone number.

### To Delete A Specific Data

 - Press >>> soft key while the history data which you want to delete is displayed.



- Press **DEL** soft key.




**Note:** *If you want to exit from Call History, press **END** soft key.*

### To Add Call History Data To Local Phonebook

 **Note:** *The Call History data stored on the system can be added to Phonebook (controlled by the system) only. The data cannot be added to the Personal Directory (described in 4.DIRECTORY OPERATION) controlled by the telephone.*


- Press **Pbook** soft key or **Phonebook** Feature key while the history data of the target party.




**Note:** *Local Phonebook feature allows the user to register up to 100 records. If exceeding 100 records at this point, the error message shown below appears. Press **OK** soft key to go back to the above display.*



 - Enter a desired name and then press **OK** soft key. (In this example, "NEC ABIKO" is entered.)



**Note:** If name information is stored on the call history, the name is displayed.

**Note:** If ">>>" soft key is pressed on the above screen, the following soft keys appear. Pressing  or **Eu-s/Eu-l** soft key shifts characters between uppercase and lowercase.

*(Lower-case character)*



*(Upper-case character)*



- The telephone number stored on the call history is displayed. The telephone number can be changed if necessary. Press **OK** soft key to add the displayed data to Local Phonebook.



# 4. DIRECTORY OPERATION

---


This chapter explains about Personal Directory function of DT750. By using Personal Directory function, the user can make a call with simple operation.

Personal Directory function can register up to 500 entries. The user can add/view/edit/delete these entries.

**Note:** *A maximum of 500 entries can be registered in Directory.*

**Note:** *On the Menu, use  or  $\uparrow/\downarrow$  soft key to move the cursor up/down a line.*

**Note:** *The user can also navigate through the menu with touch panel operation.*

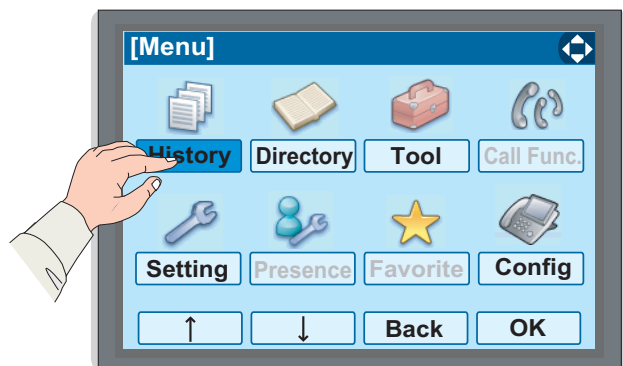


## TO ADD NEW DATA

STEP 1: While indicating the current time on LCD, press **(Menu)** key to open the **Menu** screen.


**OR**

Press **(Directory)** key. The **Directory** screen shown at STEP 3 can be directly displayed.

STEP 2: Select **Directory** and then press **(Enter)** or **OK** soft key. (or press **(2)** key.)

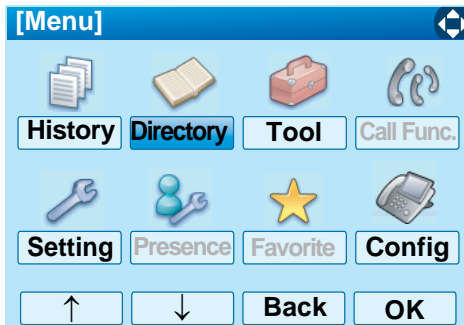


STEP 3: Select **(1) Personal** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(1)** key.)

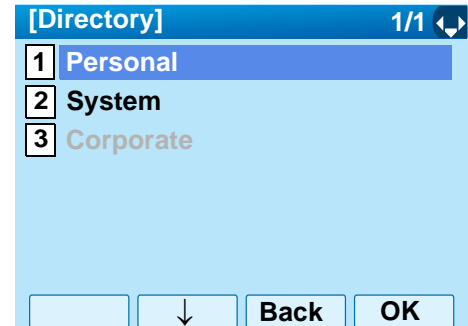

**Note:** When using Phonebook feature is disabled, this screen will not be displayed. In that case, skip this step.

STEP 4: Select **(2) Edit** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(2)** key.)

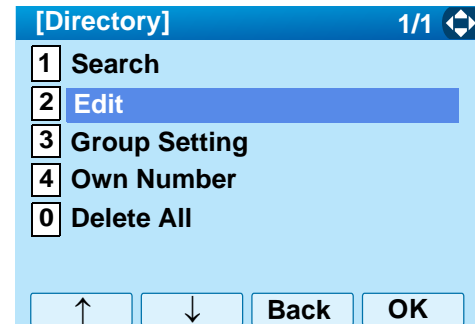

STEP 5: The following Edit screen appears. Select **(1) Name** and then press **(Enter)**,


 (Right-cursor) or **OK** soft key. (or press **1** key.)




[Edit] 1/2

- 1 Name:
- 2 Group:
- 3 Tel #1:
- 4 Tel #2:
- 5 Tel #3:
- 6 Tel #4:
- 7 Company Name:
- 8 Ring Tone:

Save Back OK

STEP 6: Enter a name to be registered in directory. After entering the name, press  (Enter) or **OK** soft key.

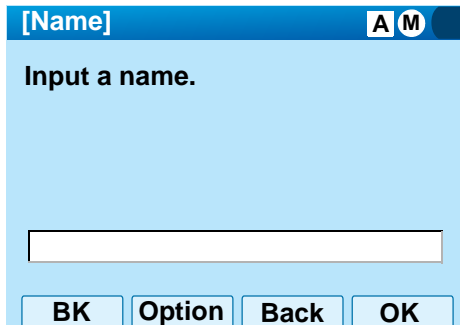



[Name] A M


Input a name.

BK Option Back OK

**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4.

**Note:** Up to 32 characters can be entered as a name.


STEP 7: The display goes back to the **Edit** screen. Select **2 Group** and then press  (Enter)  (Right-cursor) or **OK** soft key. (or press **2** key.)

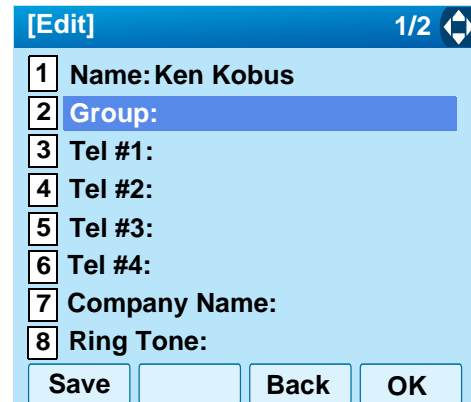

[Edit] 1/2

- 1 Name: Ken Kobus
- 2 Group:
- 3 Tel #1:
- 4 Tel #2:
- 5 Tel #3:
- 6 Tel #4:
- 7 Company Name:
- 8 Ring Tone:

Save Back OK


STEP 8: Press  (Enter) or **OK** soft key while a desired group is highlighted, or press a digit key corresponding to the desired group. In this example, **2 Colleagues** is selected.






**Note:** Each group name can be changed from the Group Setting screen. For details, see [TO CHANGE GROUP NAME](#).


STEP 9: Select **3 Tel #1** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **5** key.)

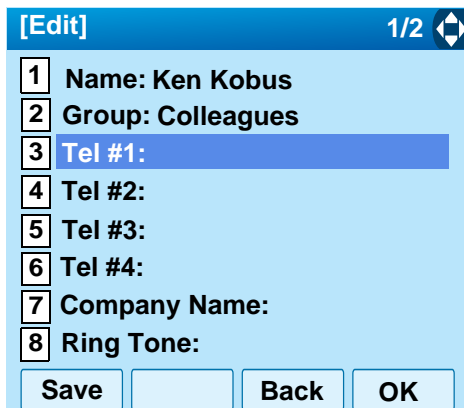

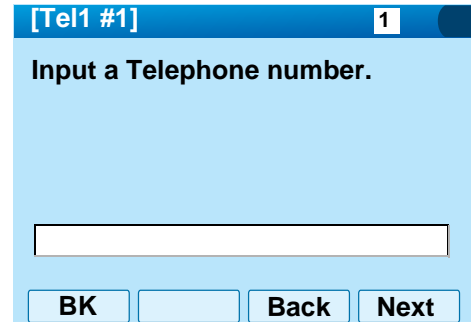


STEP 10: Enter a telephone number to be registered in directory. After entering the telephone number, press (Enter) or **Next** soft key.



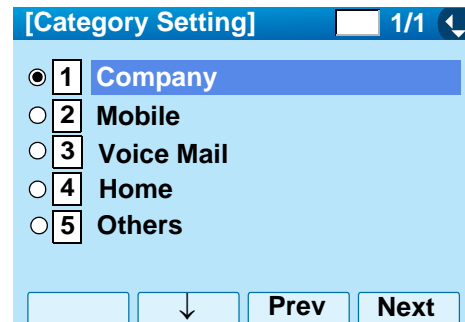

STEP 11: The **Category** screen is displayed. Select a Category to which the entered telephone number belongs. In this example, **1 Company** is selected.






Selectable categories are as follows:

Category	ICON
Company	
Mobile	
Voice Mail	<b>VM</b>
Home	
Other	<b>etc</b>

After a Category is selected, press  (Enter) or **Next** soft key.

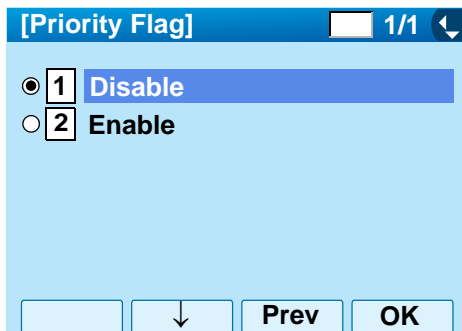
STEP 12: Select either **1 Disable** or **2 Enable** and then  (Enter) or **OK** soft key.




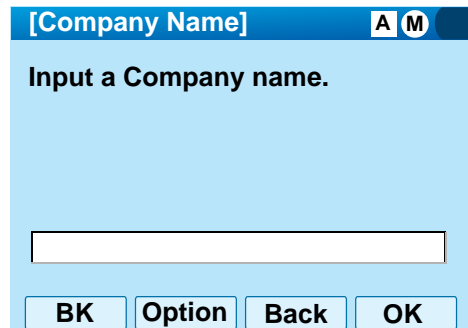
STEP 13: The display goes back to the **Edit** screen again. Select **7 Company Name** and then press  (Enter),  (Right-cursor) or **OK** soft

key. (or press **7** key.)

**Note:** A maximum of four telephone numbers can be set to an entry. If two or more telephone numbers are required to be set, set the remaining telephone numbers to Tel #2 - Tel #4.






STEP 14: Enter a company name, then press  (Enter) or **OK** soft key.



**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4.

**Note:** Up to 32 characters can be entered as a company name.


STEP 15: The display goes back to the **Edit** screen. Select **8 Ring Tone** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **8** key.)

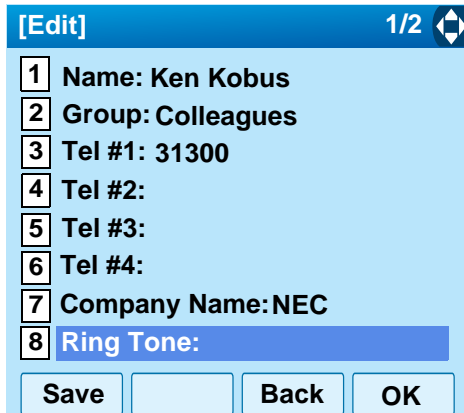

[Edit] 1/2

- 1 Name: Ken Kobus
- 2 Group: Colleagues
- 3 Tel #1: 31300
- 4 Tel #2:
- 5 Tel #3:
- 6 Tel #4:
- 7 Company Name: NEC
- 8 Ring Tone:

Save Back OK

STEP 16: Select a desired Ringing Tone and then press  (Enter) or **OK** soft key.



[Ring Tone] 1/3

- 1 Automatic
- 2 Default
- 3 Tone Type 1
- 4 Tone Type 2
- 5 Tone Type 3
- 6 Tone Type 4
- 7 Tone Type 5
- 8 Tone Type 6



Back OK


**Note:** For details on each ringer tone type, see [TO SET RINGER TONE](#) in chapter 3.


**Note:** The user can set ringer tone for calls routed to the specified name (calling party) here. Ringer Tone type can be set for “Name”, “Group” and “Telephone set”. The ringer Tone type set for “Name” has higher priority than the types set for “Group” and “Terminal set”.


**Note:** If the Ring Tone setting is not performed, “1 Automatic” is applied.

**Note:** When 1 Automatic or 2 Default is selected, the setting for “Group” or “Telephone Set” is applied.

STEP 17: The display goes back to the **Edit** screen. Select **9 Illumination** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **9** key.)

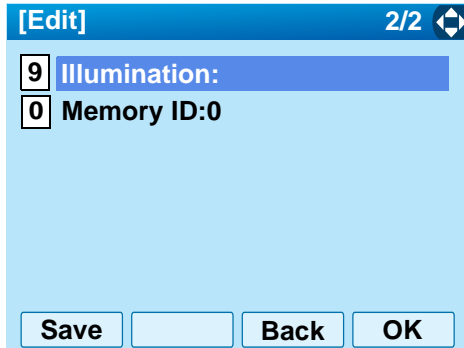

STEP 18: Press  (Enter) or **OK** soft key while a desired color of the Call Indication lamp is highlighted.

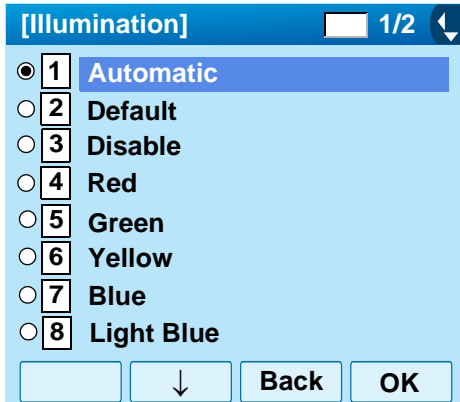


**Note:** The user can set illumination type for calls routed to the specified name (calling party) here. Illumination type can be set for "Name", "Group" and "Telephone set". The illumination type set for "Name" has higher priority than the types set for "Group" and "Terminal set".

**Note:** If the illumination setting is not performed, **1 Automatic** is applied.


**Note:** When **1 Automatic** or **2 Default** is selected, the setting for "Group" or "Telephone Set" is applied.

STEP 19: The display goes back to the **Edit** screen. Check the memory number assigned to the directory data being edited.

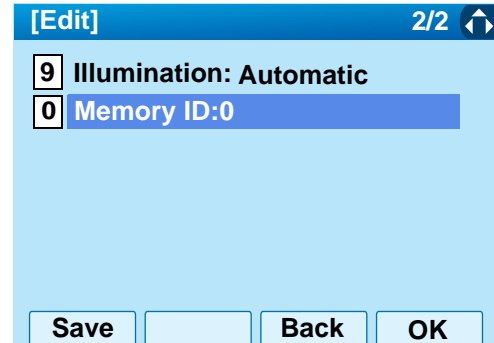

**Note:** A memory number is automatically set in ascending numeric order.

STEP 20: If you need to assign a memory number manually, select **0 Memory ID** on the screen of the previous step, and then enter a desired memory number (0 - 499).

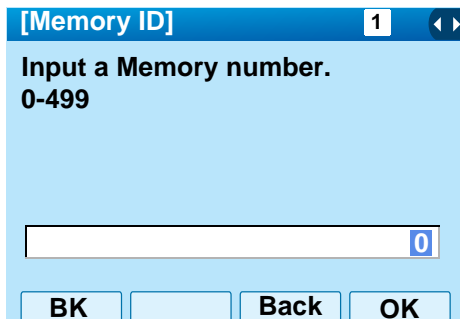

**Note:** *If a duplicate Memory ID is entered, “It will overwrite a data at memory number:XX” will appear. If you do not overwrite the Memory ID, press **Back** soft key. If you overwrite the Memory ID, press*




*or **Call** soft key.*

**Note:** *If a duplicate Memory ID is entered, “It will overwrite a data at memory number:XX” will appear. In that case, the existing data is overwritten with new. If you do not overwrite, press **Back** soft key.*



**Note:** *A maximum of 500 Memory IDs can be registered. If multiple telephone numbers are assigned to a Memory ID, the user may not register up to 500 Memory IDs.*


STEP 21: When the display goes back to the **Edit** screen, press **Save** soft key to save the assigned data.


STEP 22: “The data is registered at memory number: XX” is displayed. Press  (Enter) key or **OK** soft key. The display returns to the **Directory** screen.


## TO CHANGE GROUP NAME



STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).

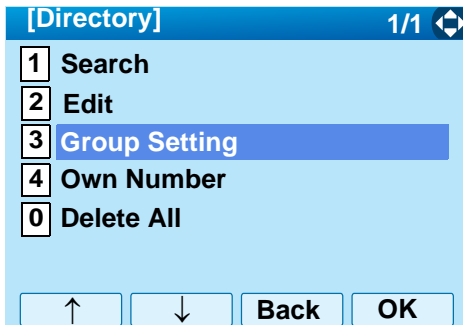STEP 2: On the **Directory** screen, select **3 Group Setting** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)

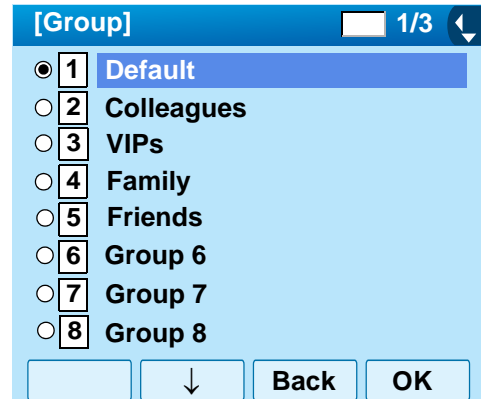


STEP 3: Select a group name to be changed and then press  (Enter) or **OK** soft key. In this example, **1 Default** is selected.



STEP 4: Select **1 Name** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



STEP 5: Enter a new group name and then press  (Enter) or **OK** soft key.

[Group Name Set] A M ◀ ▶

Input a group name.

Default

BK Option Back OK

**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4.

**Note:** Up to 32 characters can be entered as a group-name.



STEP 6: Display returns to the **Group** screen. Make sure that the new group name takes effect.


**Note:** The user can set ringer tone (→ select 2 Ring Tone) and illumination types (→ select 3 Illumination) for calls routed to the specified group here. Ringer tone and illumination types can be set for “Name”, “Group” and “Telephone set”. The ringer tone and illumination types set for “Name” have higher priority than the types set for Group and Telephone set. Also, the ringer tone and illumination types for Group have higher priority than the types set for Terminal set.



## TO FIND A REGISTERED DATA

- **To Search by Group Name**


STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).

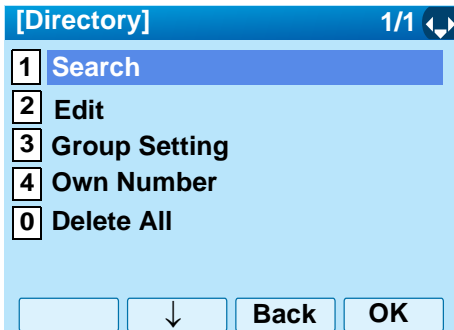
STEP 2: On the Directory screen, select **1 Search** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



STEP 3: Select **1 Group** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)




STEP 4: Select a target group and then press  (Enter) or **OK** soft key. In this example, **2 Colleagues** is selected.

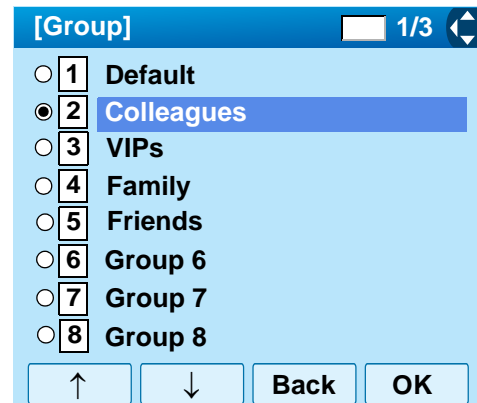

STEP 5: The names belonging to the selected group are displayed in alphabetical order.



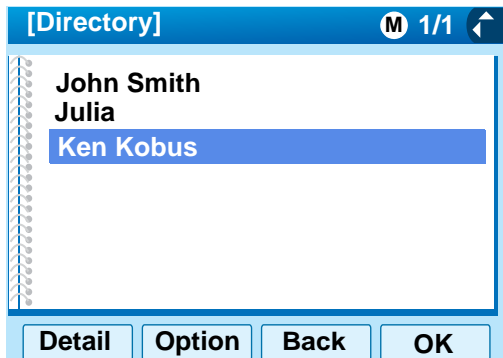


**Note:** To go back to the former screen, press  (**Left-cursor**) or **Back** soft key.

**Note:** When pressing  (**Enter**) or **Call** soft key while the above screen is displayed, a call is originated to the target party.

**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.



**Note:** If no entry is set to the selected group, "No data" is issued.

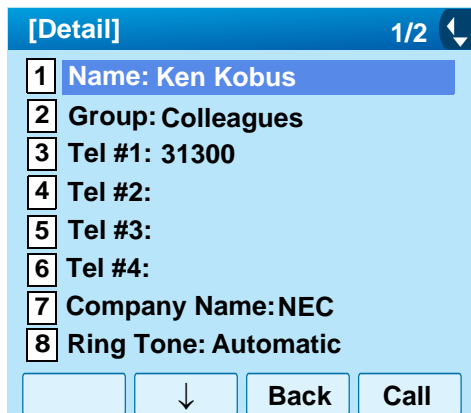STEP 6: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.





- **To Search by Name**


STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



STEP 3: Select **2 Name** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **2** key.)



STEP 4: Enter a target name. After entering the name, Press  (Enter) or **OK** soft key.

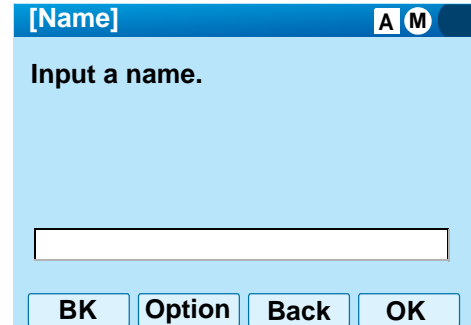

**Note:** A distinction is made between upper case and lower case characters. For example, "Ken Kobus" and "ken kobus" are distinguished as different character strings.

**Note:** A blank space is also distinguished while searching database for a name.


**Note:** Even if the name is not entered to the end, the user can search for a name.

**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.

**Note:** Up to 32 characters can be entered as a company name.

STEP 5: The list of applicable names will be displayed.

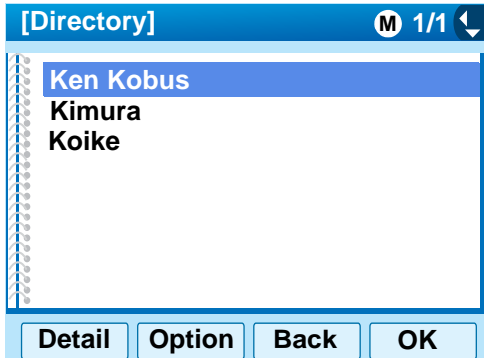


**Note:** To go back to the former screen, press  (Left-cursor) or **Back** soft key.

**Note:** When pressing  (**Enter**) or **Call** soft key while the above screen is displayed, a call is originated to the target party.



**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

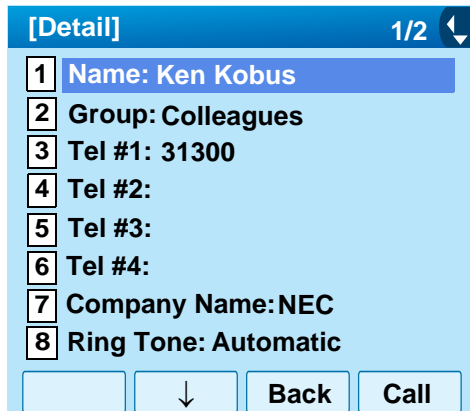STEP 6: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.






- **To Search by Telephone Number**


STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)



STEP 3: Select **3 Tel Number** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **3** key.)

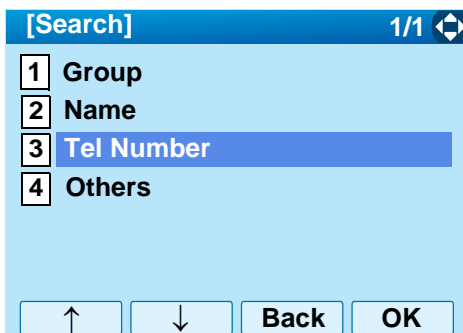

STEP 4: Enter a target telephone number. After entering the number, press  (Enter) or **OK** soft key.

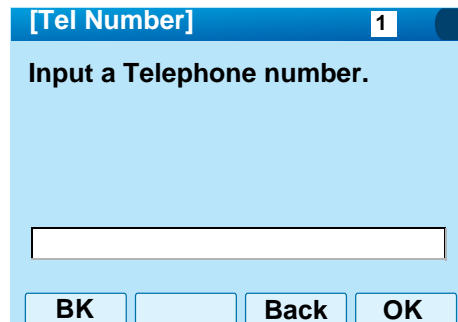

**Note:** *Even if the telephone number is not entered to the end, the user can search for a telephone number.*


STEP 5: The list of applicable names will be displayed.




**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.

STEP 6: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.

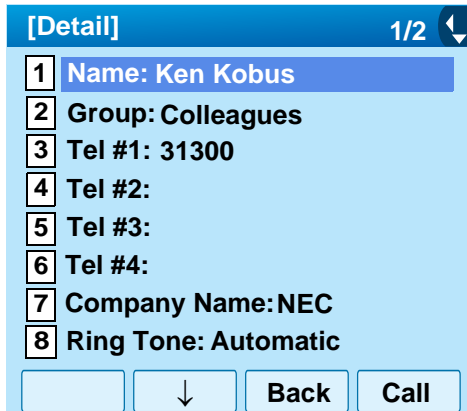

**Note:** To go back to the former screen, press  or **Back** soft key.

**Note:** When pressing  or **Call** soft key while the above screen is displayed, a call is originated to the target party.


- **To Search by Memory ID**

STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)




STEP 3: Select **4 Others** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **4** key.)

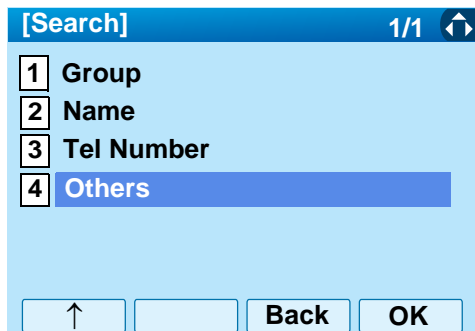

STEP 4: Select **1 Memory ID** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

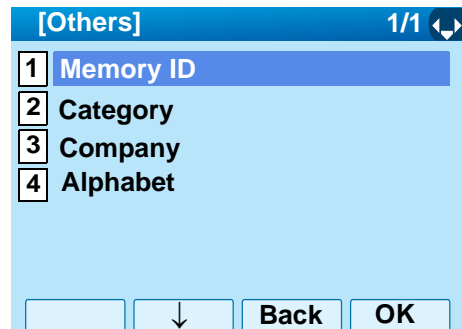


STEP 5: Enter a memory number (0-499) and then press (Enter) or **OK** soft key.

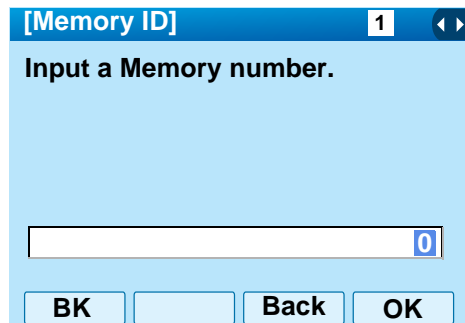

STEP 6: The name of appropriate party will be displayed.




**Note:** To go back to the former screen, press  or **Back** soft key.

**Note:** When pressing  or **Call** soft key while the above screen is displayed, a call is originated to the target party.

**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.

STEP 7: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.

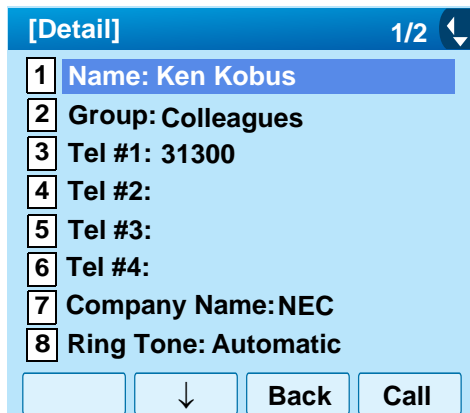


- **To Search by Category**

STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)




STEP 3: Select **4 Others** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **4** key.)

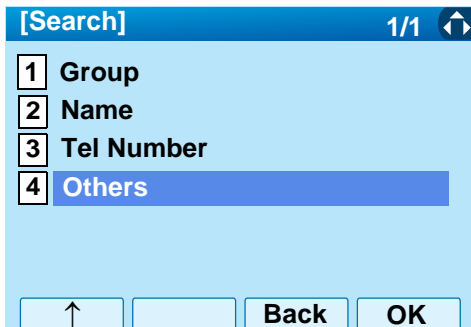

STEP 4: Select **2 Category** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **2** key.).

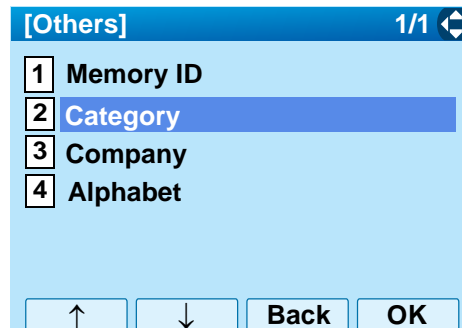

STEP 5: Select a desired category from the list and then press (Enter) or **OK** soft key.

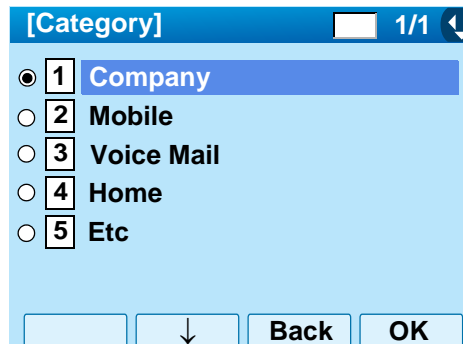

STEP 6: The list of applicable names will be displayed.






**Note:** To go back to the former screen, press  (**Left-cursor**) or **Back** soft key.

**Note:** When pressing  (**Enter**) or **Call** soft key while the above screen is displayed, a call is originated to the target party.

**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.


STEP 7: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.

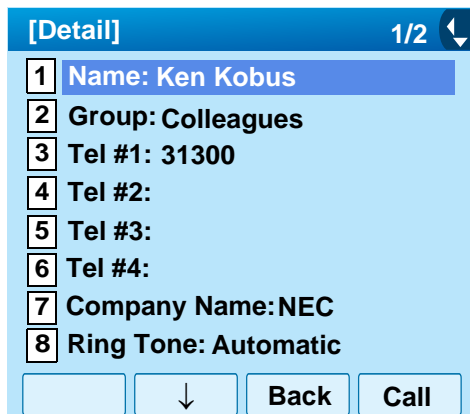


- **To Search by Company Name**

STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

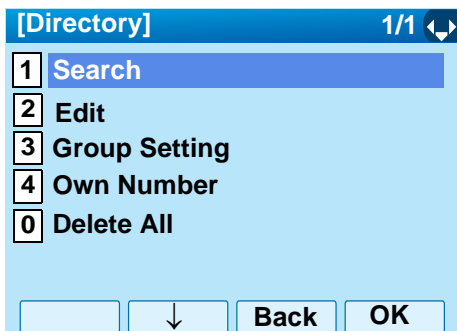


STEP 3: Select **4 Others** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **4** key.)

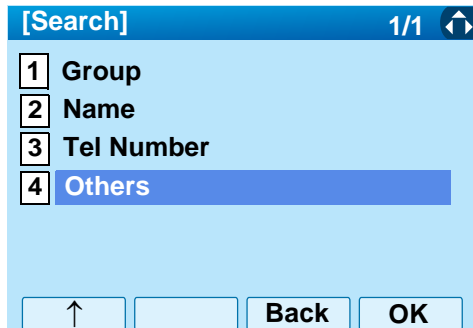

STEP 4: Select **3 Company** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **3** key.)

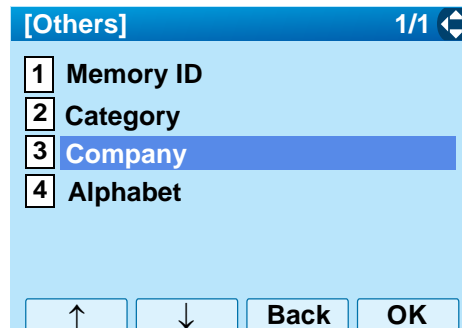

STEP 5: Enter a company name. After entering the name, Press (Enter) or **OK** soft key.

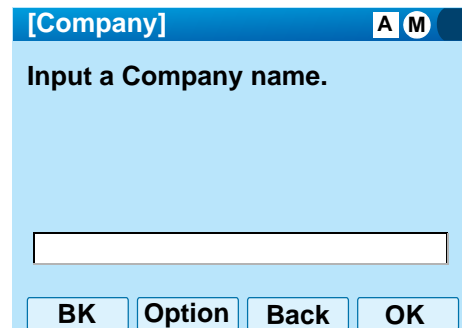

**Note:** A distinction is made between upper case and lower case characters. For example, "Ken Kobus" and "ken kobus" are distinguished as different character strings.

**Note:** A blank space is also distinguished while searching database for a name.

**Note:** Even if the name is not entered to the end, the user can search for a name.

**Note:** For details on character entry method, see [LAST NUMBER REDIAL](#) in chapter 4.

**Note:** Up to 32 characters can be entered as a company name.


STEP 6: The list of applicable names will be displayed.




**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.

STEP 7: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.

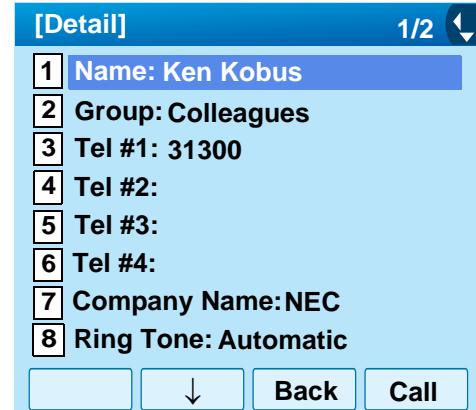



**Note:** To go back to the former screen, press  or **Back** soft key.



**Note:** When pressing  or **Call** soft key while the above screen is displayed, a call is originated to the target party.


- **To Search by Alphabet**



STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).


STEP 2: Select **1 Search** and then press  (Enter)  (Right-cursor) or **OK** soft key. (or press **1** key.)

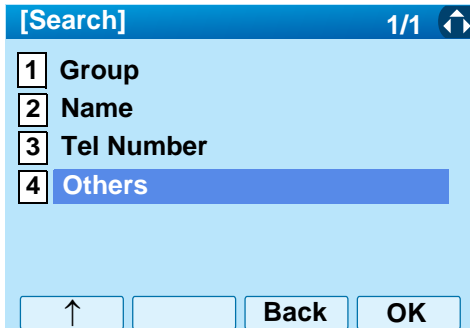


STEP 3: Select **4 Others** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **4** key.)



STEP 4: Select **4 Alphabet** and then press  (Enter)  (Right-cursor) or **OK** soft key. (or press **4** key.)

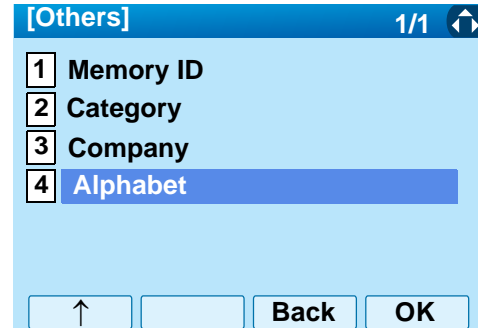

STEP 5: Select a **desired group of alphabets** and then press  (Enter) or **OK** soft key.



**Note:** Select \* **Others** to find names which begin with a character other than alphabet such as numerics or symbols.

STEP 6: The list of applicable names will be displayed.



**Note:** When pressing  or **Call** soft key, a call is originated to the selected party.

**Note:** If there is no entry corresponding to the entered name, "No data" is issued.

STEP 7: To display the detailed data for a specific name, press **Detail** soft key while the name is highlighted.



**Note:** To go back to the former screen, press  or **Back** soft key.

**Note:** When pressing  or **Call** soft key while the above screen is displayed, a call is originated to the target party.

## TO MAKE A CALL FROM DIRECTORY


### (CASE 1)

STEP 1: Display the detailed data for a target party (see [TO FIND A REGISTERED DATA](#)).




STEP 2: Select a target telephone number and then press (Enter), (Right-cursor) or **OK** soft key. (or press the appropriate digit key.)

In this example, select **3** Tel #1:31310 and then press (Enter), (Right-cursor) or **OK** soft key. (or press **3** key.)

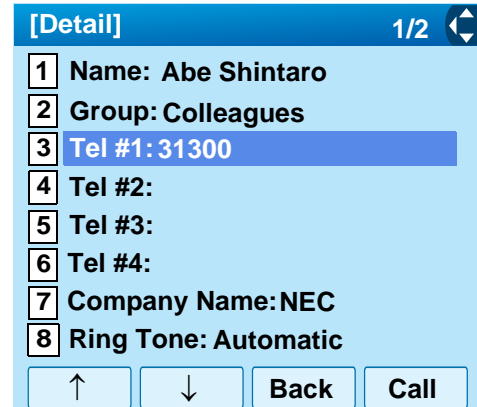

### (CASE 2)

STEP 1: Display the list of applicable names and then select a target name (see [TO FIND A REGISTERED DATA](#)).

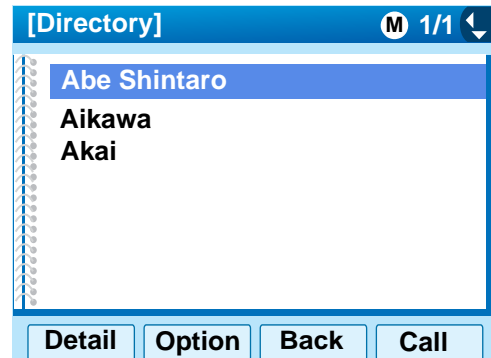

STEP 2: Press (Enter) key or **Call** soft key to make a call to the displayed party.

**Note:** *If multiple telephone numbers are registered to a target party, a call is made to the first priority telephone number.*


## TO ADD PREFIX TO NUMBER

- **To Set Prefix**


When making a call, a prefix can be added to telephone numbers to be dialed. Prefixes need to be set in advance.

STEP 1: While indicating the current time on LCD, press **(Menu)** Key to open the **Menu** screen.


STEP 2: On the Menu screen, select **[5] Setting** and then press **(Enter)** or **OK** soft key. (or press **(5)** key.)

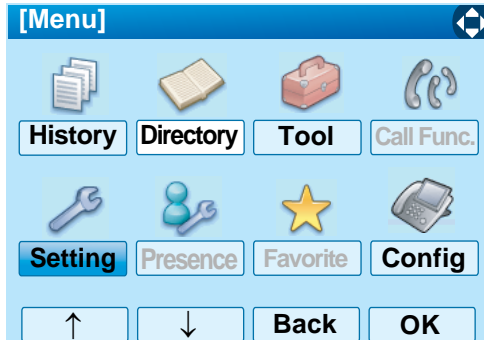

STEP 3: Select **[1] User Setting** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(1)** key.)

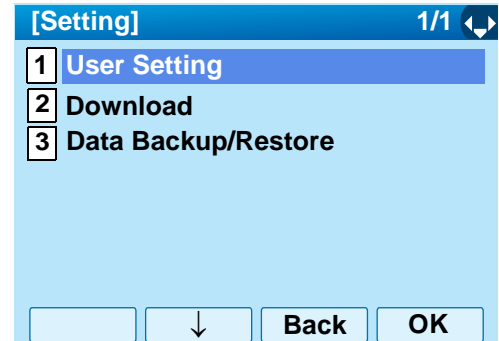

STEP 4: Select **[2] Talk** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(2)** key.)

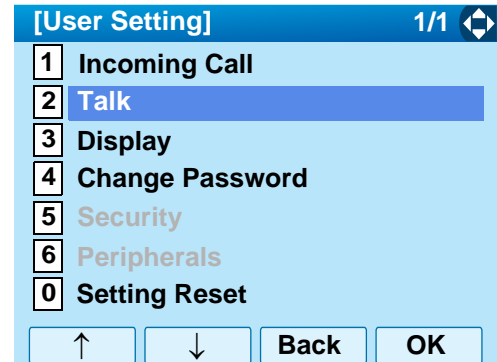


STEP 5: Select **[5] Prefix** and then press **(Enter)**, **(Right-cursor)** or **OK** soft key. (or press **(5)** key.)






STEP 6: Select **1 Prefix 1** and then press (Enter), (Right-cursor) or **OK** soft key. (or press **1** key.)

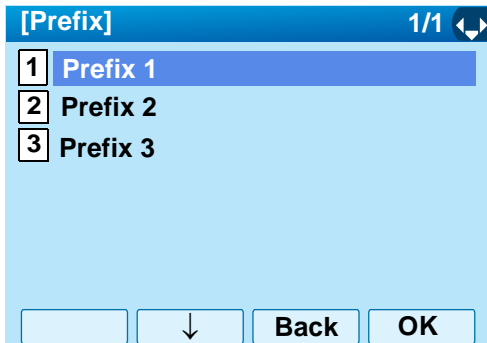

STEP 7: Enter a prefix by using the digit keys. After entering the prefix, press (Enter) or **OK** soft key.

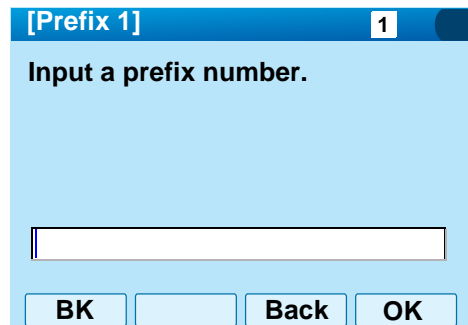


STEP 8: The display goes back the Prefix screen at STEP 5. If multiple prefixes need to be set, repeat STEP 5 and STEP 6. In that case, select **2 Prefix 2** and **3 Prefix 3**.



**Note:** A maximum of 10 digits (0-9, \* and #) can be set as a prefix.


**Note:** When prefix is added, up to 32 digits including the prefix can be sent as dial number.


- **To Add Prefix When Making A Call**

STEP 1: Display the list of applicable names (see [TO FIND A REGISTERED DATA](#)). Select a target name by pressing  (Up/Down-cursor) key and then press **Option** soft key.



STEP 2: Select **1 Prefix** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

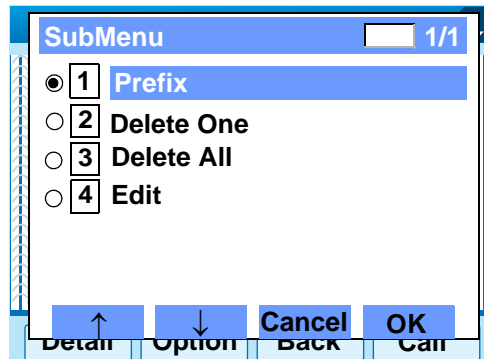

STEP 3: Predetermined prefixes are displayed. Select a prefix and then press  (Enter) or **OK** soft key to make a call.




## TO EDIT DIRECTORY DATA

STEP 1: Display the list of applicable names (see [TO FIND A REGISTERED DATA](#)).

Select a name which needs to be modified and then press **Menu** key or **Option** soft key.



STEP 2: Select **4 Edit** and then press **Enter** (Right-cursor) or **OK** soft key. (or press **4** key.)

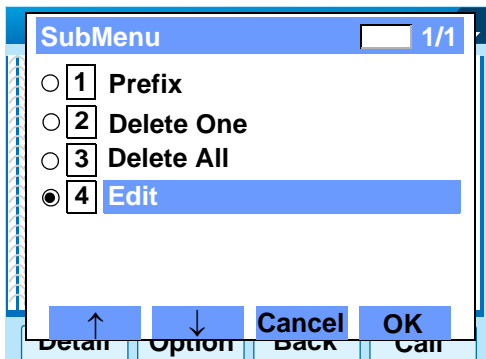



STEP 3: On the Edit screen, the detailed data for the selected name is displayed. Modify the necessary data by referring to [TO ADD NEW DATA](#). After the data modification is complete, press **Save** soft key on the Edit screen.




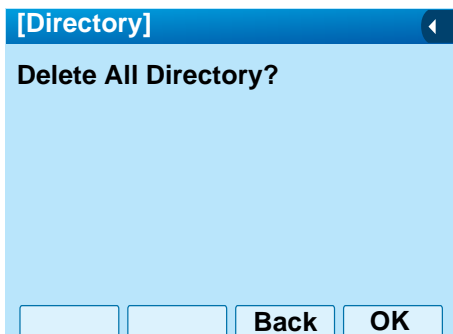
## TO DELETE ALL DATA

STEP 1: Open the **Directory** screen (see [TO ADD NEW DATA](#)).

STEP 2: Select **0 Delete All** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **0** key.)




STEP 3: To delete all the registered data, press  (Enter) or **OK** soft key to delete all the data.



**Note:** To cancel the data deletion, press  or **Back** soft key.

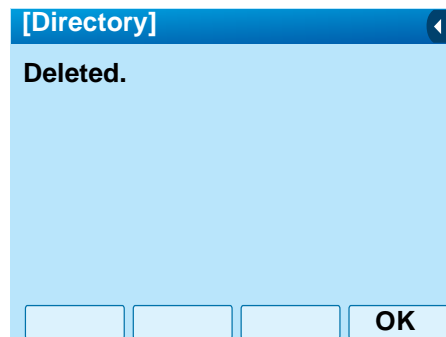

STEP 4: After all the directory data is deleted, the display changes as follows:





STEP 5: Press  (Enter) or **OK** soft key.


## TO DELETE A SPECIFIC DATA


STEP 1: Display the list of applicable names (see [TO FIND A REGISTERED DATA](#)).


On the following screen, select a name to be deleted by pressing  (Up/Down-cursor) key and then press  key or **Option** soft key.



STEP 2: The following Sub Menu is displayed. Select **2 Delete One** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **2** key.)

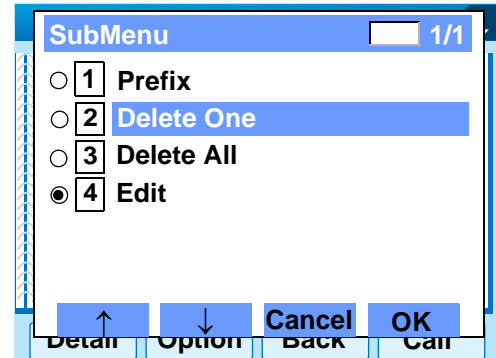


STEP 3: The following confirmation message appears. Press  (Enter) or **OK** soft key to delete the appropriate directory data.

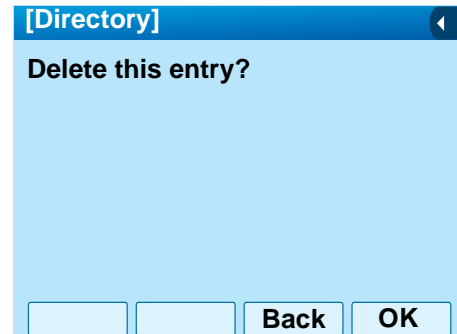

**Note:** To cancel the data deletion, press  or **Back** soft key.

STEP 4: After the appropriate directory data is delet-

ed, the display changes as follows:

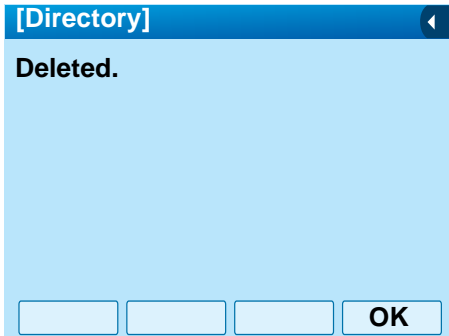

STEP 5: Press  (Enter) or **OK** soft key.

# 5. CALL HISTORY OPERATION

---


This chapter explains about Call History feature of DT750. By using Call History, the user can make a call with simple operation.

Call History feature allows the telephone to register up to 50 records into its memory. If exceeding 50 records, a record will be deleted in order of occurrence.

**Note:** *The Call History data which stored in the memory of each telephone cannot be added to Phonebook (both System Phonebook and Local Phonebook) controlled by the system.*

**Note:** *On the Menu, use  or  $\uparrow/\downarrow$  soft key to move the cursor up/down a line.*


**Note:** *The user can also navigate through the menu with touch panel operation.*

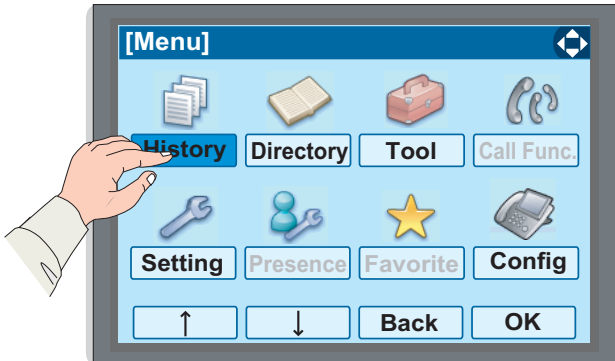

## TO VIEW CALL HISTORY


STEP 1: While indicating the current time on LCD, press **Menu** key to open the **Menu** screen.

STEP 2: Select **History** and then press **Enter** or **OK** soft key. (or press **1** key.)

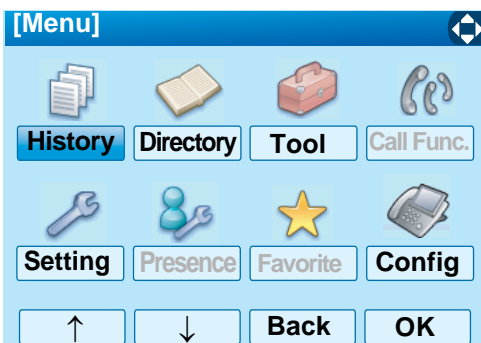

STEP 3: Select a kind of calls and then press **Enter** or **OK** soft key. In this example, **1 Missed** is selected.

Item	Description
Missed	Display the history of missed calls.
Outgoing	Display the history of outgoing calls.
Incoming	Display the history of incoming calls.

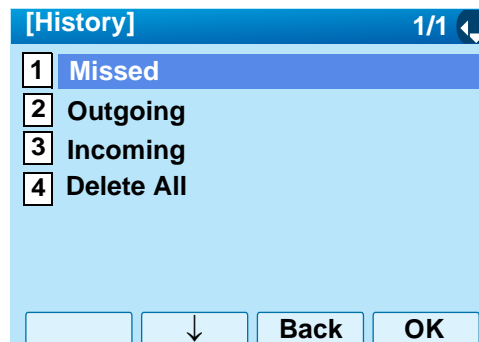

STEP 4: The history data of the last received call is displayed.



**Note:** If two or more records exist, use **Enter** or **↑/↓** soft key to display the next/former records.

**Note:** If no history data is saved, "No data" will be displayed on LCD.


**Note:** To go back to former menu (STEP 3), press **Enter** or **Back** soft key.




## TO MAKE A CALL FROM CALL HISTORY

### (CASE 1)

STEP 1: Display the call history data of the target telephone number (see [TO VIEW CALL HISTORY](#)). The following is an example when the history data of a missed call is displayed.

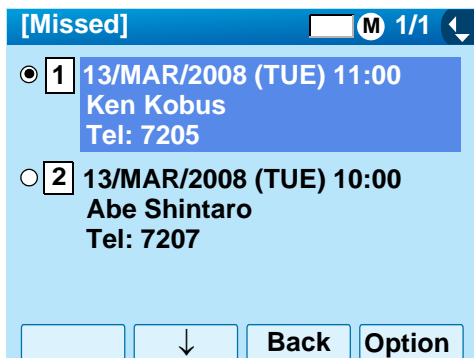

STEP 2: Press  (Enter) key while displaying the history data for the target telephone number on LCD.


**Note:** While the history data is displayed, the user cannot make a call by dialing a telephone number.


### (CASE 2)



STEP 1: Display the call history data of the target telephone number (see [TO VIEW CALL HISTORY](#)). The following is an example when the

history data of a missed call is displayed.

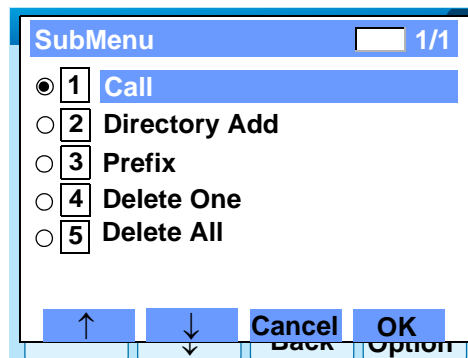

STEP 2: On the above screen, press  key or **Option** soft key to display the following Sub Menu.




STEP 3: Select **1 Call** and then press  (Enter),  (Right-cursor) or **OK** soft key. (or press **1** key.)

**Note:** *When making a call from Call History, a prefix can be added to the dial number. In that case, select **3 Prefix** on the SubMenu (indicated at STEP 2 of CASE 2) to display the Prefix screen. On the Prefix screen, choose a prefix to be added to the dial number. Also, prefixes need to be set in advance. For details on setting of prefix, see [TO ADD PREFIX TO NUMBER](#) in Chapter 6 Directory Operation.*


## TO ADD CALL HISTORY DATA TO DIRECTORY

STEP 1: Display the call history data of the target telephone number (see [TO VIEW CALL HISTORY](#)). The following is an example when the history data of a missed call is displayed.

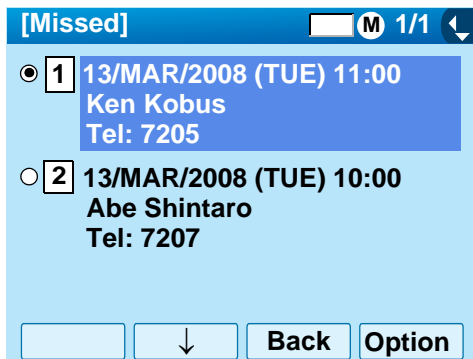


Press **Menu** key or **Option** soft key while displaying the call history data for the target telephone number.


STEP 2: The following Sub Menu is displayed. Select **2 Directory Add** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

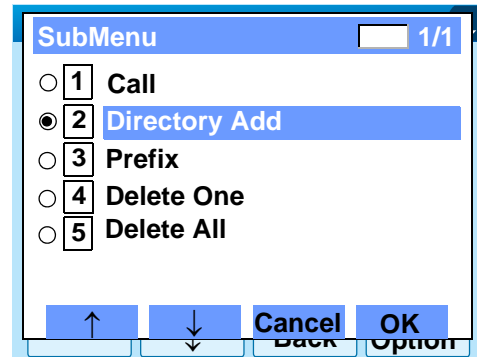

STEP 3: Select **1 New** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **1** key.)

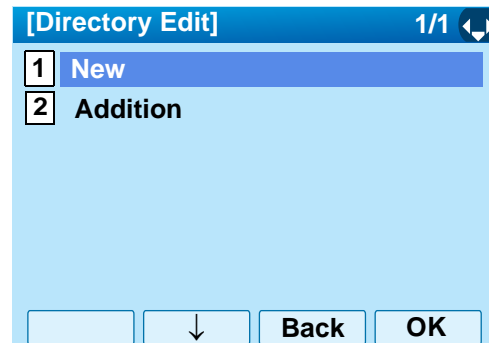


STEP 4: Select a category (in this example, **1 Company** is selected) and then press **Enter** or **Next** soft Key.

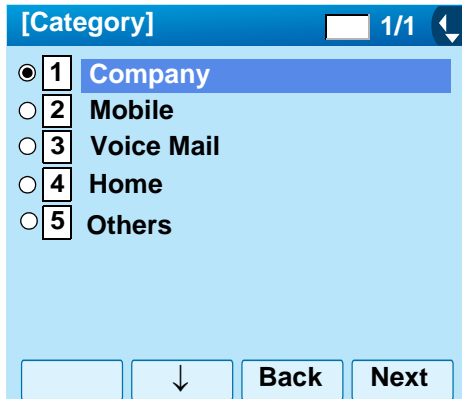

Selectable categories are as follows:

Category	ICON
Company	
Mobile	
Voice Mail	
Home	
Others	<b>etc</b>

STEP 5: Select either **1 Disable** or **2 Enable** and then press (Enter) or **OK** soft key.

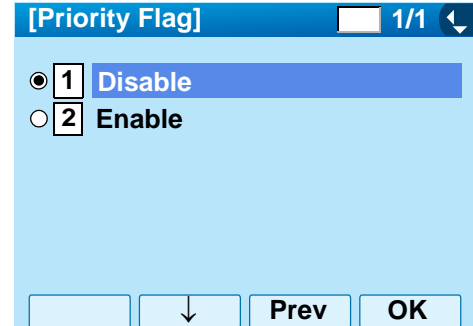

STEP 6: The following **Edit** screen is displayed.

See “**TO ADD NEW DATA**” in Chapter 6 Directory Operation, and register detailed data (such as name, group, etc) to directory.




**Note:** *If the no corresponding data is stored in the directory, only the telephone number will be displayed as Tel #1.*

**Note:** *If the corresponding data has already stored in the directory, the detailed data (such as name group, etc.) is displayed.*


## TO EDIT DIRECTORY DATA FROM CALL HISTORY

STEP 1: Display the call history data of the target telephone number (see [TO VIEW CALL HISTORY](#)). The following is an example when the history data of a missed call is displayed.

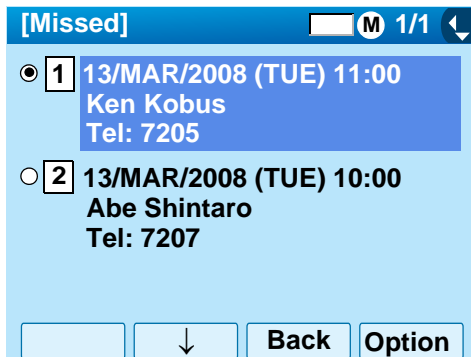


Press **Menu** key or **Option** soft key while displaying the call history data for the target telephone number.

STEP 2: The following Sub Menu is displayed. Select **2 Directory Add** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

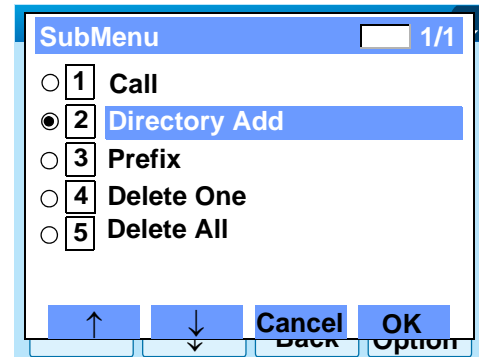



STEP 3: Select **2 Addition** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **2** key.)

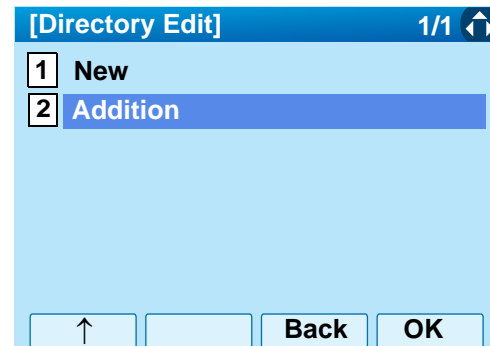

STEP 4: Select a search method and then press **Enter** or **OK** soft key. See [TO FIND A REGISTERED DATA](#) for the procedure of the searching method.

In this example, **1 Group** is selected as a search method.

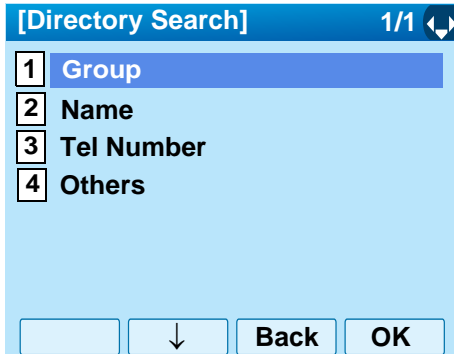


STEP 5: Select a group and then press  (Enter) or **OK** soft key. In this example, **2 Colleagues** is selected.




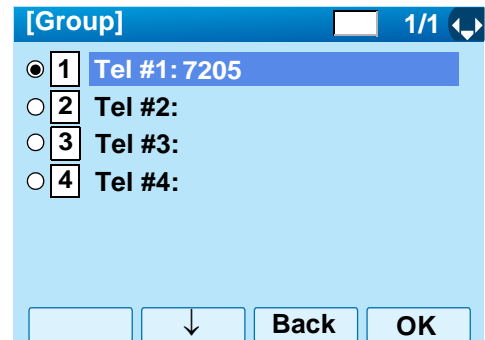
STEP 6: The names belonging to Colleagues are displayed as the following example.


played as the following example.

Select a name and then press  (Enter) or **OK** soft key.



STEP 7: Select a registration destination and then press  (Enter) or **OK** soft key.



STEP 8: The **Category Set** screen is displayed. Select a Category to which the telephone number belongs. Then, press  (Enter) or **OK**

soft key.

[Category] 1/1

- 1 Company
- 2 Mobile
- 3 Voice Mail
- 4 Home
- 5 Others

Buttons: [Soft Key], [Down Arrow], Back, Next

[Edit] 1/2

- 1 Name: Ken Kobus
- 2 Group: Colleagues
- 3 Tel #1: 7205
- 4 Tel #2:
- 5 Tel #3:
- 6 Tel #4:
- 7 Company Name: NEC
- 8 Ring Tone: Automatic

Buttons: Save, [Soft Key], Back, OK

STEP 9: Select either **1 Disable** or **2 Enable** and then press (Enter) or **OK** soft key.

[Priority Flag] 1/1

- 1 Disable
- 2 Enable

Buttons: [Soft Key], [Down Arrow], Prev, OK


STEP 10: The display moves to the **Edit** screen of Directory. The existing data is displayed on the **Edit** screen. See [TO EDIT DIRECTORY DATA](#) in chapter 6 Directory Operation, and edit the data as necessary.




## TO DELETE ALL DATA

STEP 1: While indicating the current time on LCD, press **Menu** Key to open the **Menu** screen.


STEP 2: Select **History** and then press **Enter** or **OK** soft key. (or press **1** key.)

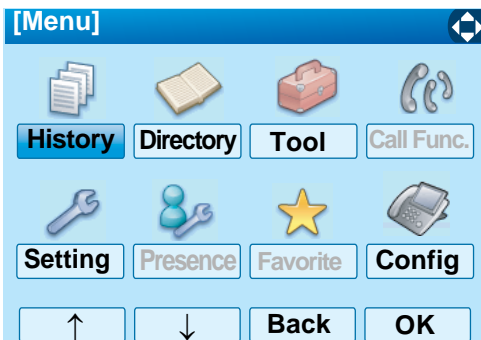

STEP 3: Select **4 Delete All** and then press **Enter** (**Enter**), **Right-cursor** or **OK** soft key. (or press **4** key.)

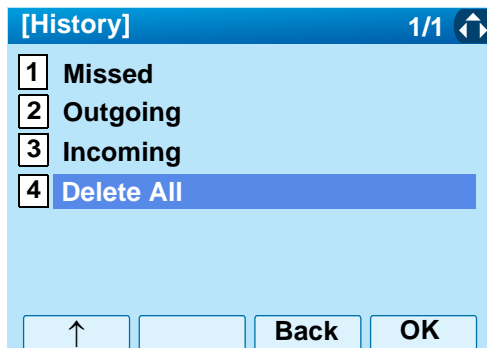


STEP 4: The following confirmation message appears. Press **Enter** or **OK** soft key to delete all the data.

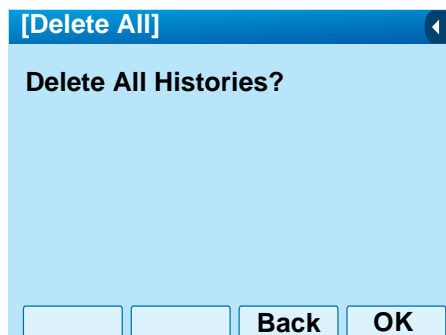

**Note:** To cancel the data deletion, press **Right-cursor** or **Back** soft key.


STEP 5: After all history data is deleted, the display changes as follows:

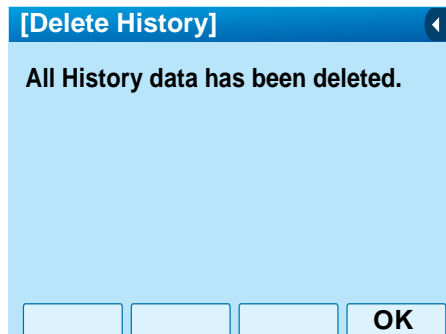

STEP 6: Press **Enter** or **OK** soft key.


## TO DELETE A SPECIFIC DATA

STEP 1: Display the call history data of the target telephone number referring to [TO VIEW CALL HISTORY](#). The following is an example when the history data of missed call is displayed.

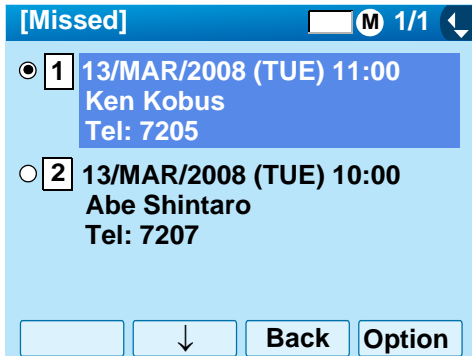


Press **Menu** key or **Option** soft key while displaying the call history data for the target telephone number.

STEP 2: The following Sub Menu is displayed. Select **4 Delete One** and then press **Enter**, **Right-cursor** or **OK** soft key. (or press **4** key.)

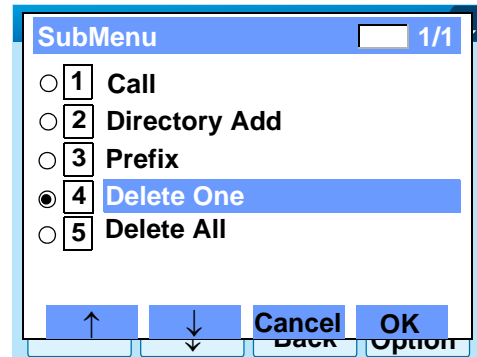


STEP 3: The following confirmation message appears. Press **Enter** or **OK** soft key to delete the appropriate history data.

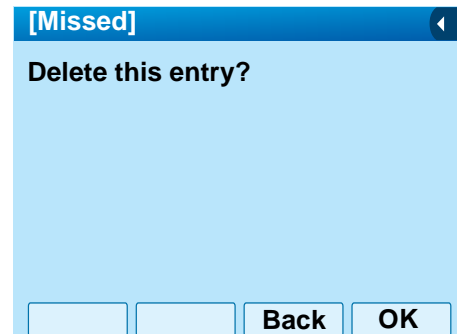

**Note:** To cancel the data deletion, press **Enter** or **Back** soft key.

**Note:** By selecting **5 Delete All**, all records of missed call can be deleted.

STEP 4: After the appropriate call history data is deleted, the display changes as follows:

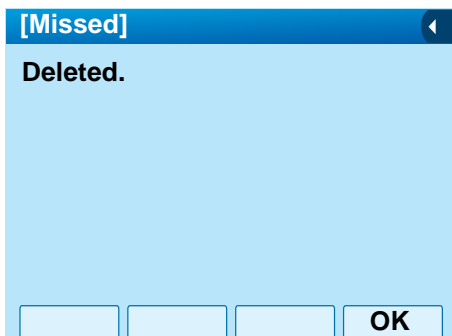


STEP 5: Press  (Enter) or **OK** soft key.

# 6. MENU LIST

---

## MENU LIST FOR DT750

Menu Item	Description
Menu	Press  key while indicating the current time on LCD.
History	To view call history data. Also, the user can add the history data to the directory.
Directory	To access directory feature. There are the following three types of directory features: Personal Directory, Phonebook and Corporate Directory. This chapter explains the menu list for Personal Directory feature.
Tool	Uses when accessing external XML server. <u>For details, please contact the system administrator.</u>
Call Function	Not used.
Setting	To make the user setting of DT750.
Presence	Not used.
Favorite	Not used.
Config	To make the configuration setting of DT750. <u>For details, please contact the system administrator.</u>

## Menu List For **History**

Menu Item	Description	Default Value
1 History		
1 Missed	Displays the history of missed calls. The user can also make a call from this menu.	-
2 Outgoing	Displays the history of outgoing calls. The user can also make a call from this menu.	-
3 Incoming	Displays the history of incoming calls. The user can also make a call from this menu.	-
4 Delete All	Deletes all the history data.	-

SubMenu (Press **Menu** key or **Option** soft key while the history data is displayed)

Menu Item	Description	Default Value
SubMenu		
1 Call	Make a call to the currently displayed party.	-
2 Directory Add	Add the currently displayed history data to the personal directory.	-
1 New	Add call history data to the personal directory.	-
Category Set	Select Company, Mobile, Voice Mail, Home or Others.	Company
Priority Flag	Select either Enable or Disable.	Disable
Edit	Edit the directory data.	-
2 Addition	Edit the personal directory data from call history.	-
Directory Search	Search the personal directory.	-
Directory	Register the telephone number to the searched directory data.	-
3 Prefix	Add Prefix to the telephone number and then make a call.	-
4 Delete One	Delete a specific data.	-
5 Delete All	Delete all history data of a specific call type ("missed", "outgoing" or "incoming")	-

## Menu List For Directory

Menu Item		Description	Default Value
2 Directory		From <b>Menu</b> screen, select <b>2</b> Directory → <b>1</b> Personal.	-
1 Search		Search the personal directory.	-
1 Group		Select a group as a search condition.	-
2 Name		Enter the target name and then perform a search.	-
3 Tel Number		Enter the target telephone number and then perform a search.	-
4 Other		Perform a search by one of the following conditions.	-
1 Memory ID		Enter a memory number.	-
2 Category		Select a category.	-
3 Company		Enter a company name.	-
4 Alphabet		Select a group of alphabets.	-
2 Edit		Add a new data to the personal directory.	-
1 Name		Enter a name of the target party to be added to the directory.	-
2 Group		Select a group to which the target party belongs.	Default
3-6 Tel #1-Tel #4		Enter the telephone number.	-
Category Set		Select Company, Mobile, Voice Mail, Home or Others.	Company
Priority Flag		Select either Enable or Disable.	Disable
7 Company Name		Enter the company name of the target party.	-
8 Ring Tone		Select a ringer tone type per caller.	Automatic
9 Illumination		Select a illumination pattern (color) of the call indication lamp.	Automatic
0 Memory ID		Enter a memory number to be assigned to the target party.	-
3 Group Setting		Change a group name.	-
Group Setting		Select a desired group name to be changed.	-
1 Name		Enter a new group name.	-
2 Ring Tone		Select a ringer tone type per group.	Automatic
3 Illumination		Select a illumination pattern (color) of the call indication lamp.	Automatic
4 Own Number		Displays the number of the telephone itself.	-
0 Delete All		Delete all the registered directory data.	-

## Menu List For **Tool**

Menu Item		Description	Default Value
3 Tool			
	1 Service	Activate XML browser.	-
	2 IM	Not used.	-

## Menu List For **Setting**

Menu Item		Description	Default Value
5 Setting			
1	User Setting	Make the user setting of DT750.	
	1 Incoming Call	Settings for incoming call.	
	1 Ring Volume	Not used.	-
	2 Offhook Ring	Enable/disable Off-hook ringing.	Enable
	3 Headset Ring	Enable/disable the ringing of headset.	Disable
	4 Ring Tone	Select a ringer tone for external call and internal call.	-
	1 ExternalCall	Select a ringer tone for external call.	Automatic (Tone Type1)
	2 Internal Call	Select a ringer tone for internal call.	
	5 Illumination	Set the illumination pattern.	Automatic
	6 Headset Ring Volume	Not used.	-
	2 Talk	Settings for telephone conversation.	
	1 RTP Alarm	Enable/disable RTP alarm.	Automatic
	2 DTMF Tone	Enable/disable DTMF tone.	Automatic
	3 Key Touch Tone	Set key touch tone generated when the digit keys are pressed while the telephone is off-hook.	Automatic
	4 Hold Music	Select a Music on Hold to be heard by DT750 user.	Default
	5 Prefix	Register Prefix number.	-
	3 Display	Settings for LCD display.	-
	1 Time Format	Determines whether time is displayed with a 12-hour or 24-hour clock format.	Automatic (12-hour format)
	2 Local Volume	Determines whether or not to display the following volume levels: handset receiver volume, speaker volume, ringer tone volume and LCD contrast.	Automatic (Enable)



Menu Item		Description	Default Value
	3 Screen Server	Not used.	-
	4 Back Light	Set the brightness of the backlight.	Level 2
	5 Font Size	Change the displayed character size on the LCD.	Standard(16dot)
	6 Language	Select a language to be displayed on LCD.	Automatic
	7 Advanced	Setting for the following additional data.	-
	1 Wallpaper Select	Not used.	-
	2 Touch Panel	Enable/disable the touch panel operation.	Enable
	3 Shortcut Icon	Not used.	-
	4 Font Color	Not used.	-
	4 Change Password	Change the password to lock/unlock the telephone.	0000
	5 Security	Not used.	-
	6 Peripherals	Not used	-
	0 Setting Reset	Reset the telephone settings.	-
	2 Download	Set the data required for the file downloading.	-
	1 Download Files	Download the files for Music on Hold, ringer tone and	-
	1 Hold Music	Download a file for Music on Hold.	MOH.wav
	2 Ring Tone	Download files for ringer tones (Download 1 to 3).	-
	1 Download 1	Download a file for ringer tone (Download 1).	Melody1.wav
	2 Download2	Download a file for ringer tone (Download 2).	Melody2.wav
	3 Download 3	Download a file for ringer tone (Download 3).	Melody3.wav
	3 Directory	Download the directory files.	Directory.csv
	2 Download Address	Enter an IP address of the FTP/TFTP server.	0.0.0.0
	3 Protocol	Select a protocol of the server (either FTP or TFTP).	FTP
	4 FTP Settings	Set necessary data when using FTP service.	-
	1 User ID	Enter a user ID for downloading via FTP server.	-
	2 Password	Enter a password for downloading via FTP server.	-
	3 Folder	Specify the directory where the download file is stored.	-

Menu Item		Description	Default Value
	3 Data Backup/Restore	Set the data required for the file backup/restore.	-
	1 Data Backup	Specify the file name to be backed up.	PersonalData.gz
	2 Data Restore	Specify the file name to be restored.	PersonalData.gz
	3 Server Address	Enter an IP address of the FTP/TFTP server.	0.0.0.0
	4 Protocol	Select a protocol of the server (either FTP or TFTP).	FTP
	5 FTP Settings	Set necessary data when using FTP service.	-
	1 User ID	Enter a user ID for the data backup via FTP server.	-
	2 Password	Enter a password for data backup via FTP server.	-
	3 Folder	Specify the destination directory of FTP server.	-


# 7. ONLINE MONITORING

In Online Monitoring, users can see the following information on the terminal LCD.

- QoS information (RTP Packet Loss (per 5 sec.), Payload, CODEC)
- System information
- Ping

- **Conditions for activating "Online Monitoring Menu"**

- Press and hold **Help** key. Main screen of Online Monitoring will be displayed.
- To exit from Online Monitoring, press **Exit** key.
- When just pressing **Help** key, Help information will be displayed.

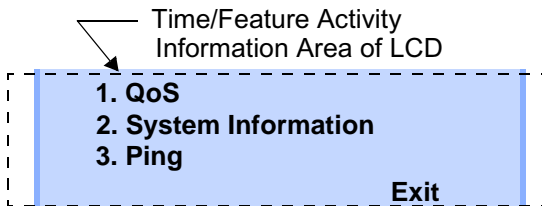

- **Key operation chart**

Press <b>Help</b> key for two seconds.		
[1]	QoS	
	[1]	Lost Packet
	[2]	Codec
	[3]	Payload
[2]	System Information	
	[1]	Network Settings
	[2]	SIP Settings
	[3]	Audio&Visual Settings
	[4]	Maintenance Settings
	[5]	Terminal Information
[3]	Ping	

- **QoS information (RTP Packet Loss (per 5 sec.), Payload, CODEC)**

Press **1** in main screen, and move to QoS information menu.

Following information can be confirmed in QoS information.

1. Last Packet : XXXX  
 2. Codec : G.XXXx  
 3. Payload : XXms  
 Prev

- **Lost Packet**

The number of RTP packet receiving loss in currentlast call will be displayed per **5** second. (Displayed in 8 digits. Max. value is 99999999.)

- **Codec**

- **Payload** (Payload size)

Display pattern of Codec and Payload is as follows.

Codec	Payload (msec.)
G. 711u	10, 20, 30, 40
G. 711A	10, 20, 30, 40
G. 729a	10, 20, 30, 40

- **System Information**

Press **2** in main screen, and move to System information menu.

Following information can be confirmed in System information.

1. Network Settings  
 2. SIP Settings  
 3. Audio&Visual Settings  
 Up Down Prev Exit

- **Network Settings**

- **SIP Settings**

- **Audio&Visual Settings**

- **Maintenance Settings**

- **Terminal Information**

**Note:** *For the detail of each Settings, refer to the Detail of System Information Menu.*

### To see Network Settings Information

Press **1** in System Information menu.

Each Network Setting can be confirmed by pressing **Up** and **Down** key.

DHCP Mode  
Disable/Enable  
Up Down Prev

IP Address  
XXX.XXX.XXX.XXX  
Up Down Prev

⋮

802.1X Status  
XXXXX  
Up Down Prev

**Note:** To go back to System Information menu, press *Prev* soft key.

### To see SIP Settings Information

Press **2** in System Information menu.

Each SIP Setting can be confirmed by pressing **Up** and **Down** key.

User ID  
XXXXX  
Up Down Prev

Terminal URI  
XXXXX  
Up Down Prev

⋮



Howler Tone  
Disable/Enable  
Up Down Prev

**Note:** To go back to System Information menu, press *Prev* soft key.


### To see Audio&Visual Settings Information

Press **3** in System Information menu.

Each Audio&Visual Setting can be confirmed by pressing **Up** and **Down** key.

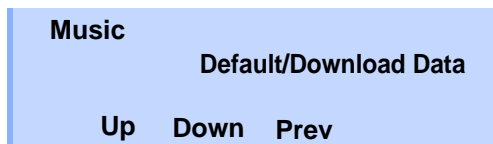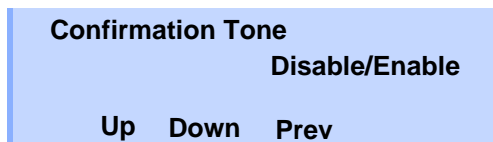

⋮

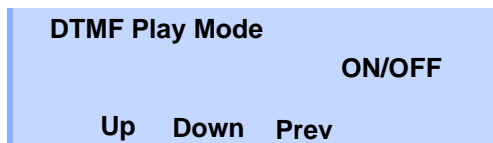


**Note:** *To go back to System Information menu, press **Prev** soft key.*

### To see Maintenance Settings Information

Press **4** in System Information menu.

Download address can be confirmed.

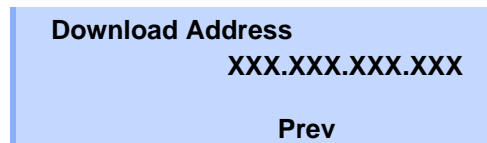

**Note:** *To go back to System Information menu, press **Prev** soft key.*

### To see Terminal Information

Press **5** in System Information menu.

Each terminal information can be confirmed by pressing **Up** and **Down** key.

```
Hardware Version
XXXXXXXXX
Up Down Prev
```

```
Mac Address
XX:XX:XX:XX:XX:XX
Up Down Prev
```

⋮

```
Side Option 2
XXXXXXXXX
Up Down Prev
```

**Note:** *To go back to System Information menu, press **Prev**.*

### Ping

#### To send Ping

Press **3** in main screen, and move to Ping menu.

Enter IP address of the server to send Ping, and press **OK** key.

```
PingAdr? 0. 0. 0. 0
Use '*' For .
BK Cancel OK
```

**Note:** *If Network Interface is not operated, following message will be displayed.*

```
Ping.. XX. XX. XX. XX
1.NG 2.NG 3.NG 4.NG Complete
Prev Retry
```

Ping will be sent to the server **4** times.

If **Retry** was selected, screen will back to the Ping menu.

```
Ping.. XX. XX. XX. XX
1.OK 2.OK 3.OK 4.OK Complete
Prev Retry
```

• **Detail of System Information Menu**

System Information Menu	Items
Network Settings	DHCP Mode IP Address <b>Note1</b> Default Gateway <b>Note1</b> Subnet Mask <b>Note1</b> DNS Address <b>Note1</b> VLAN Mode (for LAN port) VLAN ID (for LAN port) VLAN Priority (for LAN port) Speed & Duplex (for LAN port) PC Port VLAN Mode <b>Note2</b> PC Port VLAN ID <b>Note2</b> PC Port VLAN Priority <b>Note2</b> PC Port Speed & Duplex <b>Note2</b> PC Port Available EAPOL Forwarding CDP Mode ToS (RTP) ToS (SIP) Supplicant Mode EAP Method EAPOL VLAN Mode Account (MD5) 802.1X Status

System Information Menu	Items
SIP Settings	User ID Terminal URI Connecting Server 1st SIP Server <b>Note1</b> 2nd SIP Server <b>Note1</b> 3rd SIP Server <b>Note1</b> 4th SIP Server <b>Note1</b> Access Mode (to the SIP Server) Port for 1st SIP Server Port for 2nd SIP Server Port for 3rd SIP Server Port for 4th SIP Server Area ID (Country) Authentication Mode Retransmit Interval Keeping Call Howler Tone
Audio & Visual Settings	Confirmation Tone Music on hold Sidetone Volume Send Gain Receive Bias Receive Gain Ring(Internal Call) Ring(External Call) Volume Indication Language for time display
Maintenance Settings	Download Address for downloading the firmware



System Information Menu	Items
Terminal Information	Hardware Version MAC Address Firmware Version Bottom option Side Option 1 Side Option 2

**Note 1:** *“(DHCP)” is indicated on the display when the parameter is obtained from the DHCP server.  
(ex.) IP Address*

**IP Address(DHCP)**  
**XX:XX:XX:XX:XX:XX**

**Up   Down   Prev**

**Printed in Japan**  
**0803-001**

